

- 8. Idle speed control valve
- 9. Electronic control unit
- 10. Injector
- 11. Air mass meter
- 12. Oxygen sensor
- 13. Intake air temperature sensor
- 14. Coolant temperature sensor
- 15. Throttle switch
- 16. Throttle valve position sensor
- 29. Service connector


I: Earth on engine block

II: Earth on body

B = Black; BR = Brown; G = Green; GY = Grey;
L = Blue; LG = Light green; OR = Orange; P
= Pink; PU = Purple; R = Red; SB = Light
blue; W = White; Y = Yellow

Combination: X/Y = wire coloured X, marked with
a Y coloured stripe.

E 16i engine management system wiring diagram, except coupé and Florida/Station Wagon (part 2)

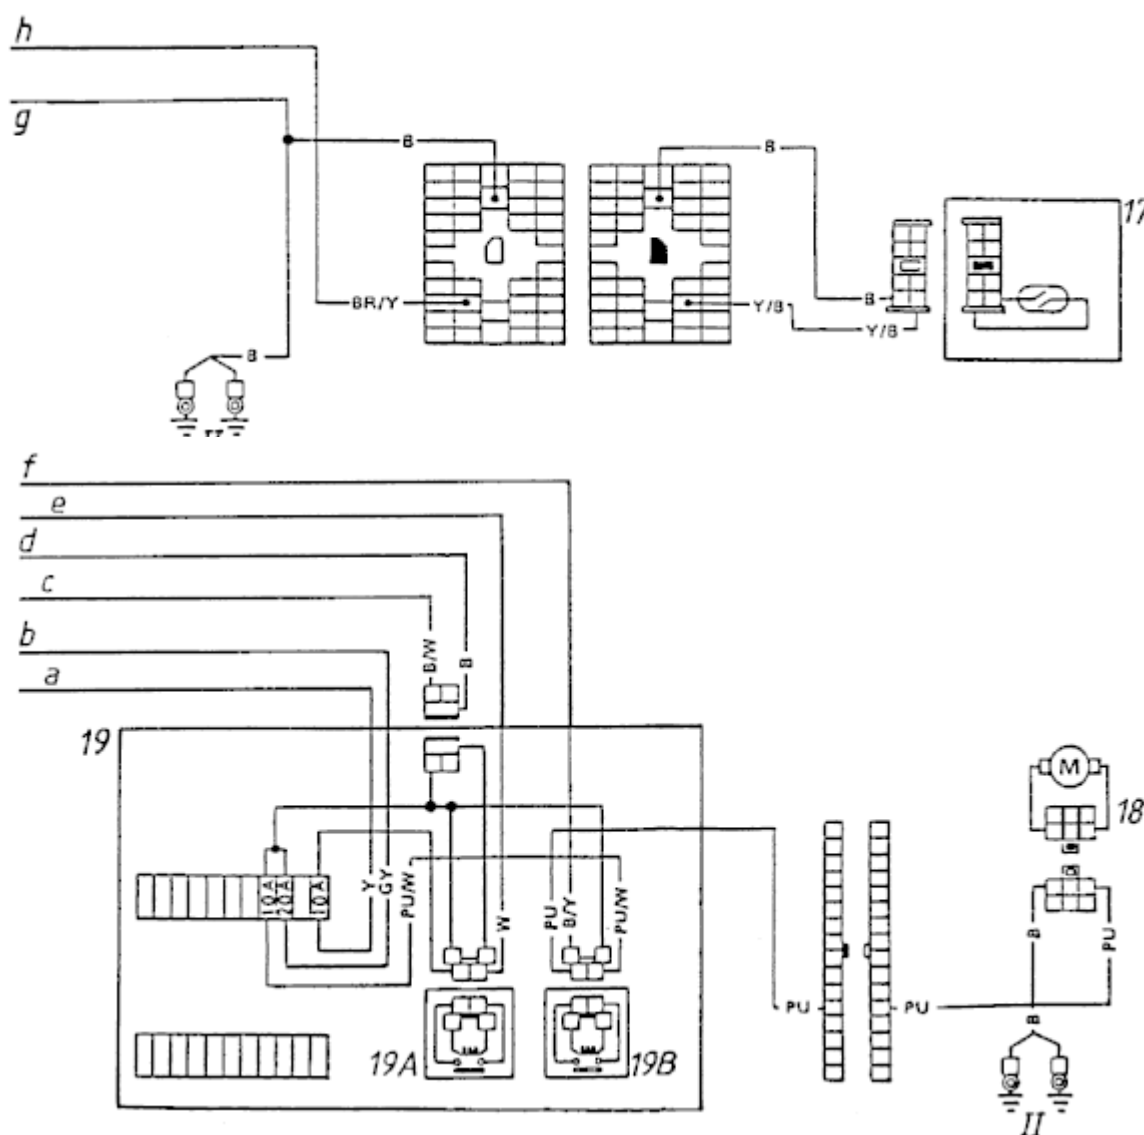


- 17. Fuse link holder
- 18. Injection system main relay
- 19. Mixture pre-heater relay
- 19A: Ignition relay
- 19B: Fuel pump relay

B = Black; BR = Brown; G = Green; GY = Grey; L = Blue; LG = Light green; OR = Orange; P = Pink; PU = Purple; R = Red; SB = Light blue; W = White; Y = Yellow

Combination: X/Y = wire coloured X, marked with a Y coloured stripe.

E 16i engine management system wiring diagram, except coupé and Florida/Station Wagon (part 3)

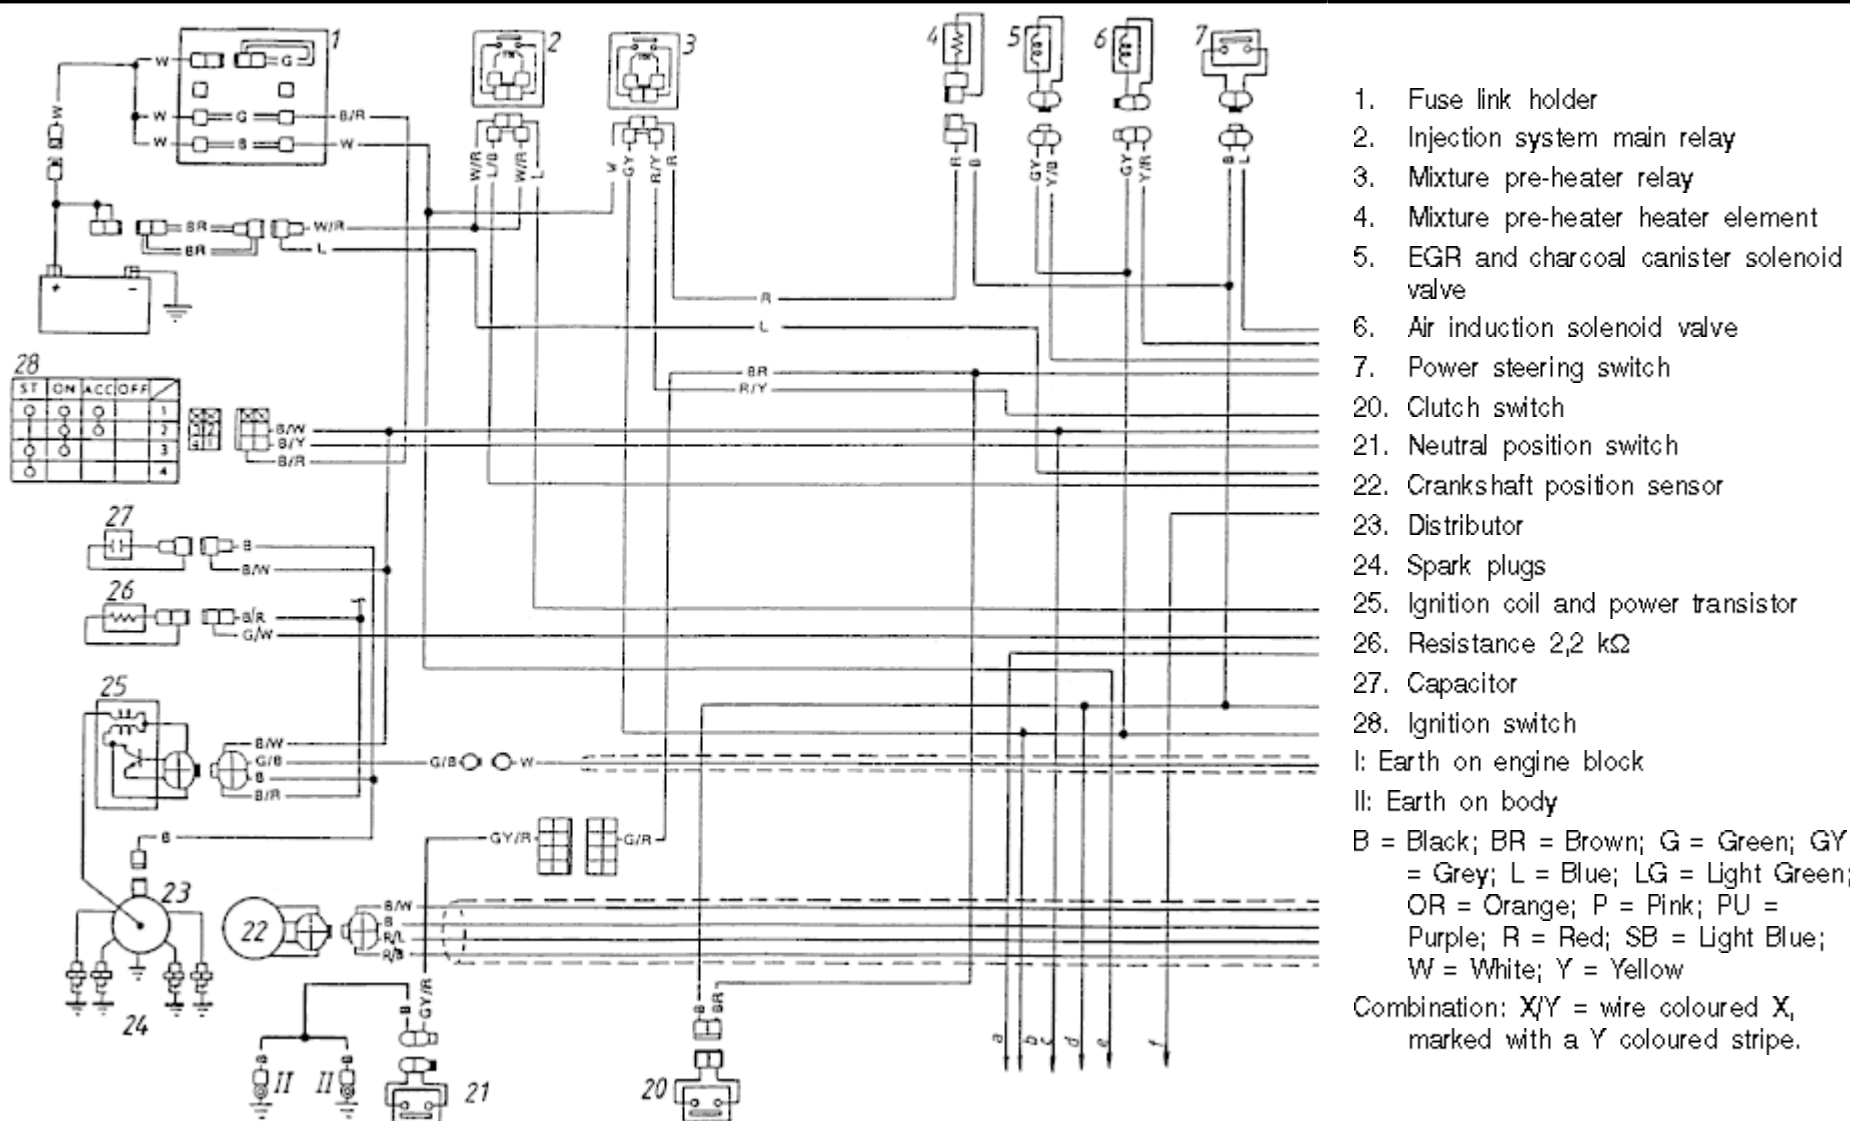

E 16i engine management system wiring diagram, for coupé and Florida/Station Wagon (part 1)