

DTC	P0351	IGNITION COIL "A" PRIMARY/SECONDARY CIRCUIT
DTC	P0352	IGNITION COIL "B" PRIMARY/SECONDARY CIRCUIT
DTC	P0353	IGNITION COIL "C" PRIMARY/SECONDARY CIRCUIT
DTC	P0354	IGNITION COIL "D" PRIMARY/SECONDARY CIRCUIT
DTC	P0355	IGNITION COIL "E" PRIMARY/SECONDARY CIRCUIT
DTC	P0356	IGNITION COIL "F" PRIMARY/SECONDARY CIRCUIT
DTC	P0357	IGNITION COIL "G" PRIMARY/SECONDARY CIRCUIT
DTC	P0358	IGNITION COIL "H" PRIMARY/SECONDARY CIRCUIT


CIRCUIT DESCRIPTION

HINT:

- These DTCs indicate a malfunction related to primary circuit.
- If DTC P0351 is displayed, check No.1 ignition coil with igniter circuit.
- If DTC P0352 is displayed, check No.2 ignition coil with igniter circuit.
- If DTC P0353 is displayed, check No.3 ignition coil with igniter circuit.
- If DTC P0354 is displayed, check No.4 ignition coil with igniter circuit.
- If DTC P0355 is displayed, check No.5 ignition coil with igniter circuit.
- If DTC P0356 is displayed, check No.6 ignition coil with igniter circuit.
- If DTC P0357 is displayed, check No.7 ignition coil with igniter circuit.
- If DTC P0358 is displayed, check No.8 ignition coil with igniter circuit.

A Direct Ignition System (DIS) has been adopted. The DIS improves the ignition timing accuracy, reduces high-voltage loss, and enhances the overall reliability of the ignition system by eliminating the distributor. The DIS is a 1-cylinder ignition system which ignites one cylinder with one ignition coil. In the 1-cylinder ignition system, the one spark plug is connected to the end of the secondary winding. High voltage generated in the secondary winding is applied directly to the spark plug. The spark of the spark plug passes from the center electrode to the ground electrode.

The ECM determines the ignition timing and outputs the ignition signals (IGT) for each cylinder. Based on the IGT signals, the power transistors in the igniter cut off the current to the primary coil in the ignition coil is supplied to the spark plug that is connected to the end of the secondary coil. At the same time, the igniter also sends an ignition confirmation signal (IGF) as a fail-safe measure to the ECM.

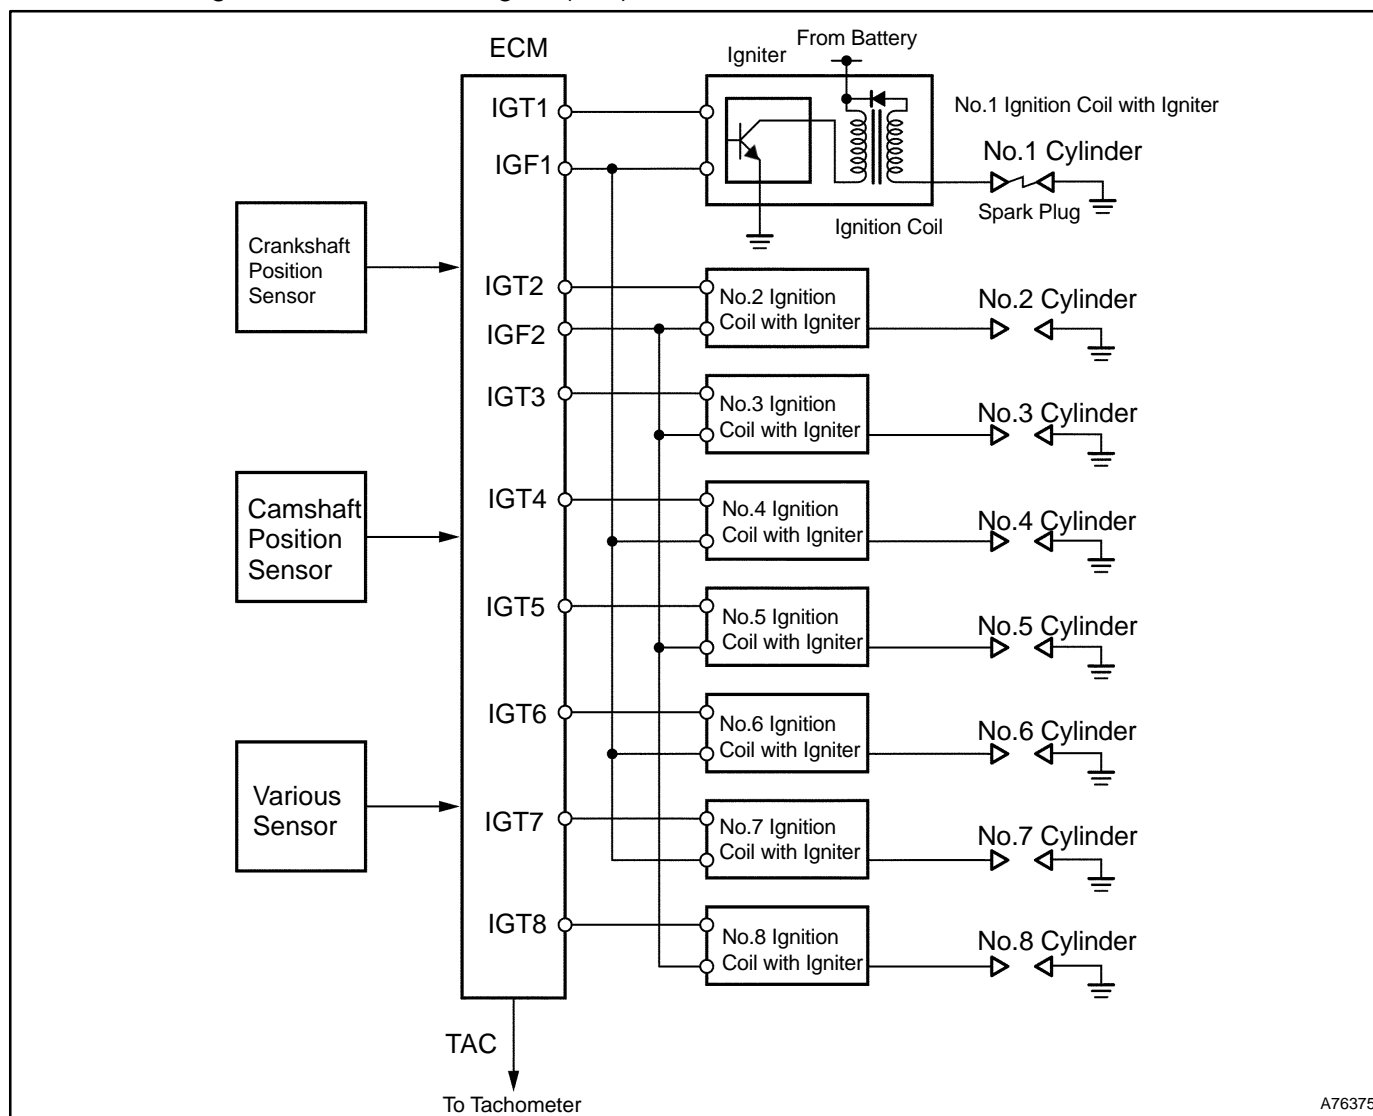

A76375

DTC No.	DTC Detection Condition	Trouble Area
P0351 P0352 P0353 P0354 P0355 P0356 P0357 P0358	No IGF signal to ECM while engine is running	<ul style="list-style-type: none"> • Ignition system • Open or short in IGF or IGT1 - 8 circuit from ignition coil with igniter to ECM • No.1 - No.8 ignition coil with igniter • ECM

The diagram illustrates the electrical connections for the ignition system, specifically the wiring from the ignition switch through noise filters and eight ignition coils/igniters to the ECM. The ignition switch (Terminal 6) provides power to the system via a B-R wire. This power passes through two noise filters (N1 and N2) before reaching the primary terminals of the eight ignition coils. Each coil's secondary circuit is connected to a specific ECM terminal through a designated wire color. The ECM terminals are labeled with their pin numbers and the corresponding wire color and terminal number in parentheses (e.g., E4 9). The ground connections for the noise filters are labeled ED, EC, and EE.

Ignition Coil and Igniter No.	Primary Wire Color	Secondary Wire Color	ECM Terminal
1	B-R	LG	E4 9 (IGT1)
2	B-R	R-Y	E4 24 (IGF1)
3	B-R	L-W	E4 25 (IGT3)
4	B-R	R-W	E4 12 (IGT5)
5	B-R	R-W	E4 13 (IGT7)
6	B-R	LG-B	E4 8 (IGT2)
7	B-R	R-W	E4 23 (IGF2)
8	B-R	L-Y	E4 11 (IGT4)
9	B-R	R-Y	E4 26 (IGT6)
10	B-R	G-B	E4 10 (IGT8)

INSPECTION PROCEDURE

HINT:

- If DTCs "P0351, P0354, P0356 and P0357" are output simultaneously, IGF1 circuit may be open or short.
- If DTCs "P0352, P0353, P0355 and P0358" are output simultaneously, IGF2 circuit may be open or short.
- Read freeze frame data using the hand-held tester or the OBD II scan tool, as freeze frame data records the engine conditions when a malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1 CHECK SPARK PLUG AND SPARK OF MISFIRING CYLINDER (See page 05-99)

NG


Go to step 4

OK

2 CHECK HARNESS AND CONNECTOR(IGNITION COIL - ECM (IGF SIGNAL TERMINAL))

Wire Harness Side

Ignition Coil Connector

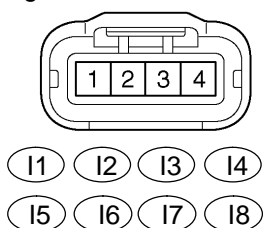

- Disconnect the I1, I2, I3, I4, I5, I6, I7 or I8 ignition coil connector.
- Disconnect the ECM E4 connector.
- Check the continuity between the wire harness side connectors.

Standard (Check for open):

Symbols (Terminal No.)	Specified condition
Ignition coil (I1-2) ⇔ IGF1 (E4-24)	Continuity
Ignition coil (I2-2) ⇔ IGF2 (E4-23)	
Ignition coil (I3-2) ⇔ IGF2 (E4-23)	
Ignition coil (I4-2) ⇔ IGF1 (E4-24)	
Ignition coil (I5-2) ⇔ IGF2 (E4-23)	
Ignition coil (I6-2) ⇔ IGF1 (E4-24)	
Ignition coil (I7-2) ⇔ IGF1 (E4-24)	
Ignition coil (I8-2) ⇔ IGF2 (E4-23)	

Standard (Check for short):


Symbols (Terminal No.)	Specified condition
Ignition coil (I1-2) or IGF1 (E4-24) ⇔ Body ground	No continuity
Ignition coil (I2-2) or IGF2 (E4-23) ⇔ Body ground	
Ignition coil (I3-2) or IGF2 (E4-23) ⇔ Body ground	
Ignition coil (I4-2) or IGF1 (E4-24) ⇔ Body ground	
Ignition coil (I5-2) or IGF2 (E4-23) ⇔ Body ground	
Ignition coil (I6-2) or IGF1 (E4-24) ⇔ Body ground	
Ignition coil (I7-2) or IGF1 (E4-24) ⇔ Body ground	
Ignition coil (I8-2) or IGF2 (E4-23) ⇔ Body ground	

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3 INSPECT ECM(IGF1 AND IGF2 VOLTAGE)

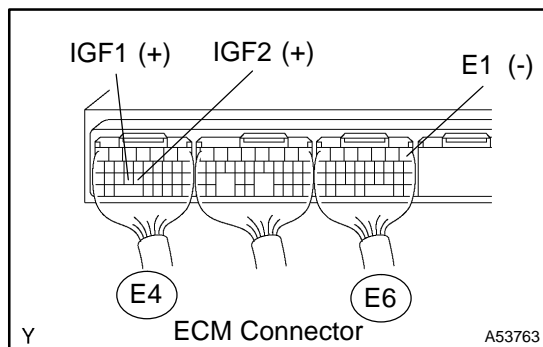

- Disconnect the ignition coil connector.
- Turn the ignition switch ON.
- Measure the voltage between the terminals of the E4 ECM connector.

Standard:

Symbols (Terminal No.)	Specified condition
IGF1 (E4-24) \leftrightarrow E1 (E6-1)	4.5 - 5.5 V
IGF2 (E4-23) \leftrightarrow E1 (E6-1)	

NG

CHECK AND REPLACE ECM
(See page 01-35)



OK

REPLACE IGNITION COIL ASSY

4 CHECK HARNESS AND CONNECTOR(IGNITION COIL - ECM (IGT SIGNAL TERMINAL))

Wire Harness Side

Ignition Coil Connector

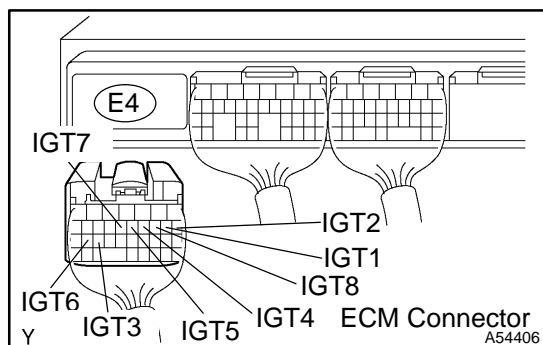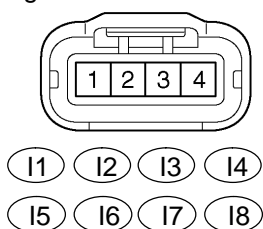

- Disconnect the I1, I2, I3, I4, I5, I6, I7 or I8 ignition coil connector.
- Disconnect the ECM E4 connector.
- Check the continuity between the wire harness side connectors.

Standard (Check for open):

Symbols (Terminal No.)	Specified condition
Ignition coil (I1-3) \leftrightarrow IGT1 (E4-9)	Continuity
Ignition coil (I2-3) \leftrightarrow IGT2 (E4-8)	
Ignition coil (I3-3) \leftrightarrow IGT3 (E4-25)	
Ignition coil (I4-3) \leftrightarrow IGT4 (E4-11)	
Ignition coil (I5-3) \leftrightarrow IGT5 (E4-12)	
Ignition coil (I6-3) \leftrightarrow IGT6 (E4-26)	
Ignition coil (I7-3) \leftrightarrow IGT7 (E4-13)	
Ignition coil (I8-3) \leftrightarrow IGT8 (E4-10)	



Standard (Check for short):

Symbols (Terminal No.)	Specified condition
Ignition coil (I1-3) or IGT1 (E4-9) \leftrightarrow Body ground	No continuity
Ignition coil (I2-3) or IGT2 (E4-8) \leftrightarrow Body ground	
Ignition coil (I3-3) or IGT3 (E4-25) \leftrightarrow Body ground	
Ignition coil (I4-3) or IGT4 (E4-11) \leftrightarrow Body ground	
Ignition coil (I5-3) or IGT5 (E4-12) \leftrightarrow Body ground	
Ignition coil (I6-3) or IGT6 (E4-26) \leftrightarrow Body ground	
Ignition coil (I7-3) or IGT7 (E4-13) \leftrightarrow Body ground	
Ignition coil (I8-3) or IGT8 (E4-10) \leftrightarrow Body ground	

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

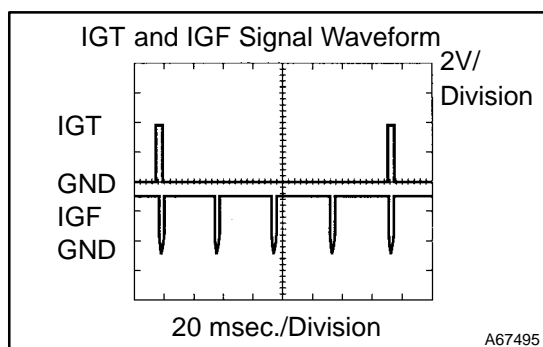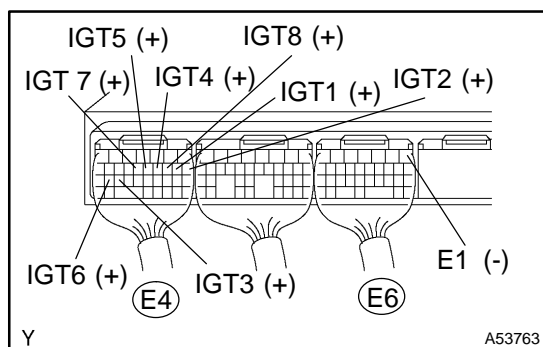5 INSPECT ECM(IGT1, IGT2, IGT3, IGT4, IGT5, IGT6, IGT7 OR IGT8 VOLTAGE)

- (a) Measure the voltage between the terminals of the E4 and E6 ECM connectors when the engine is cranked.

Standard:

Symbols (Terminal No.)	Specified condition
IGT1 (E4-9) ⇔ E1 (E6-1)	More than 0.1 V and less than 4.5 V
IGT2 (E4-8) ⇔ E1 (E6-1)	
IGT3 (E4-25) ⇔ E1 (E6-1)	
IGT4 (E4-11) ⇔ E1 (E6-1)	
IGT5 (E4-12) ⇔ E1 (E6-1)	
IGT6 (E4-26) ⇔ E1 (E6-1)	
IGT7 (E4-13) ⇔ E1 (E6-1)	
IGT8 (E4-10) ⇔ E1 (E6-1)	



- (b) Reference:

Inspection using the oscilloscope.

- (1) During cranking or idling, check the waveform between terminals IGT1 - IGT8 and E1, and IGF1, IGF2 and E1 of the E4 and E6 ECM connectors.

NG

CHECK AND REPLACE ECM
(See page 01-35)

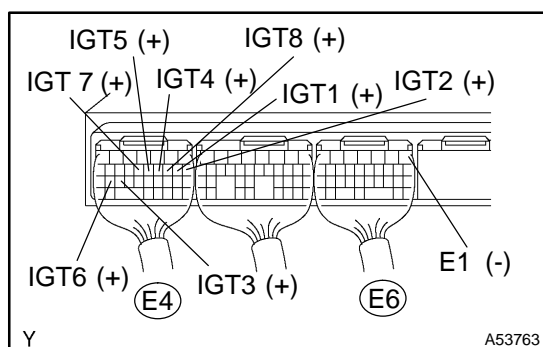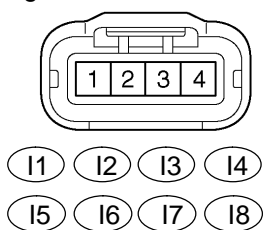OK**6 INSPECT ECM(IGT1, IGT2, IGT3, IGT4, IGT5, IGT6, IGT7 OR IGT8 VOLTAGE)****Wire Harness Side****Ignition Coil Connector**

- (a) Disconnect the I1, I2, I3, I4, I5, I6, I7 or I8 ignition coil connector.
- (b) Measure the voltage between the terminals of the E4 and E6 ECM connectors when the engine is cranked.

Standard:

Symbols (Terminal No.)	Specified condition
IGT1 (E4-9) ⇔ E1 (E6-1)	More than 0.1 V and less than 4.5 V
IGT2 (E4-8) ⇔ E1 (E6-1)	
IGT3 (E4-25) ⇔ E1 (E6-1)	
IGT4 (E4-11) ⇔ E1 (E6-1)	
IGT5 (E4-12) ⇔ E1 (E6-1)	
IGT6 (E4-26) ⇔ E1 (E6-1)	
IGT7 (E4-13) ⇔ E1 (E6-1)	
IGT8 (E4-10) ⇔ E1 (E6-1)	

NG


CHECK AND REPLACE ECM
(See page 01-35)

OK

7 INSPECT IGNITION COIL ASSY(POWER SOURCE)

Wire Harness Side

Ignition Coil Connector

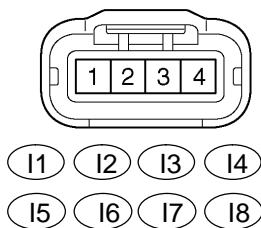

- Disconnect the I1, I2, I3, I4, I5, I6, I7 or I8 ignition coil connector.
- Turn the ignition switch ON and START position.
- Measure the voltage between the terminal of the wire harness side connector and body ground.

Standard:

Terminal No.	Specified condition
I1-1 ⇔ Body ground	9 - 14 V
I2-1 ⇔ Body ground	
I3-1 ⇔ Body ground	
I4-1 ⇔ Body ground	
I5-1 ⇔ Body ground	
I6-1 ⇔ Body ground	
I7-1 ⇔ Body ground	
I8-1 ⇔ Body ground	

OK


REPLACE IGNITION COIL ASSY

NG

8 CHECK HARNESS AND CONNECTOR(IGNITION COIL - IGNITION SWITCH)

Wire Harness Side

Ignition Coil Connector

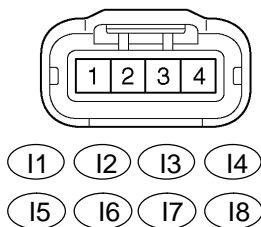


- Disconnect the I1, I2, I3, I4, I5, I6, I7 or I8 ignition coil connector.
- Disconnect the ignition switch connector.
- Check the continuity between the wire harness side connectors.

Standard (Check for open):

Symbols (Terminal No.)	Specified condition
Ignition coil (I1-1) ⇔ IG2 (6)	Continuity
Ignition coil (I2-1) ⇔ IG2 (6)	
Ignition coil (I3-1) ⇔ IG2 (6)	
Ignition coil (I4-1) ⇔ IG2 (6)	
Ignition coil (I5-1) ⇔ IG2 (6)	
Ignition coil (I6-1) ⇔ IG2 (6)	
Ignition coil (I7-1) ⇔ IG2 (6)	
Ignition coil (I8-1) ⇔ IG2 (6)	

Standard (Check for short):

Symbols (Terminal No.)	Specified condition
Ignition coil (I1-1) or IG2 (6) ⇔ Body ground	No continuity
Ignition coil (I2-1) or IG2 (6) ⇔ Body ground	
Ignition coil (I3-1) or IG2 (6) ⇔ Body ground	
Ignition coil (I4-1) or IG2 (6) ⇔ Body ground	
Ignition coil (I5-1) or IG2 (6) ⇔ Body ground	
Ignition coil (I6-1) or IG2 (6) ⇔ Body ground	
Ignition coil (I7-1) or IG2 (6) ⇔ Body ground	
Ignition coil (I8-1) or IG2 (6) ⇔ Body ground	

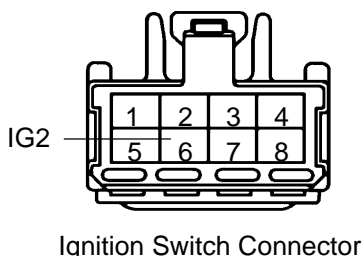

Ignition Switch Connector

NG

REPAIR OR
CONNECTOR

REPLACE HARNESS OR

OK

REPLACE IGNITION COIL ASSY