

RENAULT

7 Trim and upholstery

71A BODY INTERNAL TRIM

72A SIDE OPENING ELEMENT TRIM

73A NON-SIDE OPENING ELEMENTS TRIM

75A FRONT SEAT FRAMES AND RUNNERS

76A REAR SEAT FRAMES AND RUNNERS

78A REAR SEAT TRIM

79A SEAT COMPONENTS

X45

JANUARY 2008

Edition Anglaise

"The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed."

All copyrights reserved by Renault.

The reproduction or translation in part of whole of the present document, as well as the use of the spare parts reference numbering system, are prohibited without the prior written consent of Renault.

KOLEOS - Section 7

Contents

Page

71A BODY INTERNAL TRIM

Floor carpet: Removal - Refitting	71A-1
Headlining: Removal - Refitting	71A-3
Cab floor lining: Removal - Refitting	71A-6
Front door sill lining: Removal - Refitting	71A-7
Rear door sill lining: Removal - Refitting	71A-8
C-pillar lower trim: Removal - Refitting	71A-9
A-pillar trim: Removal - Refitting	71A-10
B-pillar upper trim: Removal - Refitting	71A-12
B-pillar trim: Removal - Refitting	71A-14
C-pillar upper trim: Removal - Refitting	71A-15
Rear end panel lining: Removal - Refitting	71A-16
Luggage compartment floor lining: Removal - Refitting	71A-17

72A SIDE OPENING ELEMENT TRIM

Front side door trim: Removal - Refitting	72A-1
Rear side door trim: Removal - Refitting	72A-3

73A NON-SIDE OPENING ELEMENTS TRIM

Tailgate lining: Removal - Refitting	73A-1
Tailgate hatch trim: Removal - Refitting	73A-2

75A FRONT SEAT FRAMES AND RUNNERS

Front seat frame: Removal - Refitting	75A-1
Front seat control keypad: Removal - Refitting	75A-5
Complete front seat: Removal - Refitting	75A-6

76A REAR SEAT FRAMES AND RUNNERS

Complete rear seat: Removal - Refitting	76A-1
Rear bench seatback locking: Removal - Refitting	76A-3
Rear bench seat mechanism: Removal - Refitting	76A-5

78A REAR SEAT TRIM

1/3 and 2/3 rear bench seat trim: Removal - Refitting	78A-1
1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting	78A-3

Contents

79A

SEAT COMPONENTS

Seatback tray: Removal - Refitting	79A-1
Front seat headrest guide: Removal - Refitting	79A-2
Rear centre arm rest: Removal - Refitting	79A-5
Rear bench seat headrest guide: Removal - Refitting	79A-6

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting

71A

IMPORTANT

To prevent the pyrotechnic components from not working or being accidentally triggered (airbags or pretensioners), wait at least 3 minutes after disconnecting the battery.

IMPORTANT


Never handle the pyrotechnic systems (pretensioners or airbags) near to a source of heat or naked flame - they may be triggered.

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- ☐ Remove:
 - the dashboard (see **Dashboard: Removal - Refitting**) (57A, Interior equipment),
 - the dashboard cross member (see **Dashboard cross member: Removal - Refitting**) (42A, Upper front structure),
 - the air distribution unit (see **Air distribution unit: Removal - Refitting**) (61A, Heating system),
 - the central console (see **Centre console: Removal - Refitting**) (57A, Interior equipment),
 - the gear control unit (see **Gear control unit: Removal - Refitting**) (37A, Mechanical component controls),
 - the airbag computer (see **Airbag computer: Removal - Refitting**) (88C, Airbag and pretensioners),
 - the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page 71A-7) ,
 - the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-8) ,
 - the B-pillar trim (see **71A, Body internal trim, B-pillar trim: Removal - Refitting**, page 71A-14) ,
 - the front seat (see **75A, Front seat frames and runners, Complete front seat: Removal - Refitting**, page 75A-6) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

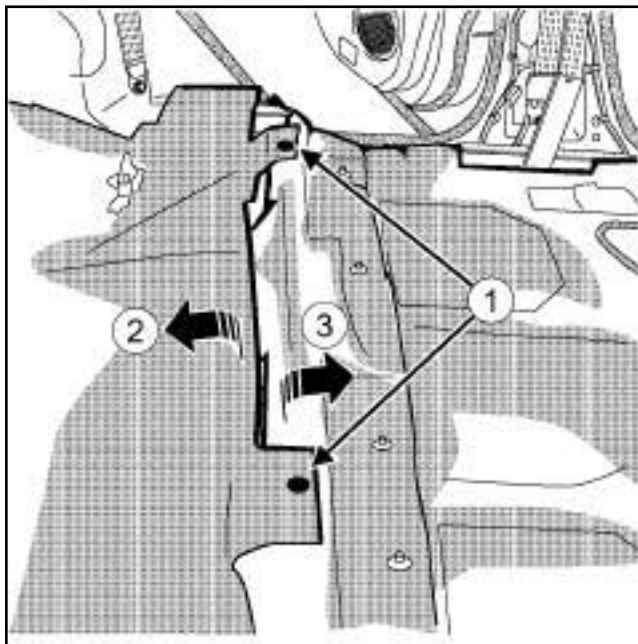

131933

- ☐ Remove the clips (1) .
- ☐ Remove:
 - the rear carpet at (2) ,
 - the rear section of the front carpet at (3) .

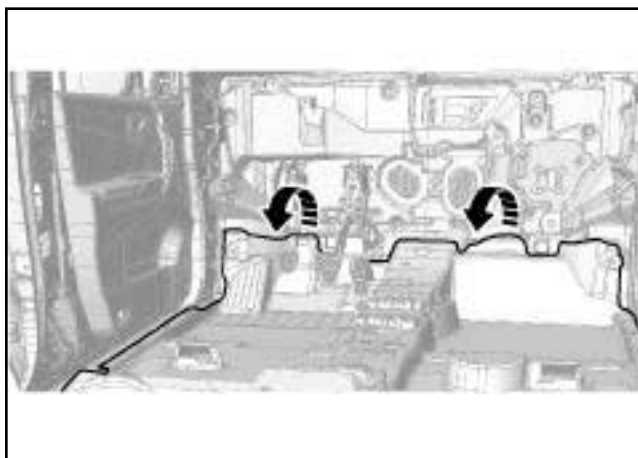

131930

- ☐ Remove the front section of the carpet.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the front carpet,
 - the rear carpet,

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting

71A

- the clips.

II - FINAL OPERATION.

☐ Refit:

- the front seat (see **75A, Front seat frames and runners, Complete front seat: Removal - Refitting**, page **75A-6**) ,
- the B-pillar trim (see **71A, Body internal trim, B-pillar trim: Removal - Refitting**, page **71A-14**) ,
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page **71A-8**) ,
- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-7**) ,
- the airbag computer (see **Airbag computer: Removal - Refitting**) (88C, Airbag and pretensioners),
- the gear control unit (see **Gear control unit: Removal - Refitting**) (37A, Mechanical component controls),
- the central console (see **Centre console: Removal - Refitting**) (57A, Interior equipment),
- the air distribution unit (see **Air distribution unit: Removal - Refitting**) (61A, Heating system),
- the dashboard cross member (see **Dashboard cross member: Removal - Refitting**) (42A, Upper front structure),
- the dashboard (see **Dashboard: Removal - Refitting**) (57A, Interior equipment).

- #### ☐ Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

Essential special toolingEssential special tooling
Essential special tooling

Car. 1597

Trim removal lever.

IMPORTANT

To prevent the pyrotechnic components from being permanently deactivated or triggered (airbags or pretensioners), wait for at least 3 minutes after disconnecting the battery.

IMPORTANT

Never handle the pyrotechnic systems (pretensioners or airbags) near to a source of heat or naked flame - they may be triggered.

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

- ☐ Remove:

- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-7**),
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page **71A-8**),
- the A-pillar trim (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page **71A-10**),
- the B-pillar trim (see **71A, Body internal trim, B-pillar trim: Removal - Refitting**, page **71A-14**),
- the B-pillar upper trim (see **71A, Body internal trim, B-pillar upper trim: Removal - Refitting**, page **71A-12**),
- the C-pillar lower trim (see **71A, Body internal trim, C-pillar lower trim: Removal - Refitting**, page **71A-9**),
- the C-pillar upper trim (see **71A, Body internal trim, C-pillar upper trim: Removal - Refitting**, page **71A-15**),
- the sunroof opening control (depending on equipment level) (see **Sunroof opening control: Removal - Refitting**) (52A, Non-side opening element mechanisms),

- the interior rear-view mirror (see **Interior rear-view mirror Removal - Refitting**) (57A, Interior equipment),
- the sun visor (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),
- the grab handle (see **Grab handle: Removal - Refitting**) (57A, Interior equipment).


II - OPERATION FOR REMOVAL OF PART CONCERNED

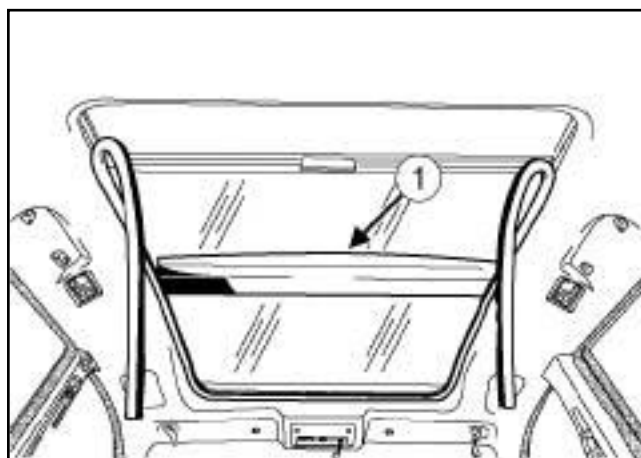

131975

- ☐ Remove:

- the centre headlining (1),
- the sunroof seal carefully (depending on equipment level).

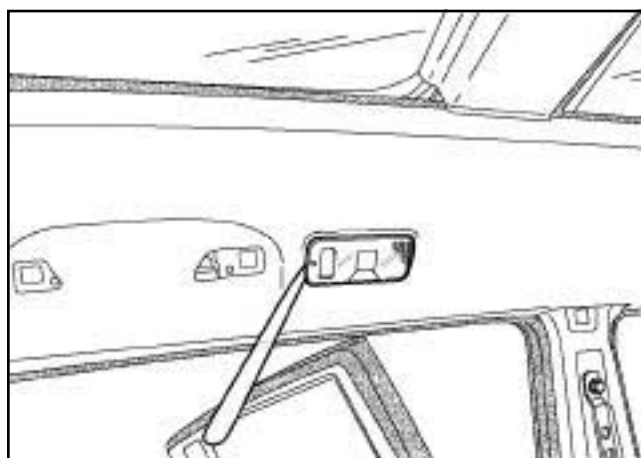


131976

- ☐ Remove the individual light.
- ☐ Disconnect the power supply connector.

BODY INTERNAL TRIM


Headlining: Removal - Refitting

71A

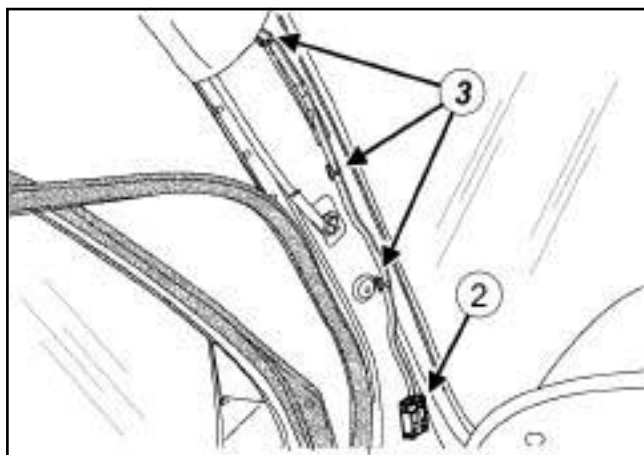


131977

- ☐ Disconnect the power supply connector (2) .
- ☐ Unclip the clips (3) .

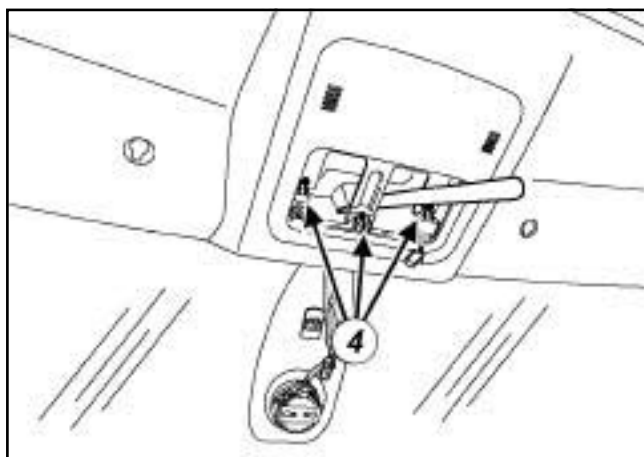

131978

- ☐ Unclip the front section at (4) of the headlining using the (Car. 1597).

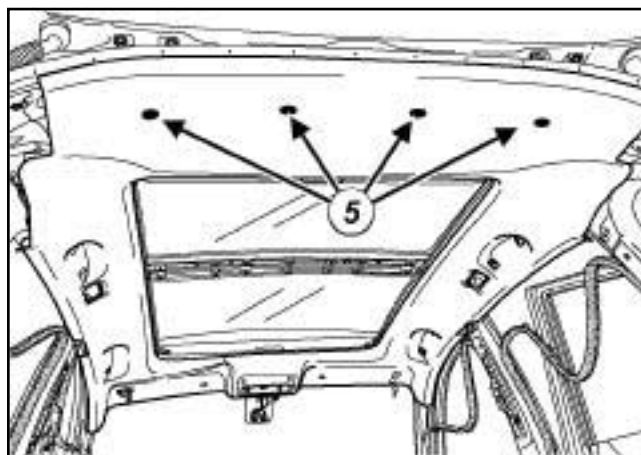

131979

- ☐ Remove:
 - the clips (5) ,
 - the upper section of the front side door seal, partially,
 - the upper section of the rear side door seal, partially.
- ☐ Pull on the headlining and remove it via the rear of the vehicle (this operation requires two people).

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Position the headlining in the luggage compartment (this operation requires two people).

Note:

For vehicles equipped with a sunroof, the headlining must be handled with care. The side edges are weakened by the design of the sunroof.

- ☐ Clip on the front section of the headlining.
- ☐ Fit the rear section of the headlining.
- ☐ Refit:
 - the headlining clips (5) ,
 - the clips (3) .
- ☐ Connect the supply connector (2) .
- ☐ Refit:
 - the sunroof seal (depending on equipment level),
 - the centre headlining.

II - FINAL OPERATION

☐ Refit:

- the grab handle (see **Grab handle: Removal - Refitting**) (57A, Interior equipment),
- the interior rear-view mirror (see **Interior rear-view mirror Removal - Refitting**) (57A, Interior equipment),
- the sun visor (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),
- the sunroof opening control (depending on equipment level) (see **Sunroof opening control: Removal - Refitting**) (52A, Non-side opening element mechanisms),
- the C-pillar upper trim (see **71A, Body internal trim, C-pillar upper trim: Removal - Refitting**, page **71A-15**) ,
- the C-pillar lower trim (see **71A, Body internal trim, C-pillar lower trim: Removal - Refitting**, page **71A-9**) ,
- the B-pillar upper trim (see **71A, Body internal trim, B-pillar upper trim: Removal - Refitting**, page **71A-12**) ,
- the B-pillar trim (see **71A, Body internal trim, B-pillar trim: Removal - Refitting**, page **71A-14**) ,
- the A-pillar trim (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page **71A-10**) ,
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page **71A-8**) ,
- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-7**) .

- #### ☐ Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

BODY INTERNAL TRIM

Cab floor lining: Removal - Refitting

71A


REMOVAL

I - REMOVAL PREPARATION OPERATION

☐ Remove:

- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-7**) ,
- the frame seal of the front side door (see **Front side door frame seal: Removal - Refitting**) (65A, Door sealing).

II - OPERATION FOR REMOVAL OF PART CONCERNED

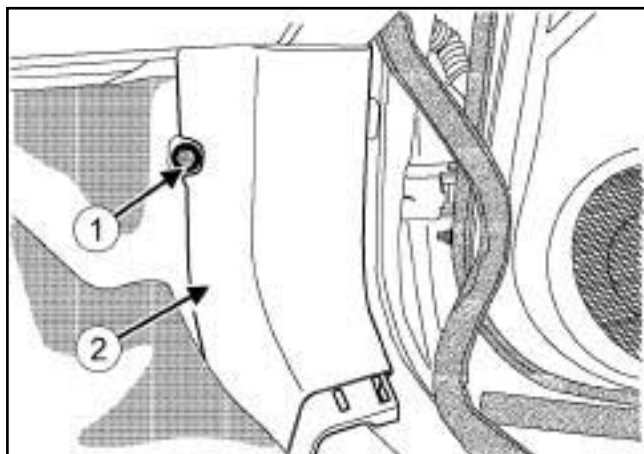

130247

☐ Remove:

- the bolt (1) ,
- the cab floor lining (2) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

☐ Refit:

- the cab floor lining,
- the bolt.

II - FINAL OPERATION.

☐ Refit:

- the front side door frame seal (see **Front side door frame seal: Removal - Refitting**) (65A, Door sealing),
- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-7**) .


BODY INTERNAL TRIM

Front door sill lining: Removal - Refitting

71A

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

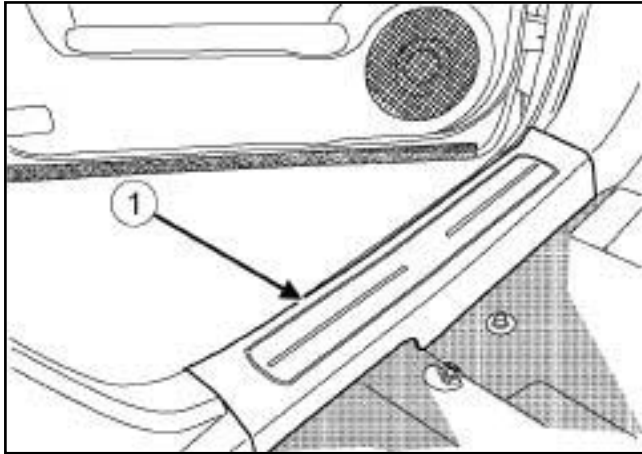

130156

- ☐ Unclip the front door sill lining (1) .

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ Replace the clips of the door sill lining if necessary.

II - REFITTING OPERATION FOR PART CONCERNED

- ☐ Clip on the front door sill lining


BODY INTERNAL TRIM

Rear door sill lining: Removal - Refitting

71A

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

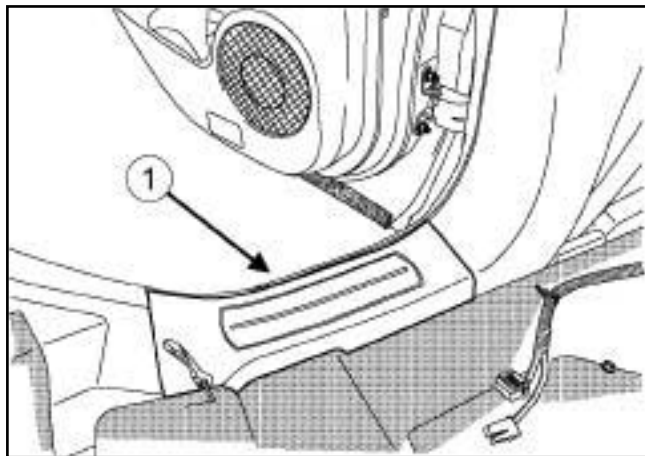

130157

- ☐ Unclip the rear door sill lining (1) .

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ Replace the clips of the rear door sill lining if necessary.

II - REFITTING OPERATION FOR PART CONCERNED

- ☐ Clip on the rear door sill lining.

BODY INTERNAL TRIM

C-pillar lower trim: Removal - Refitting

71A

Tightening torques

rear safety C-pillar lower bolt	49 N.m
---------------------------------	--------


REMOVAL

I - REMOVAL PREPARATION OPERATION

☐ Remove:

- the rear parcel shelf (see **Rear parcel shelf: Removal - Refitting**) (57A, Interior equipment),
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-8) ,
- the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-17) ,
- the rear panel trim (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-16) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

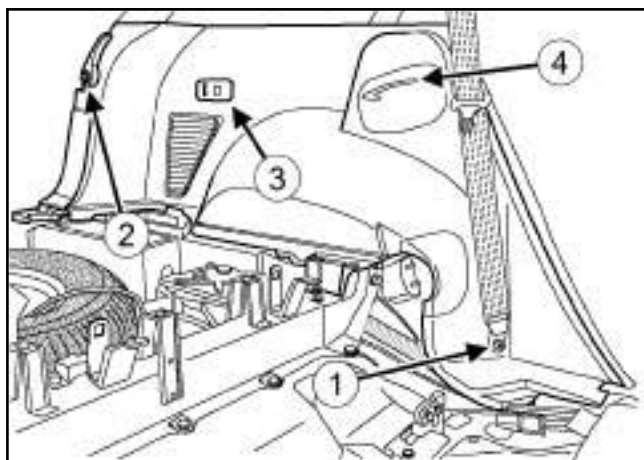

130248

☐ Remove:

- the lower bolt (1) from the rear seat belt,
- the bolt (2) ,
- the rear seat control handle (option),
- the luggage compartment light (3) ,
- the rear seat striker panel trim (4) .

☐ Disconnect the connector.

☐ Remove the C-pillar lower trim.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

☐ Connect the connector.

☐ Refit the C-pillar lower trim.

☐ Torque tighten the rear safety C-pillar lower bolt (49 N.m).

☐ Refit:

- the rear seat control handle (option),
- the bolt,
- the luggage compartment light.

II - FINAL OPERATION.

☐ Refit:

- the rear panel trim (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-16) ,
- the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-17) ,
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-8) ,
- the rear parcel shelf (see **Rear parcel shelf: Removal - Refitting**) (57A, Interior equipment).


BODY INTERNAL TRIM

A-pillar trim: Removal - Refitting

71A

REMOVAL


I - REMOVAL PREPARATION OPERATION

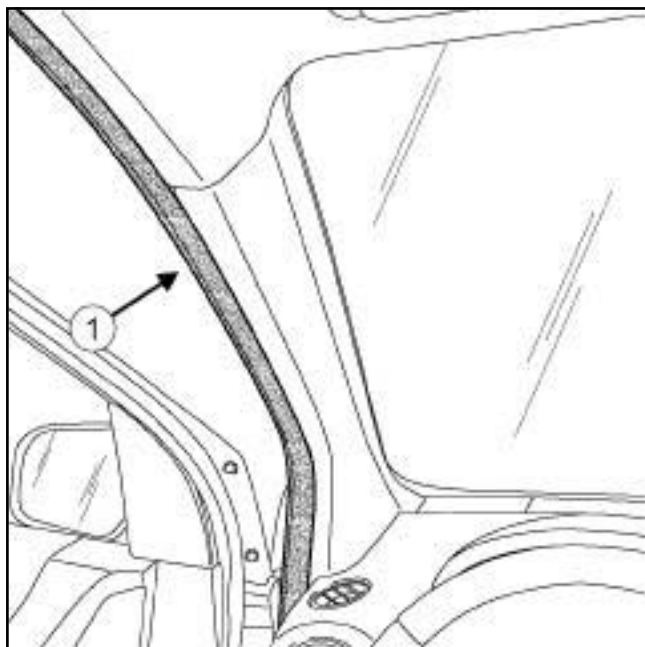

130249


- Partially remove the front side door seal (1) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

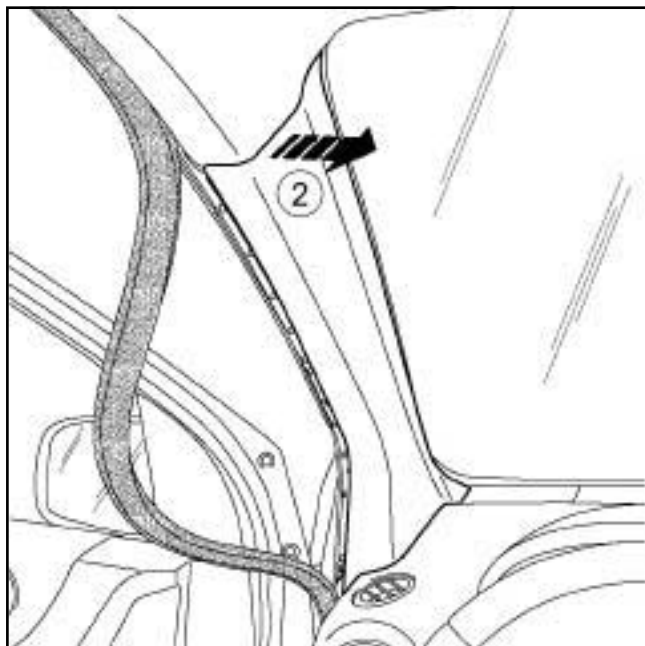

130250

- Unclip the top of the A-pillar trim at (2) .

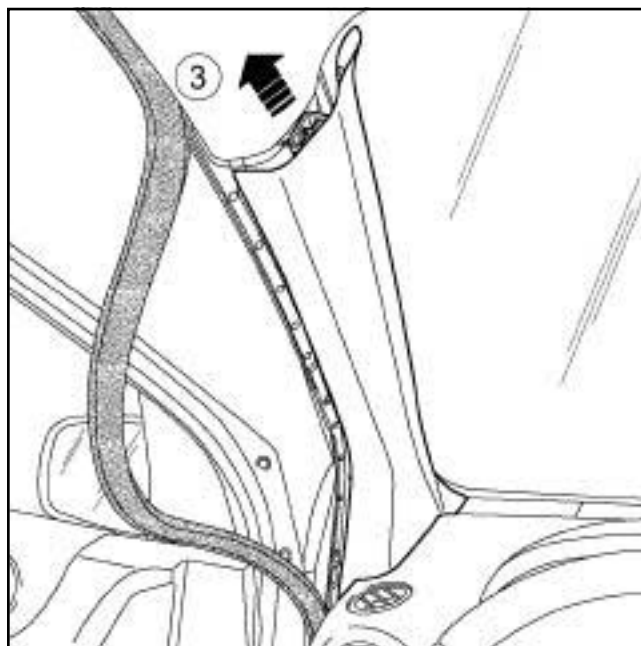

130251


- Remove the A-pillar trim by pulling upwards at (3) .

REFITTING

I - REFITTING PREPARATION OPERATION

- Replace the A-pillar clips, if necessary.

II - REFITTING OPERATION FOR PART CONCERNED

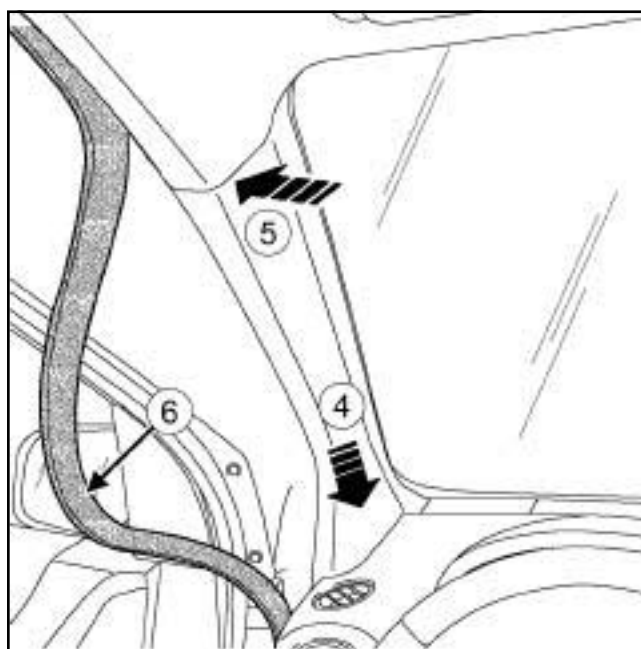

130252

- Refit the bottom of the trim at (4) and (5) .

BODY INTERNAL TRIM

A-pillar trim: Removal - Refitting

71A

III - FINAL OPERATION.

- ☐ Refit the seal **(6)** of the front side door.

BODY INTERNAL TRIM

B-pillar upper trim: Removal - Refitting

71A

Essential special toolingEssential special tooling
Essential special tooling

Car. 1597

Trim removal lever.

Tightening torques

seat belt upper bolt

49 N.m


REMOVAL

I - REMOVAL PREPARATION OPERATION

☐ Remove:


- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-7**) ,
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page **71A-8**) ,
- the B-pillar trim (see **71A, Body internal trim, B-pillar trim: Removal - Refitting**, page **71A-14**) ,
- the front side door seal partially (see **Front side door frame seal: Removal - Refitting**) (65A, Opening element sealing),
- the rear side door seal partially (see **Rear side door seal: Removal - Refitting**) (65A, Opening element sealing).

II - OPERATION FOR REMOVAL OF PART CONCERNED

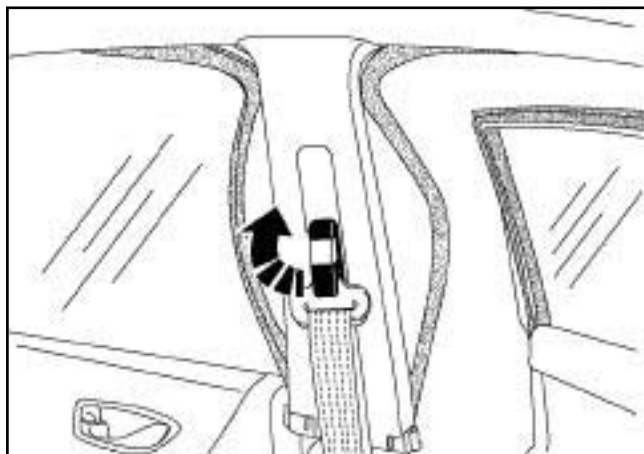

130158


- ☐ Remove the cover.

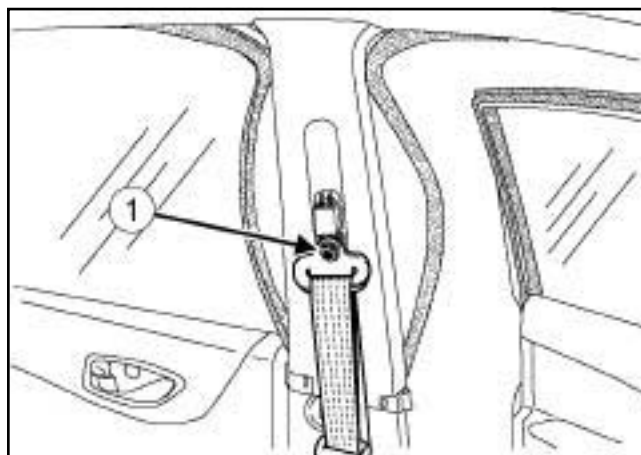

130159

☐ Remove:

- the seat belt upper bolt (1) ,
- the seat belt, partially.

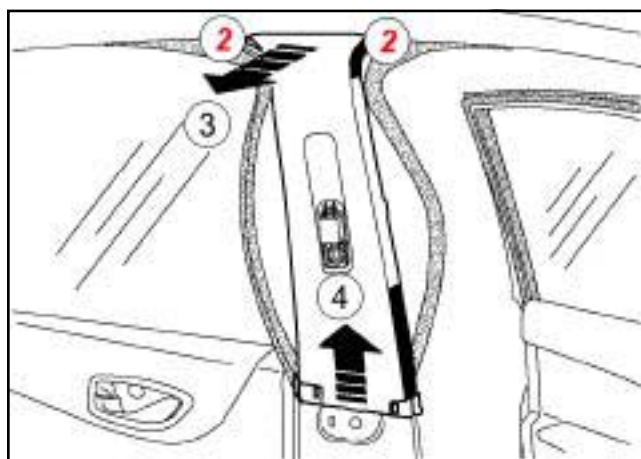


130160

- ☐ Unclip the clips using the trim removal tool (**Car. 1597**).
- ☐ Remove the top of the trim at (3) .
- ☐ Lift the trim at (4) .
- ☐ Remove the B-pillar upper trim.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

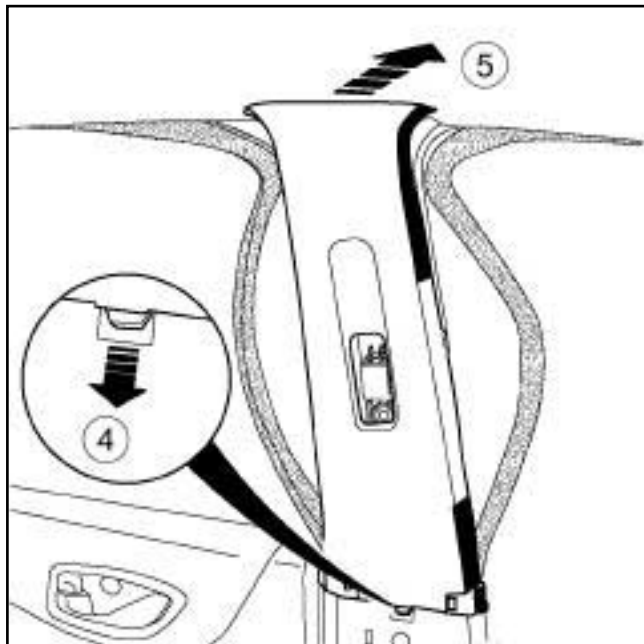

130161

☐ Refit:

- the B-pillar upper trim at (4) and (5) ,
- the seat belt,
- the seat belt upper bolt.

☐ Torque tighten the **seat belt upper bolt (49 N.m)**.

☐ Refit the cover.

II - FINAL OPERATION

☐ Refit:

- the rear side door seal (see **Rear side door seal: Removal - Refitting**) (65A, Opening element sealing),
- the front side door seal (see **Front side door frame seal: Removal - Refitting**) (65A, Opening element sealing),
- the B-pillar trim (see **71A, Body internal trim, B-pillar trim: Removal - Refitting**, page 71A-14) ,
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-8) ,
- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page 71A-7) .

BODY INTERNAL TRIM

B-pillar trim: Removal - Refitting

71A


REMOVAL

I - REMOVAL PREPARATION OPERATION

☐ Remove:

- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting, page 71A-7**) ,
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting, page 71A-8**) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

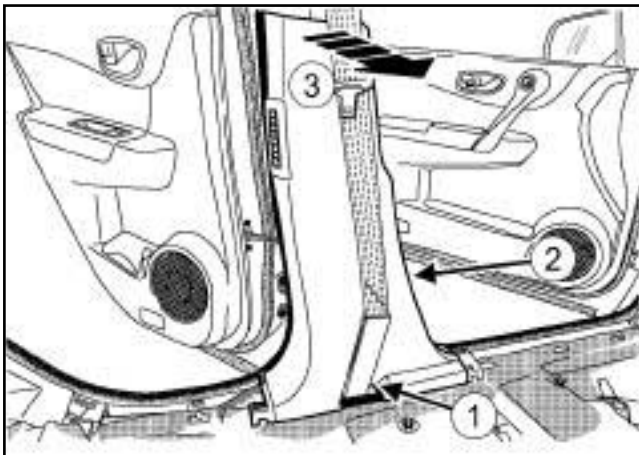

130162

- ☐ Remove the cover (1) .
- ☐ Unclip the B-pillar trim at (2) and (3) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Clip on the B-pillar trim.
- ☐ Refit the cover.

II - FINAL OPERATION.

☐ Refit:

- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting, page 71A-8**) ,
- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting, page 71A-7**) .

BODY INTERNAL TRIM

C-pillar upper trim: Removal - Refitting

71A

Tightening torques

rear seat belt upper bolt	49 N.m
---------------------------	--------


REMOVAL

I - REMOVAL PREPARATION OPERATION

☐ Remove:

- the rear door sill lining (see 71A, **Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-8) ,
- the C-pillar lower trim (see 71A, **Body internal trim, C-pillar lower trim: Removal - Refitting**, page 71A-9) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

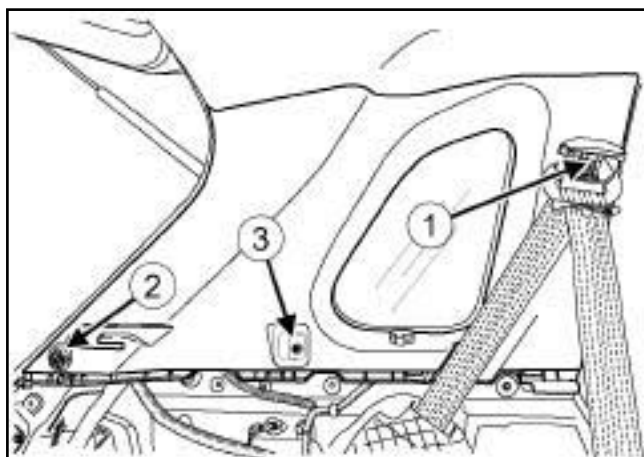

130253

☐ Open the covers.

☐ Remove:

- the rear seat belt upper bolt (1) ,
- the bolt (2) ,
- bolt (3) .

☐ Disconnect the connector.

☐ Remove the C-pillar upper trim.

REFITTING

I - REFITTING PREPARATION OPERATION

- #### ☐ Check the condition of the clips and replace if necessary.

II - REFITTING OPERATION FOR PART CONCERNED

☐ Connect the supply connector.

☐ Refit the C-pillar upper trim.

☐ Torque tighten the rear seat belt upper bolt (49 N.m) (1) .

☐ Refit:

- the bolt (2) ,
- the bolt (3) ,
- the covers.

III - FINAL OPERATION.

☐ Refit:

- the C-pillar lower trim (see 71A, **Body internal trim, C-pillar lower trim: Removal - Refitting**, page 71A-9) ,
- the rear door sill lining (see 71A, **Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-8) .


BODY INTERNAL TRIM

Rear end panel lining: Removal - Refitting

71A


REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

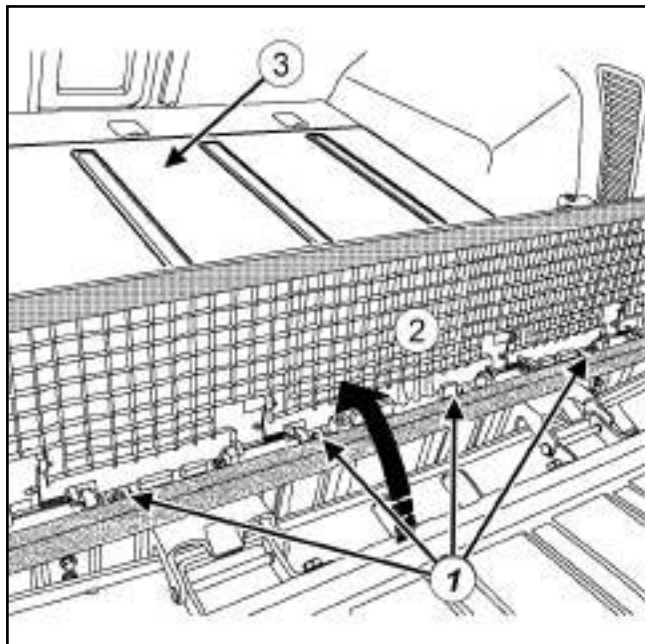

130350

- ☐ Open the rear end panel lining (2) .
- ☐ Remove:
 - the bolts (1) ,
 - the rear central luggage compartment floor (3) ,
 - the front luggage compartment floor box.

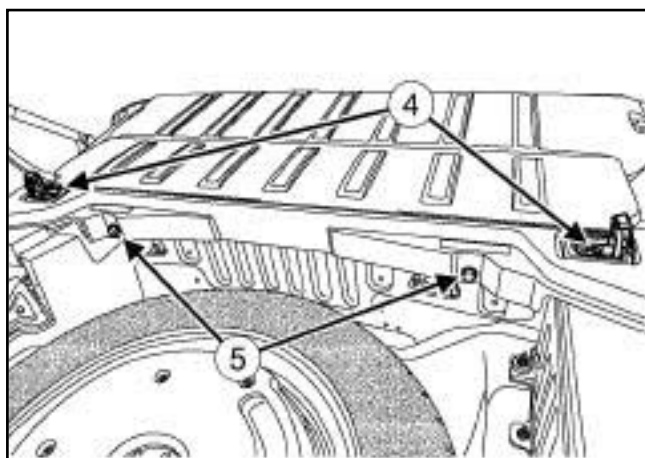

130351

- ☐ Remove:
 - the luggage compartment net hook bolts (4) ,
 - the clips (5) ,
 - the rear end panel lining.

REFITTING

I - REFITTING PREPARATION OPERATION


- ☐ Check the condition of the clips and replace them if necessary.

II - REFITTING OPERATION FOR PART CONCERNED


- ☐ Refit:
 - the rear end panel lining,
 - the clips (5) ,
 - the luggage compartment net hook bolts (4) ,
 - the front luggage compartment floor box,
 - the rear central luggage compartment floor (3) .
- ☐ Close the rear end panel lining (2) .
- ☐ Refit the bolts (1) .

REMOVAL


OPERATION FOR REMOVAL OF PART CONCERNED

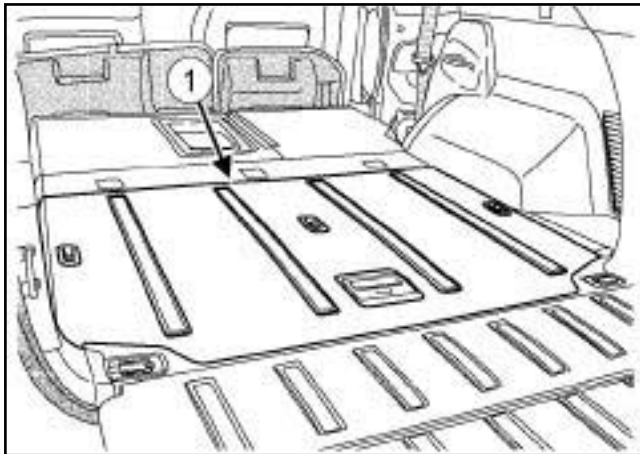


- ☐ Remove the panel from the rear central luggage compartment floor (1) .

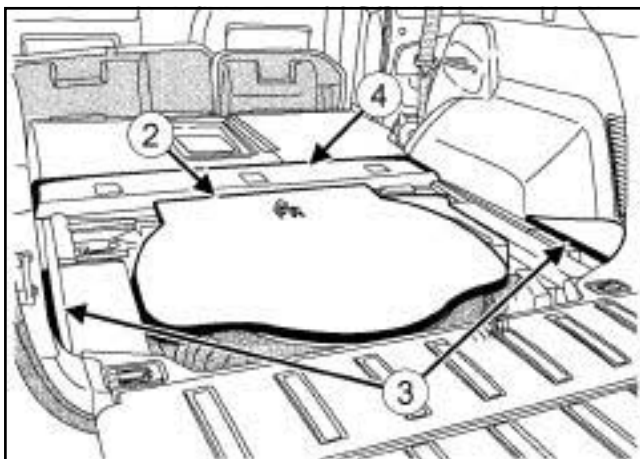

- ☐ Remove:
 - the front luggage compartment floor box (2) ,
 - the side luggage compartment floors (3) ,
 - the front central luggage compartment floor (4) ,
 - the C-pillar lower trim (see **71A, Body internal trim, C-pillar lower trim: Removal - Refitting, page 71A-9**) .

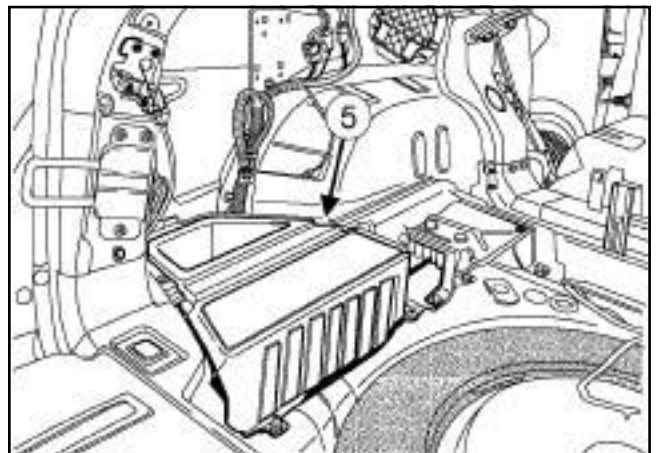

- ☐ Unclip the box clip.
- ☐ Remove the side luggage compartment box (5) .

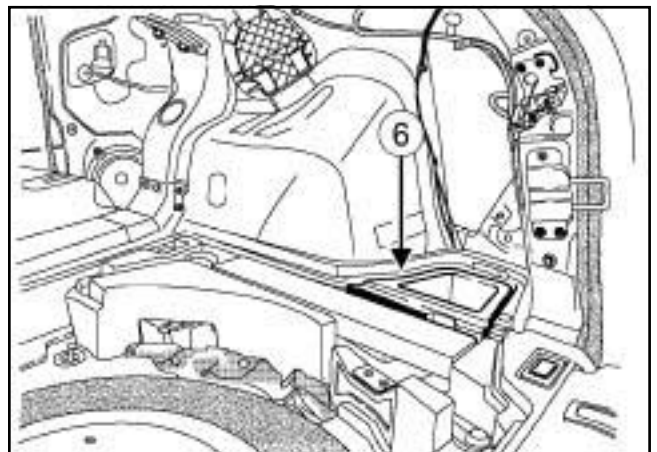

- ☐ Unclip the box clip.
- ☐ Remove the side luggage compartment box (6) .

REFITTING

REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the side luggage compartment boxes,
 - the clips,
 - the C-pillar lower trim (see **71A, Body internal trim, C-pillar lower trim: Removal - Refitting, page 71A-9**) ,
 - the front central luggage compartment floor,
 - the side luggage compartment floors,
 - the front luggage compartment floor box,
 - the rear central luggage compartment floor.

SIDE OPENING ELEMENT TRIM

Front side door trim: Removal - Refitting

72A


Essential special toolingEssential special tooling
Essential special tooling

Car. 1363

Set of trim removal levers.

REMOVAL


I - REMOVAL PREPARATION OPERATION

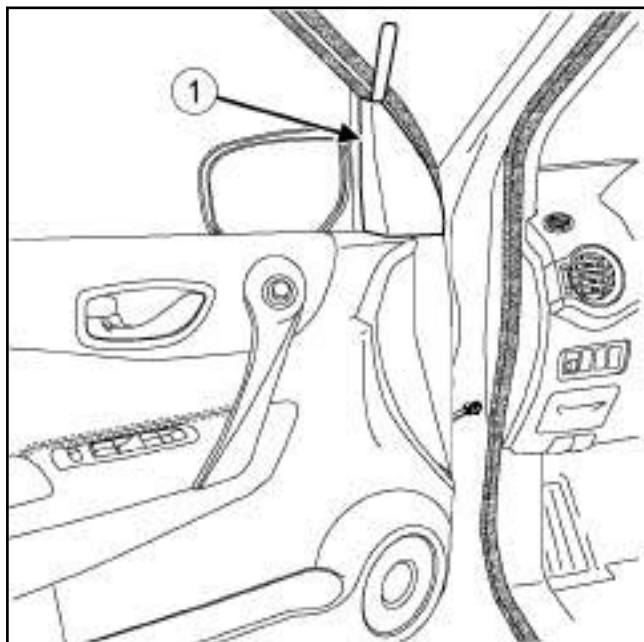

130164


- Unclip the trim (1) from the door mirror using the tool (Car. 1363)

II - OPERATION FOR REMOVAL OF PART CONCERNED

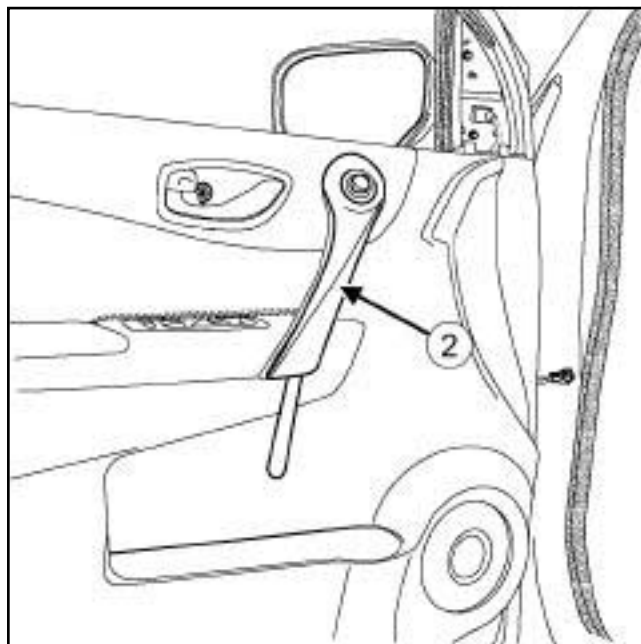

130165

- Unclip the trim (2) using the (Car. 1363)
- Disconnect the supply connectors (depending on equipment level).

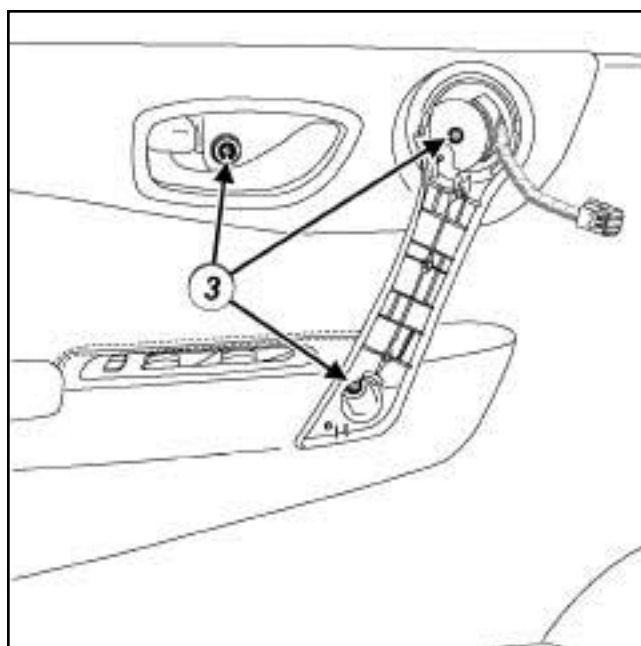


130166

- Remove the bolts (3) .

SIDE OPENING ELEMENT TRIM

Front side door trim: Removal - Refitting

72A

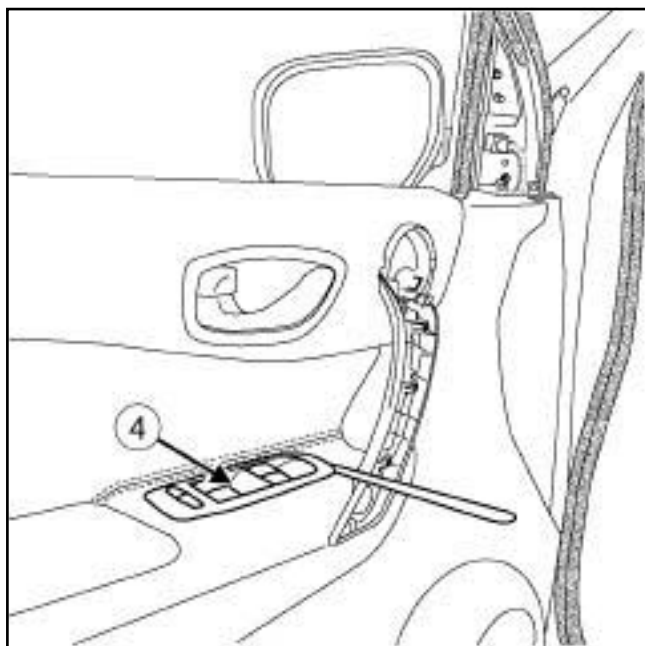

130167

- ☐ Remove the control board (4) using the tool (**Car. 1363**)
- ☐ Disconnect the supply connectors.
- ☐ Remove the front side door trim partially.
- ☐ Unclip the interior opening control cable using a flat-blade screwdriver.
- ☐ Disconnect the door sill light connector.


REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ If necessary, replace the clips on the front side door trim.


II - REFITTING OPERATION FOR PART CONCERNED

- ☐ Connect the supply connector (depending on equipment level).
- ☐ Clip on the door interior handle cable.
- ☐ Refit the front side door trim.

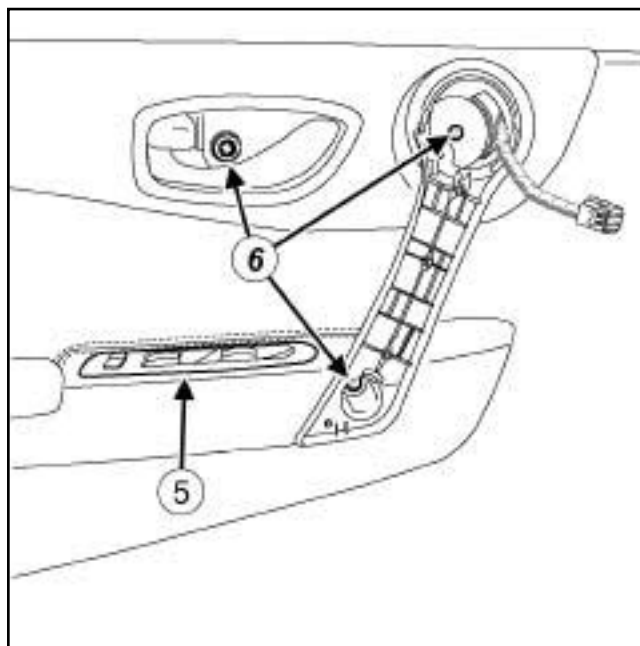

130168

- ☐ Connect the supply connector.
- ☐ Refit:
 - the control board (5) ,
 - the bolts (6) .

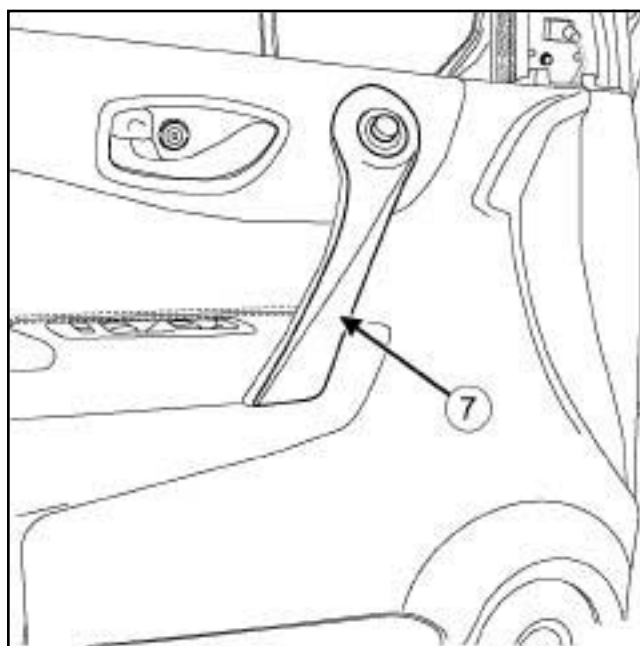

130169

- ☐ Connect the door mirror switch connector.
- ☐ Refit the trim (7) .

III - FINAL OPERATION.

- ☐ Check that it is working correctly.
- ☐ Clip the trim (1) onto the door mirror.

SIDE OPENING ELEMENT TRIM

Rear side door trim: Removal - Refitting

72A


Essential special toolingEssential special tooling
Essential special tooling

Car. 1363

Set of trim removal levers.


REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

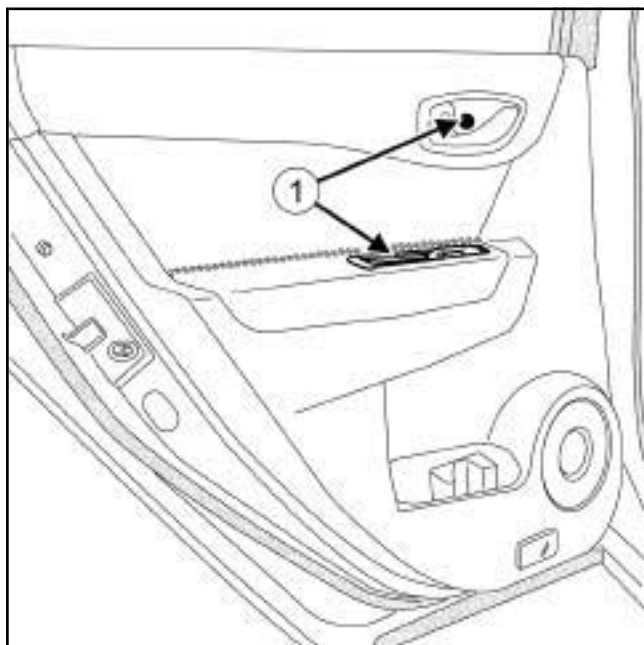

130170

- ☐ Remove:
 - the covers,
 - the bolts (1) .

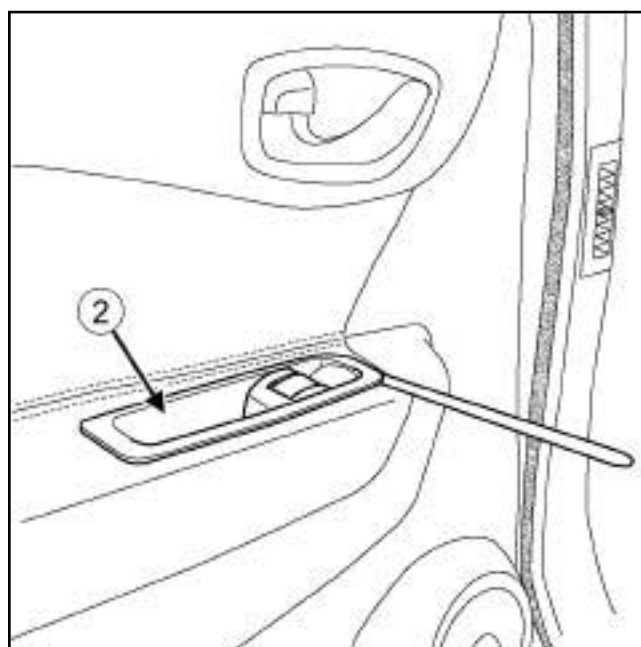

130171

- ☐ Remove the plate (2) using the (Car. 1363)
- ☐ Disconnect the power supply connector.
- ☐ Remove the rear side door trim partially.
- ☐ Unclip the rear side door interior opening release cable.
- ☐ Disconnect the supply connector.

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ If necessary, replace the clips on the rear side door trim.

II - OPERATION FOR REMOVAL OF PART CONCERNED

- ☐ Connect the supply connector (depending on the equipment level).
- ☐ Clip on the rear side door interior opening release cable.
- ☐ Refit the rear side door trim.
- ☐ Connect the supply connector.
- ☐ Refit:
 - the plate (2) ,
 - the bolts (1) .

III - FINAL OPERATION.

- ☐ Check that it is working correctly.


Essential special tooling
Essential special tooling

Car. 1363

Set of trim removal levers.

REMOVAL


I - REMOVAL PREPARATION OPERATION

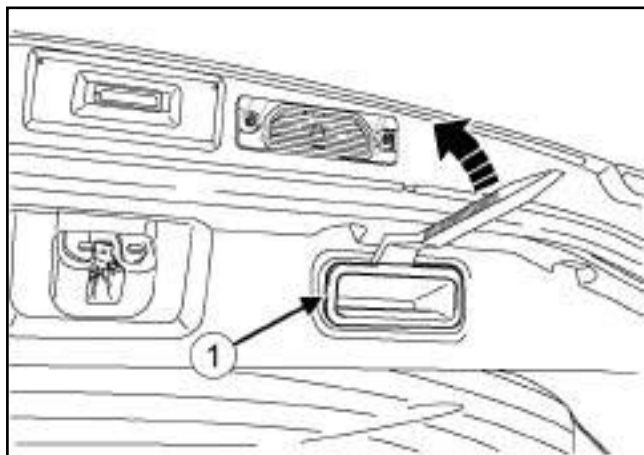

130172


- ☐ Remove the trim (1) using the (Car. 1363)

II - OPERATION FOR REMOVAL OF PART CONCERNED

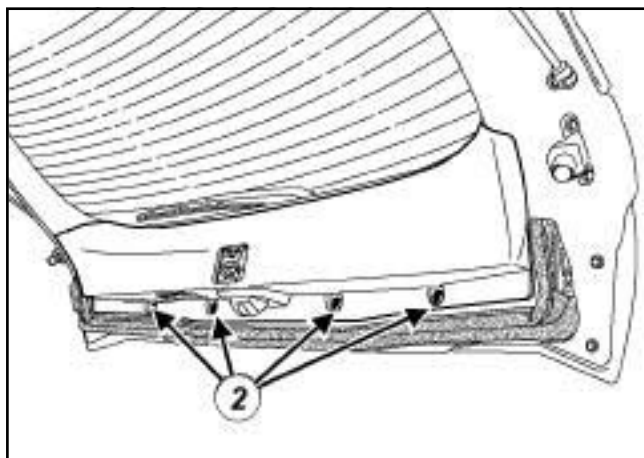


130173

- ☐ Remove:
 - the clips (2) ,
 - the tailgate lower trim.

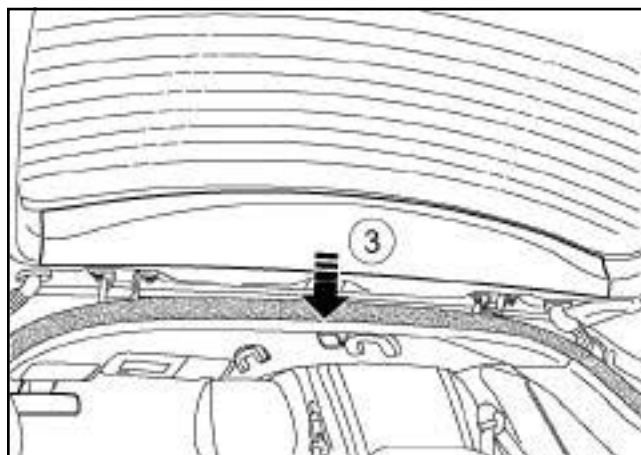

130174

- ☐ Remove the upper trim (3) from the tailgate.

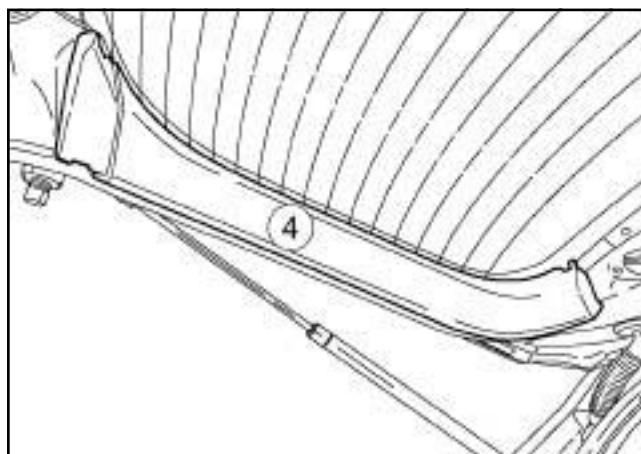

130175

- ☐ Remove the side trim (4) from the tailgate.

REFITTING

I - REMOVAL PREPARATION OPERATION

- ☐ Replace the tailgate trim clips if necessary.

II - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the side trim (4) on the tailgate,
 - the upper trim (3) on the tailgate,
 - the lower trim on the tailgate,
 - the clips (2) ,
 - the trim (1) .

NON-SIDE OPENING ELEMENTS TRIM

Tailgate hatch trim: Removal - Refitting

73A


Essential special toolingEssential special tooling
Essential special tooling

Car. 1363

Set of trim removal levers.

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

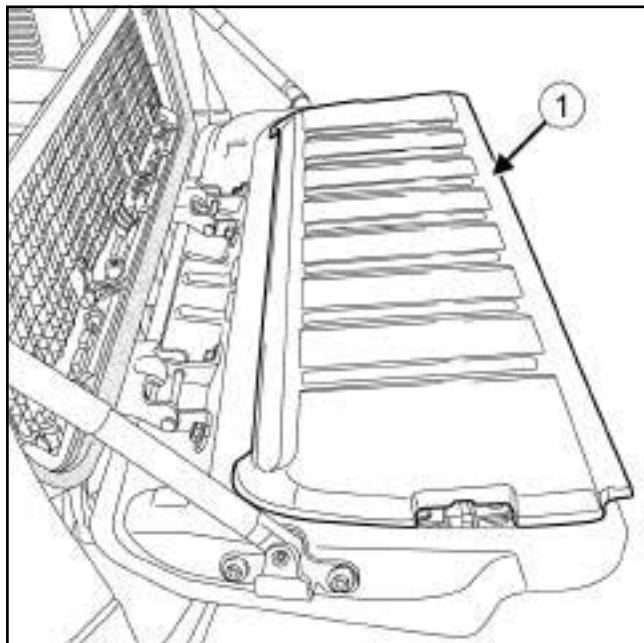


130254

❑ Support the boot chute trim using a suitable tool.

❑ Remove:


- the trim (1) using the (Car. 1363),
- the handle cover.

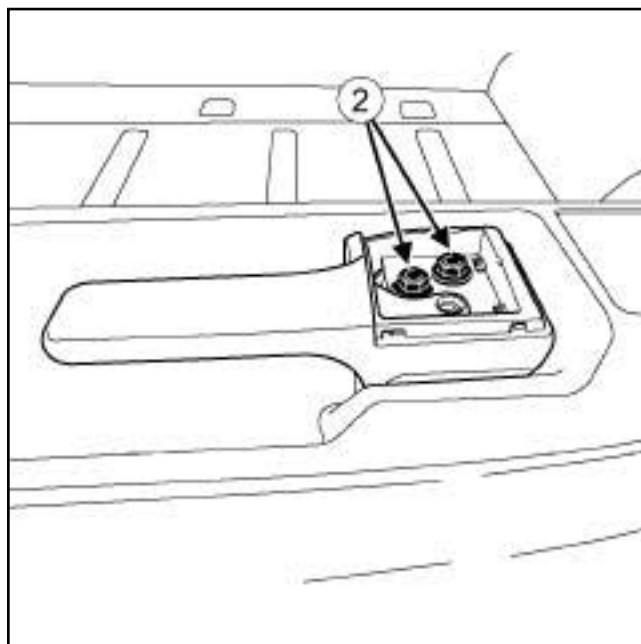

130255


❑ Remove:

- the bolts (2) ,
- the boot chute handle.

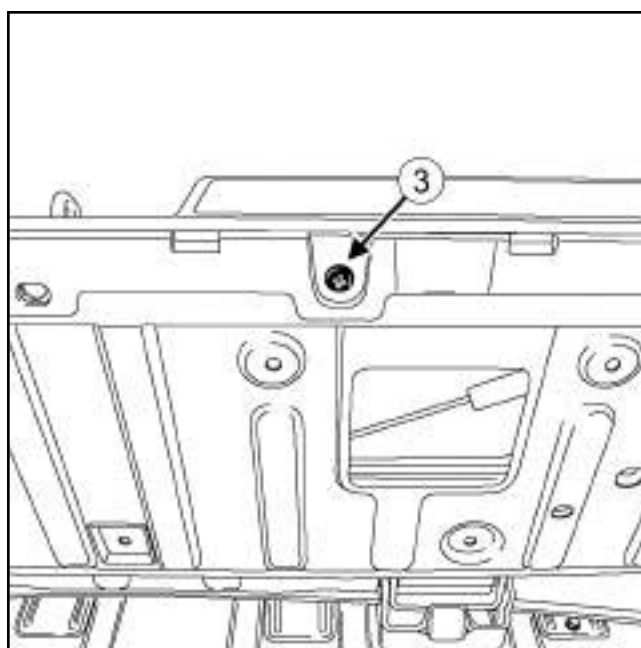

130256

❑ Remove the bolt (3) .

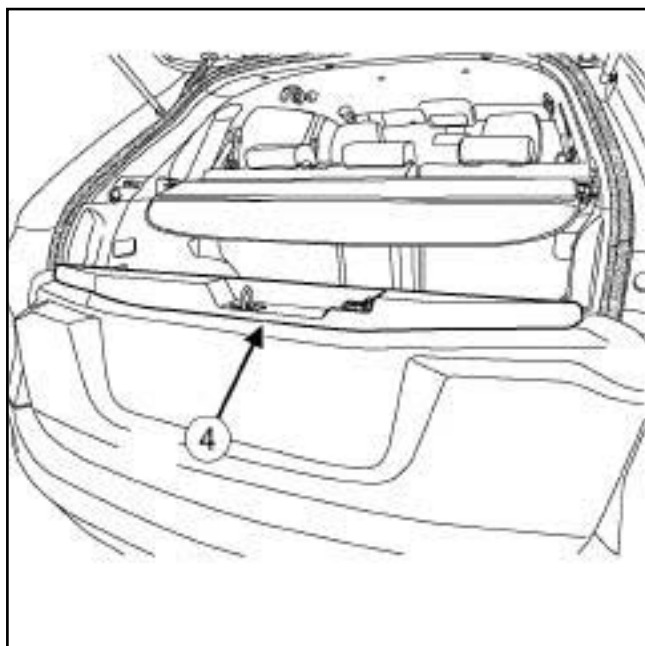

130258

- ☐ Remove the upper trim (4) from the boot chute.

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ Replace the boot chute trim clips if necessary.

II - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the upper trim (4) of the boot chute,
 - the bolt (3) ,
 - the boot chute handle,
 - bolt (2) .
- ☐ Support the boot chute trim using a suitable tool.
- ☐ Refit the trim (1) .

Tightening torques

front seat frame bolts	49 N.m
------------------------	--------

IMPORTANT

To prevent the pyrotechnic components from being permanently deactivated or triggered (airbags or pretensioners), wait for at least 3 minutes after disconnecting the battery.

IMPORTANT


Never handle the pyrotechnic systems (pretensioners or airbags) near to a source of heat or naked flame - they may be triggered.

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- ☐ Remove:
 - the complete front seat (see **75A, Front seat frames and runners, Complete front seat: Removal - Refitting**, page 75A-6) ,
 - the front seat belt buckle stalk (see **Front seat belt buckle: Removal - Refitting**) (88C, Airbag and pretensioners),
 - the head rest.


II - OPERATION FOR REMOVAL OF PART CONCERNED

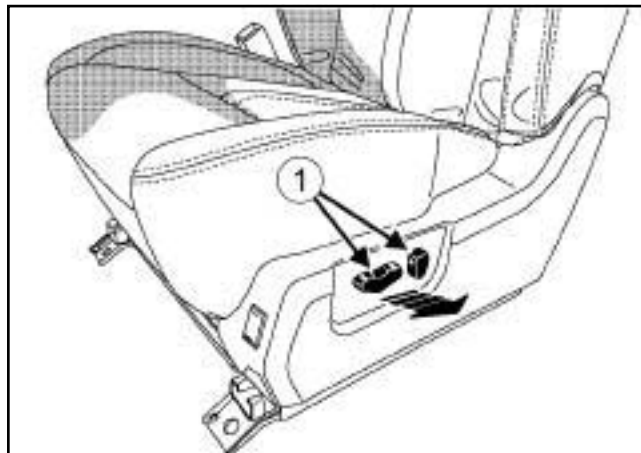

131981


- ☐ Remove the seat slide and the height adjuster switch (1) .

FRONT SEAT TYPE 01

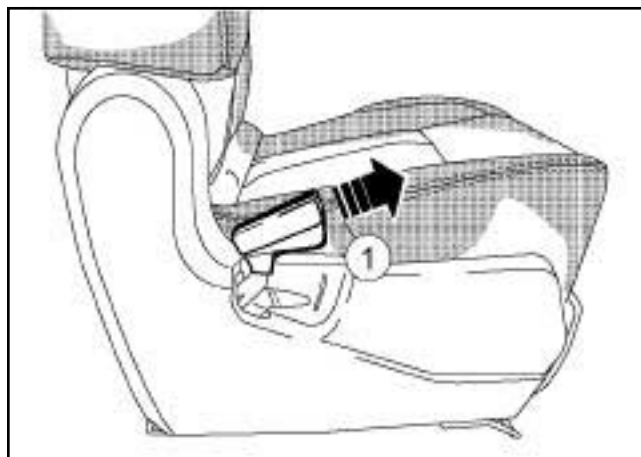


131991

- ☐ Remove the height adjuster lever (1) .

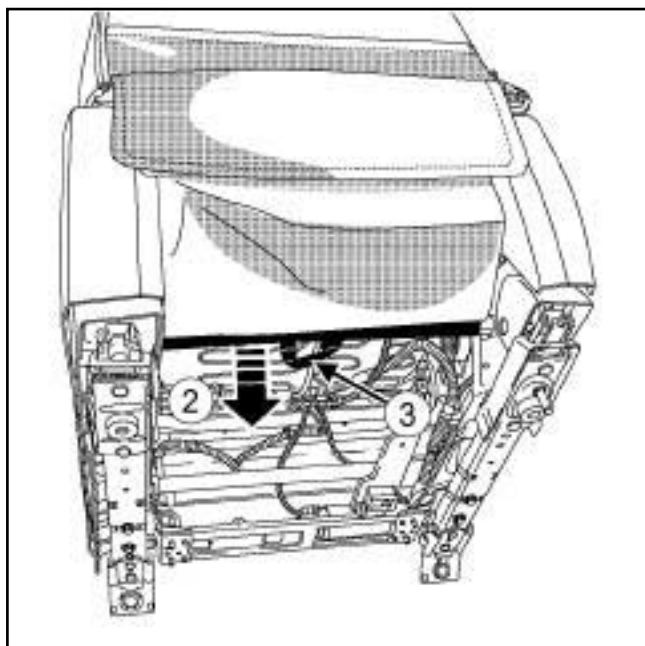


131982

- ☐ Unclip the seat trim (2) .
- ☐ Remove the retaining strip (3) .

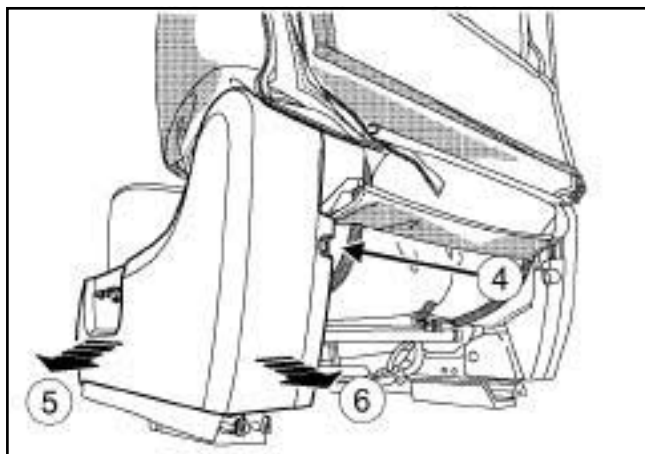


131983

- ☐ Remove the bolt (4) .
- ☐ Unclip the trim at (5) and (6) .
- ☐ Disconnect the power supply connector.

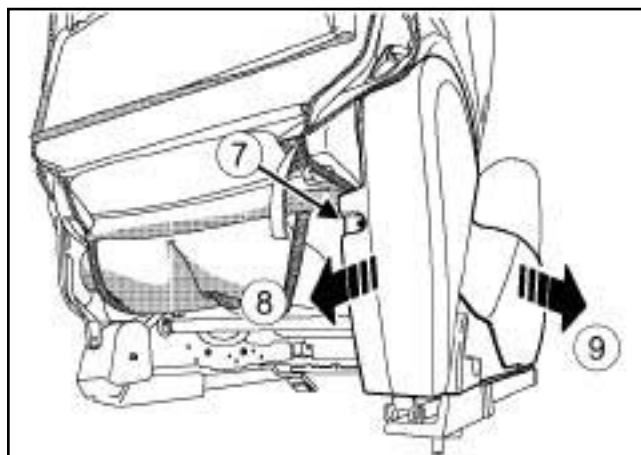


131984

- ☐ Remove the bolt (7) .
- ☐ Unclip the trim at (8) and (9) .

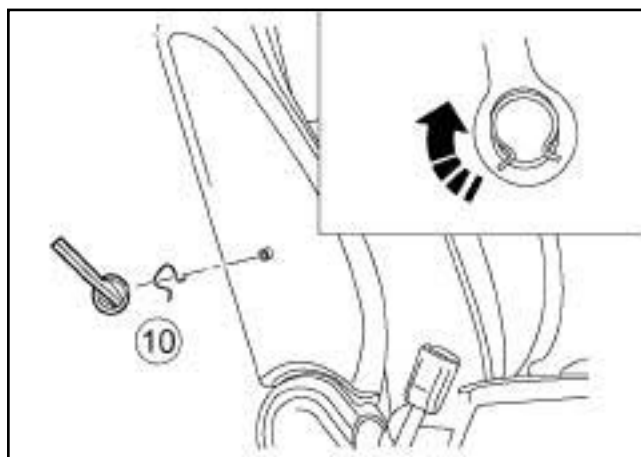


131985

- ☐ Remove the lumbar adjustment lever knob (10) .

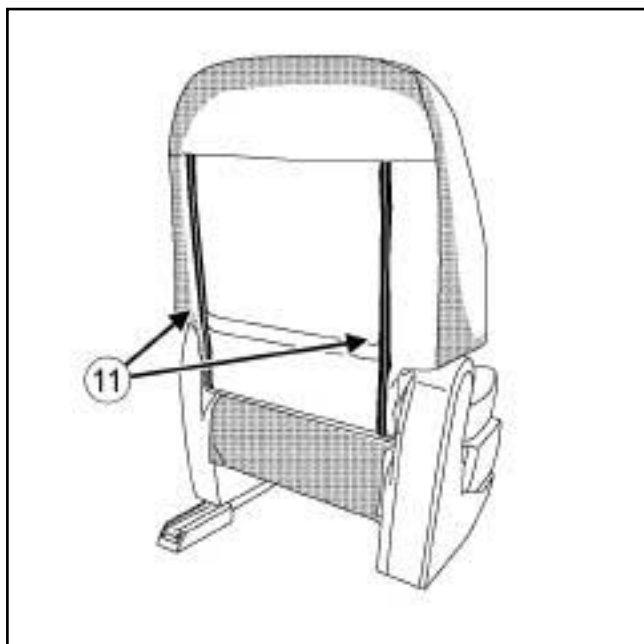


131986

- ❑ Open the zip fasteners (11) .

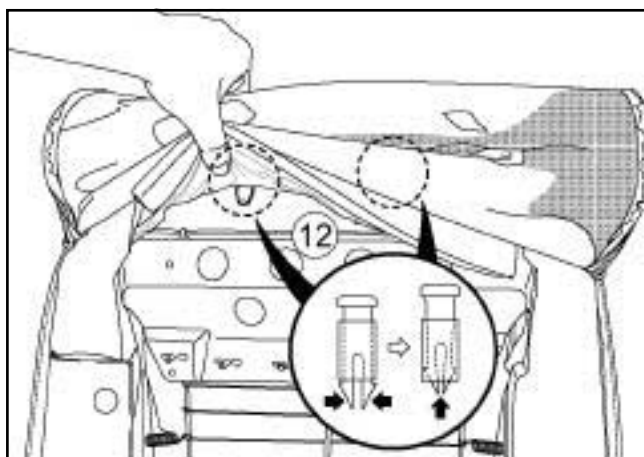


131987

- ❑ Remove the headrest guides from the support (12) .
- ❑ Separate the airbag module from the fabric of the seatback trim.
- ❑ Remove the seatback trim - foam assembly from the front seat frame.

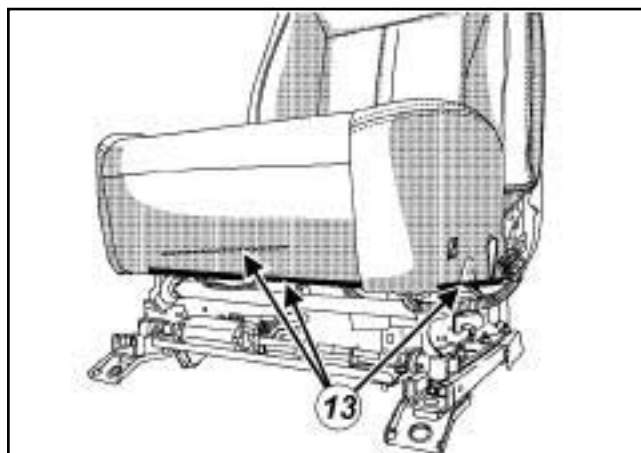

131988

- ❑ Unclip the seat base trim retaining sections (13) .

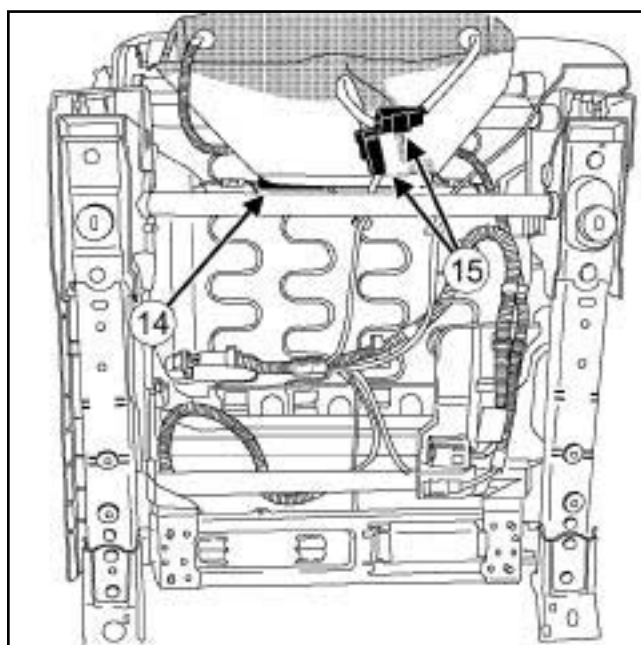

131989

- ❑ Unclip the retaining sections (14) .
- ❑ Disconnect the connectors (15) .
- ❑ Remove the seat base trim - foam assembly.



131990

- ☐ Remove:
 - the bolts (16) from the front seat frame on each side,
 - the front seat frame.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the front seat frame,
 - the front seat frame bolts.
- ☐ Torque tighten the **front seat frame bolts (49 N.m)**.
- ☐ Refit the seat base trim - foam assembly.
- ☐ Connect the connectors (15) .
- ☐ Refit:
 - the retaining sections (14) ,
 - the seat base trim retaining sections (13) ,
 - the front side airbag (chest level) (see **Front (chest) side airbag: Removal - Refitting**) (88C, Airbag and pretensioners),
 - the headrest guides on the support (12) .
- ☐ Close the zip fasteners.
- ☐ Refit:
 - the lumbar adjustment lever knob,
 - the trim ,

- the bolts (7) ,

- ☐ Connect the connectors.

- ☐ Refit:

- the trim ,
- the bolt (4) ,
- the retaining strips,
- the trim (2) ,

FRONT SEAT TYPE 01

- ☐ Refit the height adjustment lever.

- ☐ Refit the seat slide and the height adjuster switch.

II - FINAL OPERATION.

- ☐ Refit:
 - the front seat belt buckle stalk (see **Front seat belt buckle: Removal - Refitting**) (88C, Airbag and pretensioners),
 - the headrest,
 - the entire front seat (see **75A, Front seat frames and runners, Complete front seat: Removal - Refitting**, page 75A-6) .
- ☐ Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

FRONT SEAT FRAMES AND RUNNERS

Front seat control keypad: Removal - Refitting

75A

FRONT SEAT TYPE 04


REMOVAL

I - REMOVAL PREPARATION OPERATION



Note:


Move the seat as far forward as possible to remove the front seat trim.

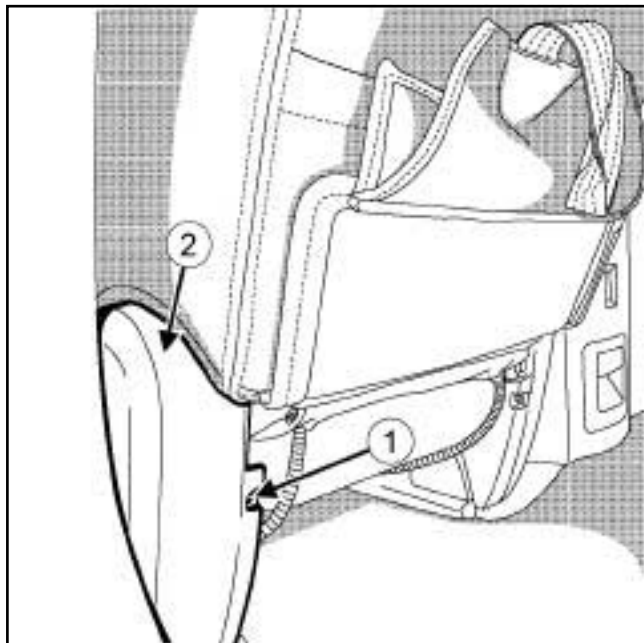

131921


- ☐ Remove the front seat trim bolt (1) .
- ☐ Unclip the front seat trim (2) .
- ☐ Disconnect the connectors.

II - OPERATION FOR REMOVAL OF PART CONCERNED

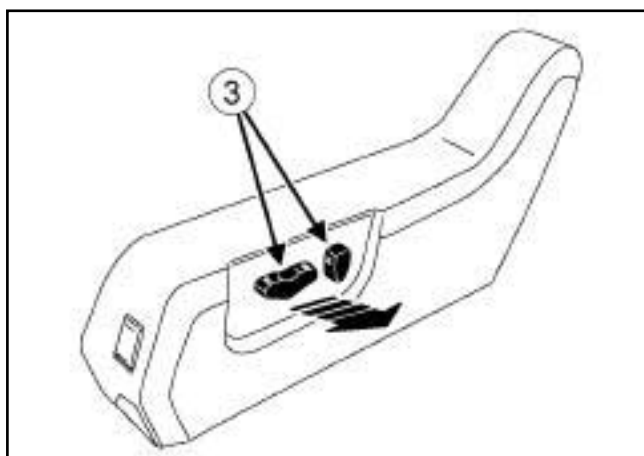

131922

- ☐ Remove the front seat control switch (3) .

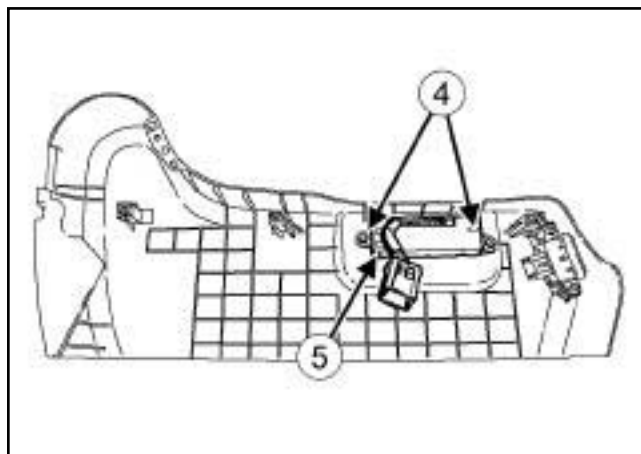

131923

- ☐ Remove:

- the bolts (4) ,
- the front seat control keypad (5) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:

- the front seat control keypad,
- the bolts,
- the front seat control switch.

II - FINAL OPERATION.

- ☐ Connect the connectors.
- ☐ Clip on the front seat trim.
- ☐ Refit the front seat trim bolt.

FRONT SEAT FRAMES AND RUNNERS

Complete front seat: Removal - Refitting

75A

Tightening torques

complete front seat bolts	40 N.m
complete front seat bolts	40 N.m

REMOVAL

I - REMOVAL PREPARATION OPERATION




IMPORTANT

To avoid any triggering at the time of an operation on or near to a pyrotechnic component (air-bags or pretensioners), wait for at least three minutes after battery disconnection.


- ❑ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

II - OPERATION FOR REMOVAL OF PART CONCERNED

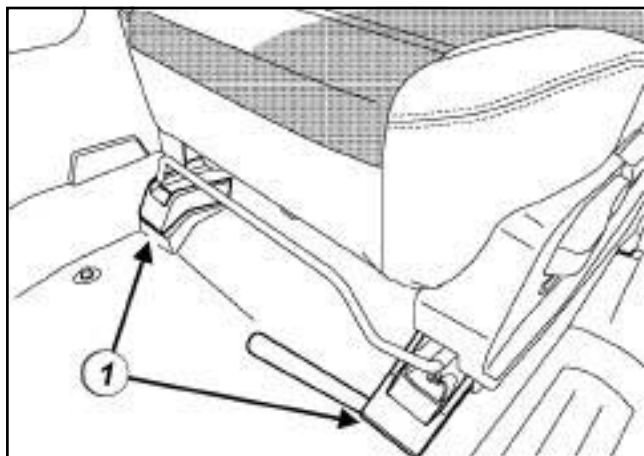


130257

- ❑ Remove the covers (1) .

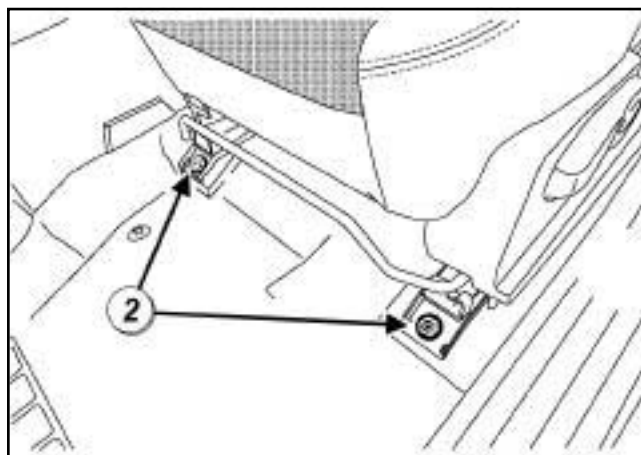

130259

- ❑ Remove the bolts (2) from the entire front seat.
- ❑ Move the seat as far forward as possible.

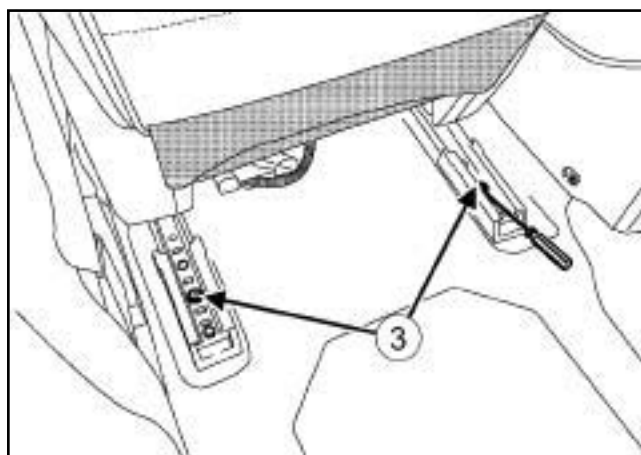

130260

- ❑ Remove the bolts (3) from the entire front seat.
- ❑ Disconnect the connectors under the seat (depending on equipment level).
- ❑ Remove the front seat.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ❑ Fit the seat, in the vehicle.
- ❑ Connect the connectors under the seat (depending on equipment level).
- ❑ Refit the bolts (3) from the complete front seat.
- ❑ Torque tighten the **complete front seat bolts (40 N.m) (3)** .
- ❑ Refit the bolts (2) from the complete front seat.
- ❑ Torque tighten the **complete front seat bolts (40 N.m) (2)** .

FRONT SEAT FRAMES AND RUNNERS

Complete front seat: Removal - Refitting

75A

☐ Move the seat back.

☐ Refit the covers.


II - FINAL OPERATION.

☐ Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

REAR SEAT FRAMES AND RUNNERS


Complete rear seat: Removal - Refitting

76A

Tightening torques 	
seatback bolts	25 N.m
seatback nuts	25 N.m
lower bolt of the rear central seat belt	49 N.m
upper bolts of the rear seat base	28 N.m
lower bolts of the rear seat base	28 N.m


REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

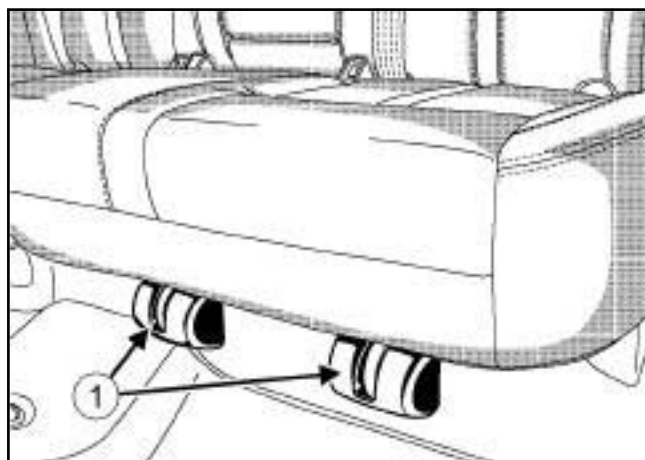


131996

- ❑ Remove the rear seat base hinge cover (1) .

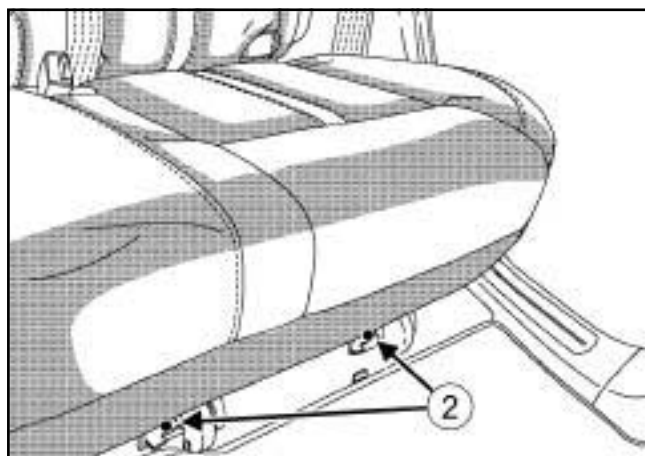


131997

- ❑ Remove the lower bolts (2) from the rear seat base.

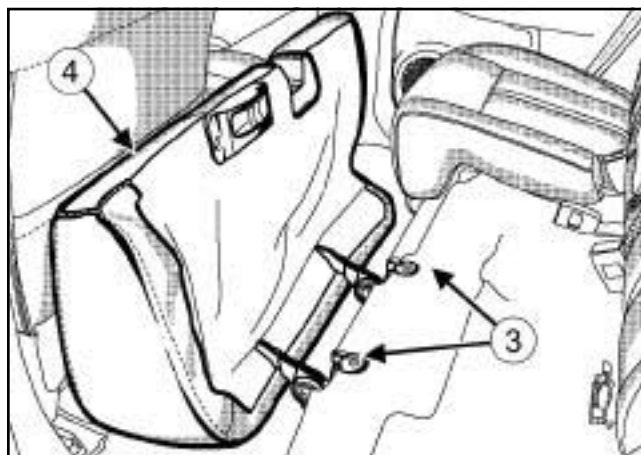

131998

- ❑ Tilt the rear seat base (4) .
- ❑ Remove:
 - the rear seat base upper bolts (3) ,
 - the rear seat base (4) .

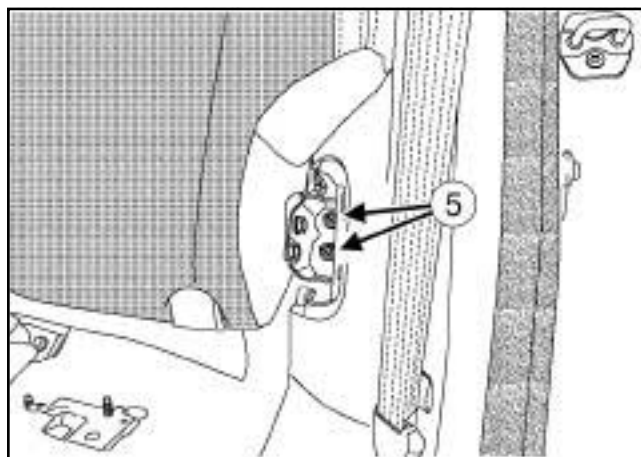


131999

- ❑ Remove:
 - the side hinge cover,
 - the seatback nuts (5) ,
 - the rear centre seat belt lower bolt.

REAR SEAT FRAMES AND RUNNERS

Complete rear seat: Removal - Refitting

76A

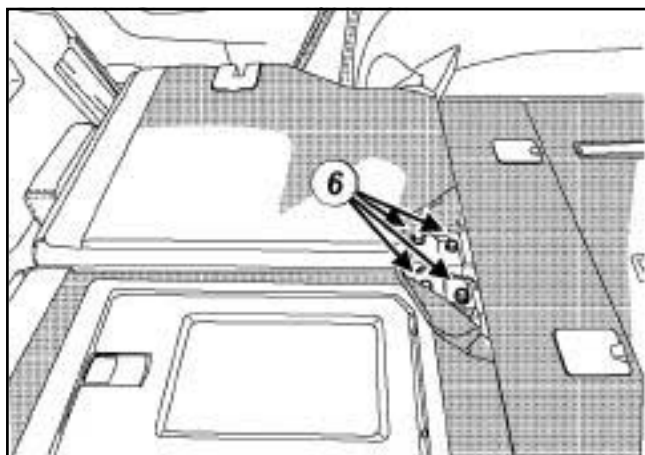

132000

❑ Remove:

- the seatback bolts (6) ,
- the seatback.

Note:

If the vehicle is equipped with the Easy Break system, partially remove the carpet in order to disconnect the cable from the control unit.

REFITTING

REFITTING OPERATION FOR PART CONCERNED

❑ Fit the seatback.

❑ Refit:

- the seatback bolts,
- the seatback nuts,
- the rear centre seat belt lower bolt.

❑ Torque tighten:

- the **seatback bolts (25 N.m)**,
- the **seatback nuts (25 N.m)**,
- the **lower bolt of the rear central seat belt (49 N.m)**.

❑ Refit:

- the side hinge cover,
- the seat base,
- the rear seat base upper bolts,
- the rear seat base lower bolts.

Note:

If the vehicle is equipped with the Easy Break system, reconnect the control unit cable.

❑ Torque tighten:

- the **upper bolts of the rear seat base (28 N.m)**,
- the **lower bolts of the rear seat base (28 N.m)**.

❑ Refit the rear seat base hinge cover.

Note:

If the vehicle is equipped with the Easy Break system, check that the system is operating correctly.

REAR SEAT FRAMES AND RUNNERS

Rear bench seatback locking: Removal - Refitting

76A

Tightening torques

rear bench seatback unlocking mechanism bolts	20 N.m
---	--------


REMOVAL

I - REMOVAL PREPARATION OPERATION

❑ Remove:

- the headrest,
- the rear centre armrest (see **79A, Seat components, Rear centre arm rest: Removal - Refitting**, page 79A-5) ,
- the rear bench seatback (see **76A, Rear seat frames and runners, Complete rear seat: Removal - Refitting**, page 76A-1) ,
- the rear bench seatback trim (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting**, page 78A-3) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

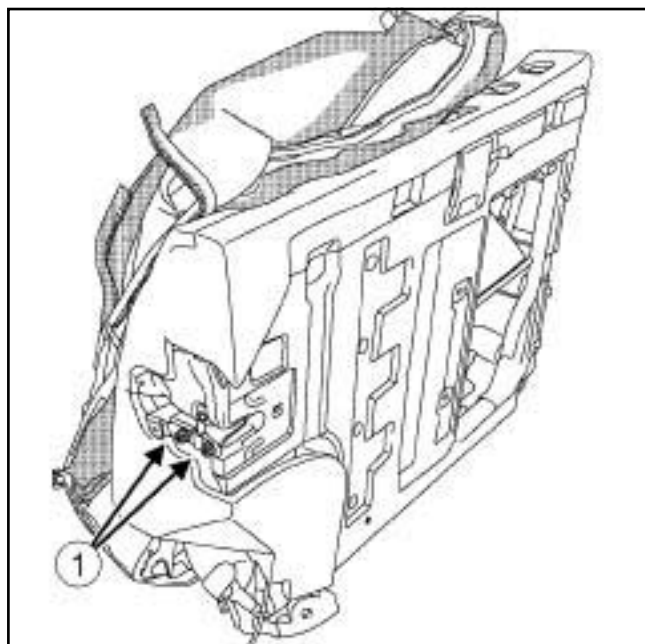

131927


❑ Remove:

- the bolts (1) ,
- the foam-cover assembly, partially.

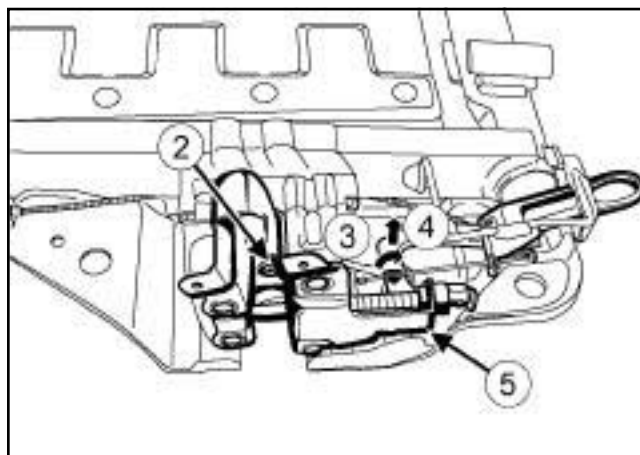

131928

- ❑ Remove the rear bench seatback unlocking mechanism bolt (2) .
- ❑ Unclip the cable hook at (3) and (4) .
- ❑ Remove the rear bench seatback unlocking mechanism (5) .

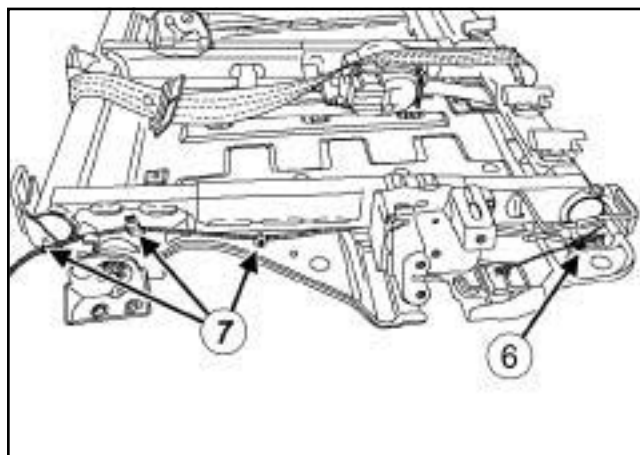

131929

- ❑ Unclip the cable at (6) .
- ❑ Remove:
 - the clips (7) ,
 - the rear bench seatback unlocking cable.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

❑ Refit:

- the clips,
- the rear bench seatback unlocking cable,
- the rear bench seatback unlocking mechanism,
- the cable hook,

- the rear bench seatback unlocking mechanism bolts **(2)** .

- ❑ Torque tighten the **rear bench seatback unlocking mechanism bolts (20 N.m)**.

- ❑ Refit:

- the foam-cover assembly,
- the bolts **(1)** .

II - FINAL OPERATION.


- ❑ Refit:

- the rear bench seatback trim (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting**, page **78A-3**) ,
- the rear bench seatback (see **76A, Rear seat frames and runners, Complete rear seat: Removal - Refitting**, page **76A-1**) ,
- the rear centre armrest (see **79A, Seat components, Rear centre arm rest: Removal - Refitting**, page **79A-5**) ,
- the head rest.

REAR SEAT FRAMES AND RUNNERS

Rear bench seat mechanism: Removal - Refitting

76A

Tightening torques 	
bolts of the rear bench seatback striker panel	40 N.m
relay nuts	25 N.m


REMOVAL

I - REMOVAL PREPARATION OPERATION

❑ Remove:

- the rear bench seatback (see **76A, Rear seat frames and runners, Complete rear seat: Removal - Refitting**, page **76A-1**) ,
- the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page **71A-17**) ,
- the C-pillar lower trim (see **71A, Body internal trim, C-pillar lower trim: Removal - Refitting**, page **71A-9**) ,
- the rear end panel lining (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page **71A-16**) ,
- the rear floor carpet.


II - OPERATION FOR REMOVAL OF PART CONCERNED

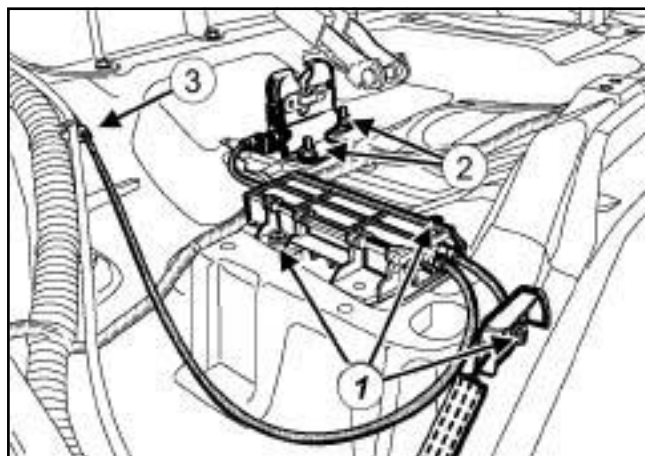

132001

❑ Remove:


- the bolts (1) ,
- the relay nuts (2) ,
- the clip (3) ,
- the relay unit and the handle,
- the cable.

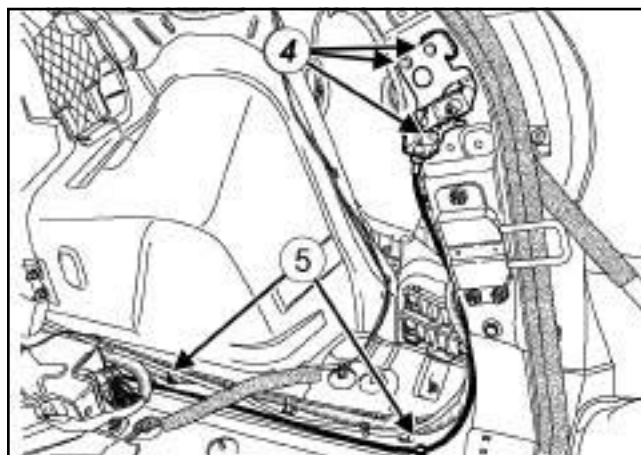

132002

❑ Remove

- the bolts (4) ,
- the clips (5) ,
- the lever unit,
- the cable.

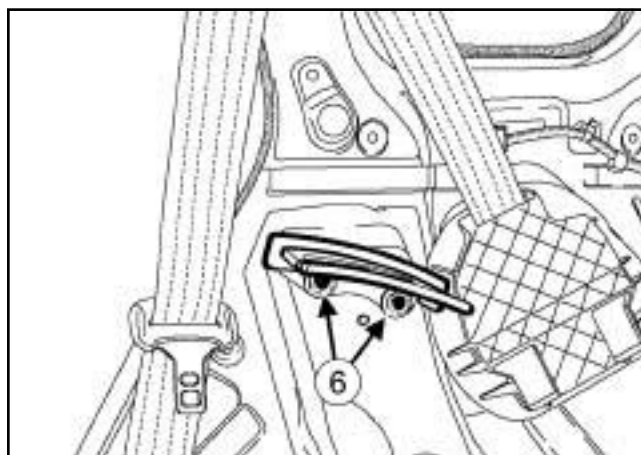

132003

❑ Remove:

- the bolts (6) of the rear bench seatback striker panel,
- the rear bench seatback striker panel.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

❑ Refit:

- the rear bench seatback striker panel,
- the bolts of the rear bench seatback striker panel.

- ❑ Torque tighten the **bolts of the rear bench seatback striker panel (40 N.m)**.

☐ Refit:

- the cable,
- the lever unit,
- the clips **(5)** ,
- the bolts **(4)** ,
- the cable,
- the relay unit and the handle,
- the clips **(3)** ,
- the bolts **(1)** ,
- the relay nuts **(2)** .

☐ Torque tighten the **relay nuts (25 N.m)**.

II - FINAL OPERATION.

☐ Refit:


- the rear floor carpet,
- the rear end panel lining (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page **71A-16**) ,
- the C-pillar lower trim (see **71A, Body internal trim, C-pillar lower trim: Removal - Refitting**, page **71A-9**) ,
- the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page **71A-17**) ,
- the rear bench seatback (see **76A, Rear seat frames and runners, Complete rear seat: Removal - Refitting**, page **76A-1**) ,

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ☐ Remove the 1/3 and 2/3 rear bench seat base (see 1/3 and 2/3 rear bench seat:Removal - Refitting) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

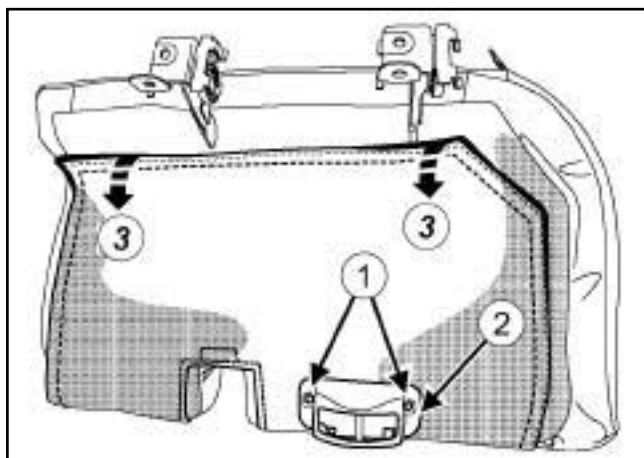


132005

- ☐ Remove:
 - the bolts (1) ,
 - the rear bench seat lock trim (2) .
- ☐ Uncover the seat base trim at (3) .

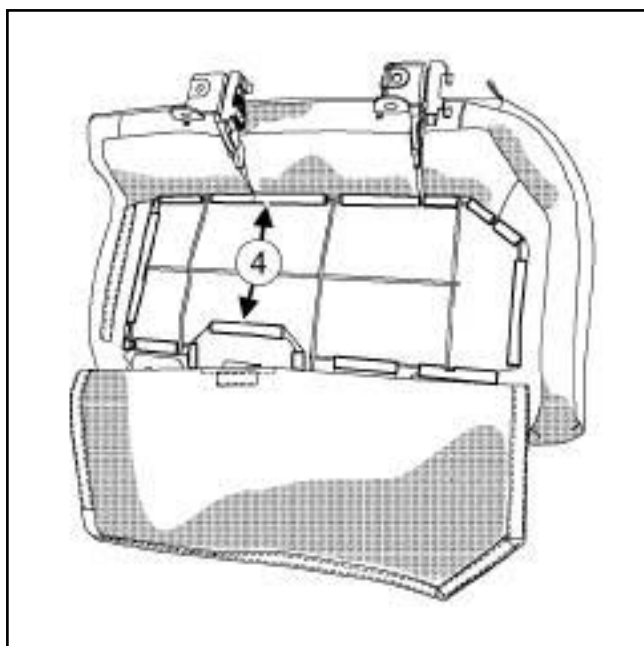


132006

- ☐ Unclip the trims at (4) .

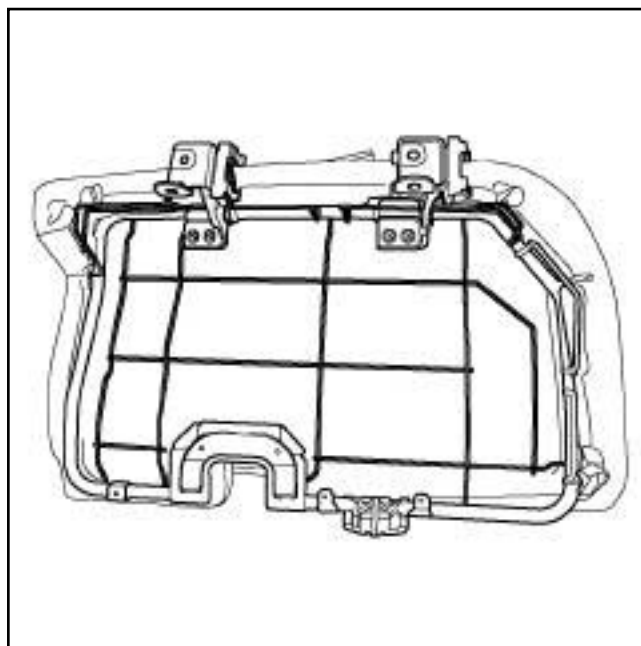

132007

- ☐ Remove the trim and foam from the seat base.

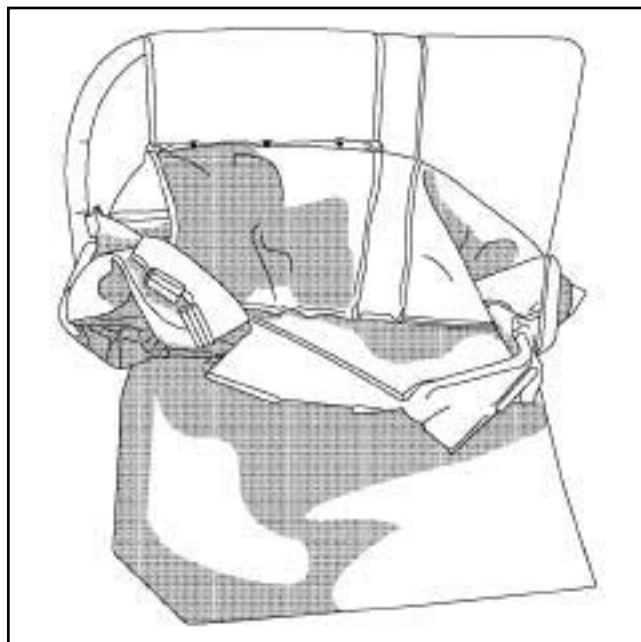

132008

- ☐ Cut the seat base trim retaining clips.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit the seat base trim on the foam.
- ☐ Check that the trim is correctly positioned on the foam.

1/3 and 2/3 rear bench seat trim: Removal - Refitting

☐ Refit:

- the foam - trim assembly on the seat base frame,
- the clips **(4)** .

☐ Cover the seat base trim.

☐ Refit:

- the rear bench seat lock trim,
- the bolts.

II - FINAL OPERATION.

- ☐ Refit the 1/3 and 2/3 rear bench seat base (see **1/3 and 2/3 rear bench seat:Removal - Refitting**) .


REMOVAL

I - REMOVAL PREPARATION OPERATION

❑ Remove:


- the headrest,
- the rear centre armrest (see 79A, **Seat components, Rear centre arm rest: Removal - Refitting**, page 79A-5) ,
- the 1/3 and 2/3 rear bench seat seatback (see 76A, **Rear seat frames and runners, Complete rear seat: Removal - Refitting**, page 76A-1) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

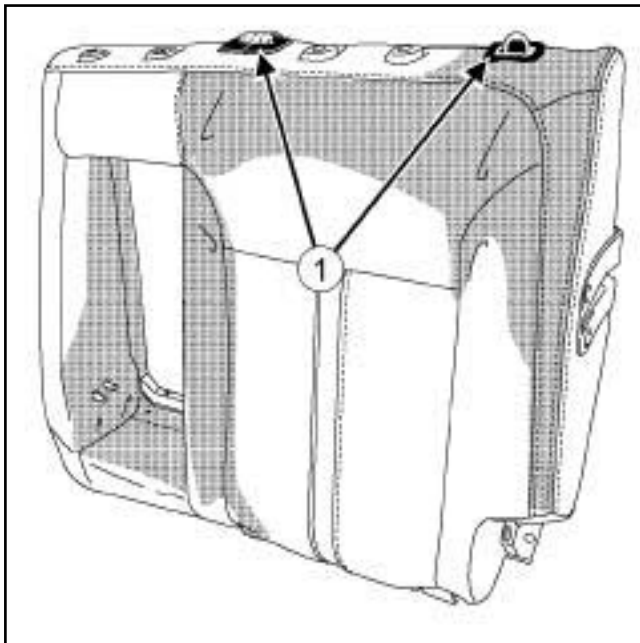

132009


❑ Remove the trim at (1) .

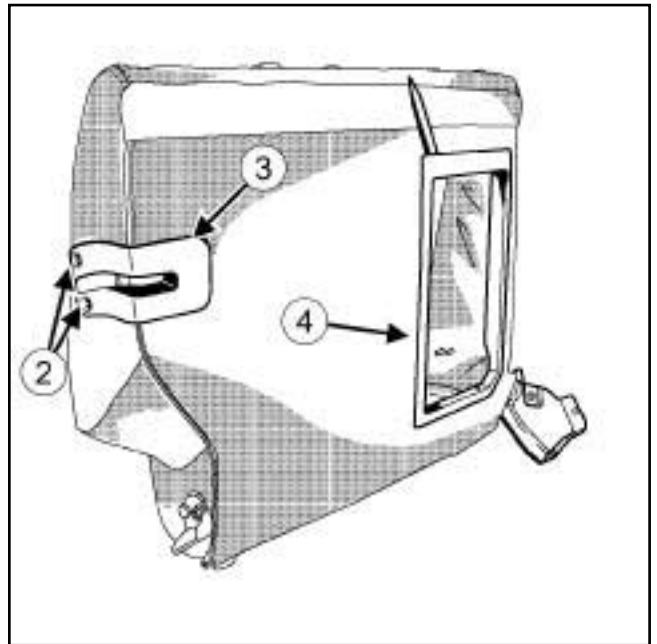

132010

❑ Remove:


- the bolts (2) ,
- the rear bench seat lock trim (3) ,
- the armrest trim (4) ,
- the bolt.

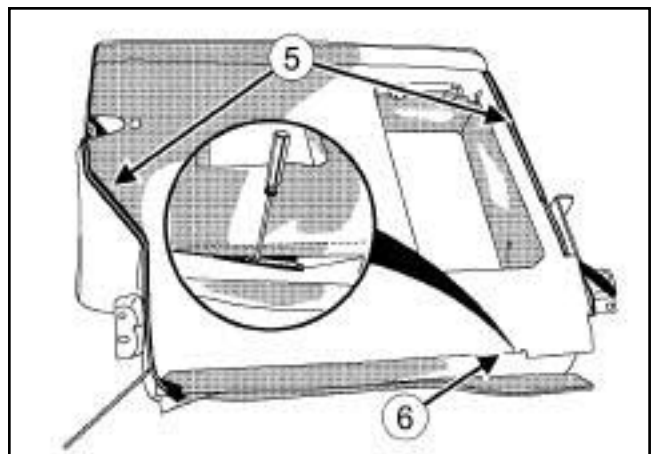

132011


❑ Open the zip fasteners (5) .

❑ Unclip the lower cover at (6) .

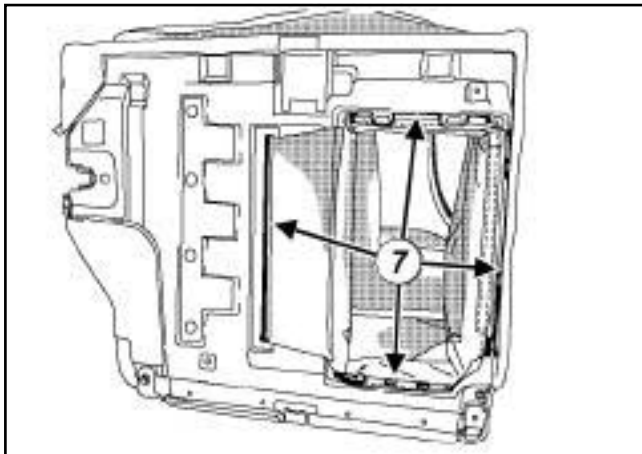

132012

- ❑ Remove the cover at (7) .

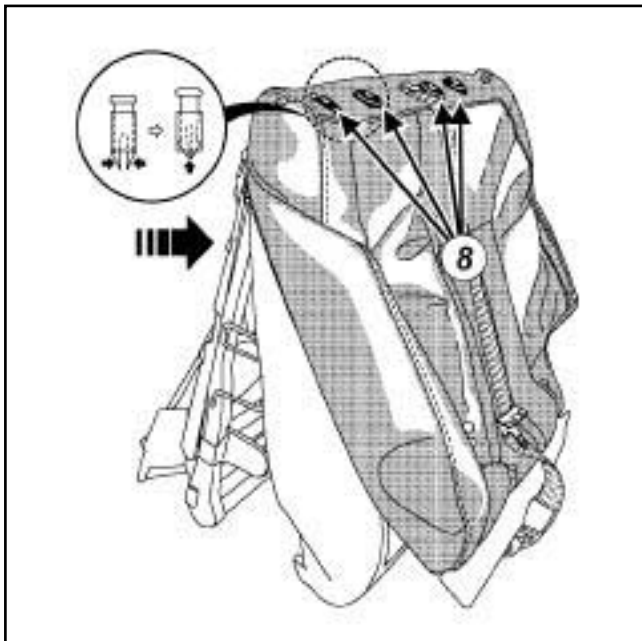

132013

- ❑ Remove:
 - the cover partially to access the headrest guides,
 - the headrest guides (8) .
- ❑ Cut the seatback trim retaining clips.
- ❑ Remove the 1/3 and 2/3 rear bench seatback trim.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ❑ Refit:
 - the 1/3 and 2/3 rear bench seatback trim,
 - clip the seatback trim onto the foam.

- ❑ Check that the trim is correctly positioned on the foam.
- ❑ Refit:
 - the headrest guides,
 - the cover,
 - the cover (7) ,
 - the lower cover (6)
- ❑ Close the zip fasteners.
- ❑ Refit:
 - the bolt,
 - the armrest trim,
 - the rear bench seat lock trim,
 - the bolts (2) ,
 - the trim (1) .

II - FINAL OPERATION.

- ❑ Refit:
 - the 1/3 and 2/3 rear bench seatbacks (see 76A, **Rear seat frames and runners, Complete rear seat: Removal - Refitting**, page 76A-1) ,
 - the rear centre armrest (see 79A, **Seat components, Rear centre arm rest: Removal - Refitting**, page 79A-5) ,
 - the head rest.

SEAT COMPONENTS


Seatback tray: Removal - Refitting

79A

FRONT SEAT TYPE 02

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

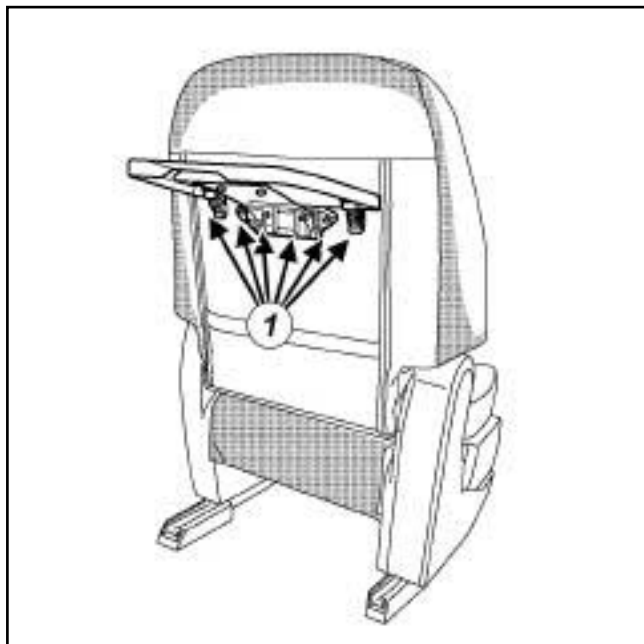

131926

☐ Remove:

- the nuts (1) ,
- the seatback table.

REFITTING

REFITTING OPERATION FOR PART CONCERNED

☐ Refit:

- the seatback table,
- the nuts (1) .

IMPORTANT


To prevent the pyrotechnic components from being permanently deactivated or triggered (airbags or pretensioners), wait for at least 3 minutes after disconnecting the battery.

IMPORTANT

Never handle the pyrotechnic systems (pretensioners or airbags) near to a source of heat or naked flame - they may be triggered.


REMOVAL**I - REMOVAL PREPARATION OPERATION**

- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- ☐ Remove:
 - the complete front seat (see **75A, Front seat frames and runners, Complete front seat: Removal - Refitting**, page 75A-6) ,
 - the seatback table (see **79A, Seat components, Seatback tray: Removal - Refitting**, page 79A-1) ,
 - the front seat belt buckle stalk (see **Front seat belt buckle: Removal - Refitting**) (88C, Airbag and pretensioners),
 - the head rest.

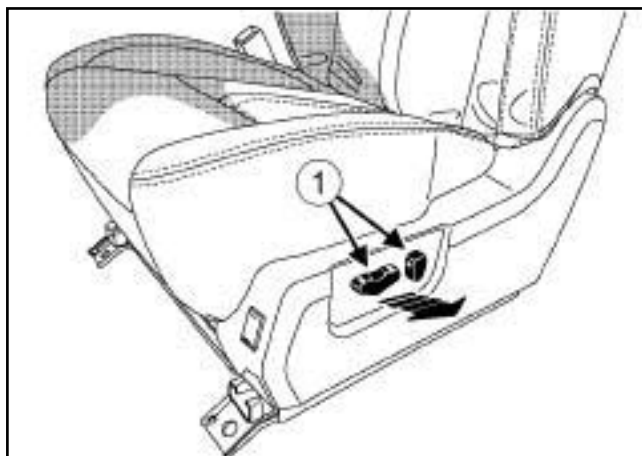II - OPERATION FOR REMOVAL OF PART CONCERNED


132014

- ☐ Remove the seat slide and the height adjuster switch (1) .

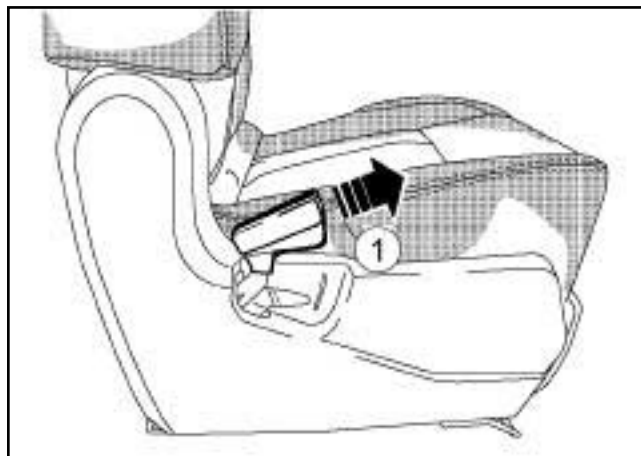FRONT SEAT TYPE 01


132015

- ☐ Remove the height adjuster lever (1) .

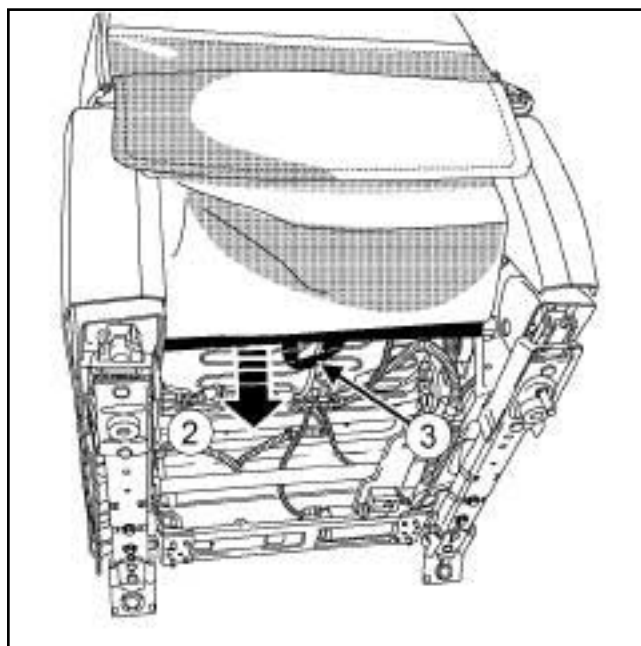


132016

- ☐ Unclip the seat trim (2) .
- ☐ Remove the retaining strip (3) .

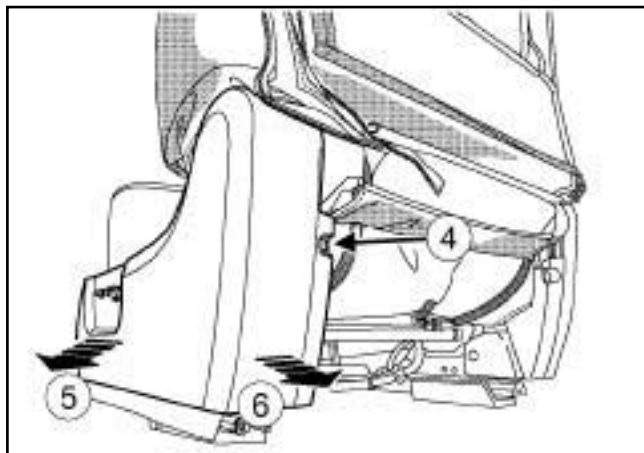


132017

- ☐ Remove the bolt (4) .
- ☐ Unclip the trim at (5) and (6) .
- ☐ Disconnect the connector.

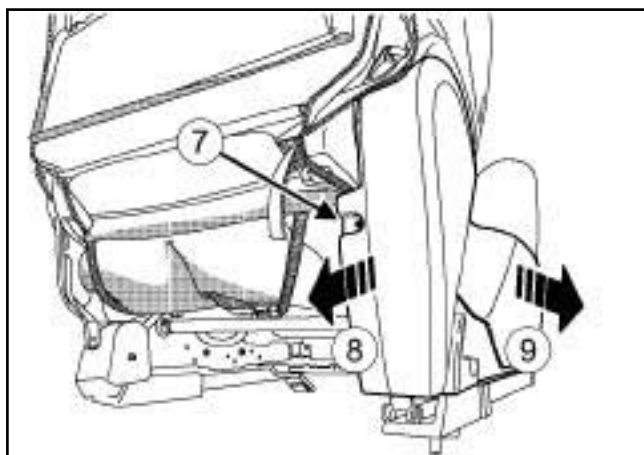


132018

- ☐ Remove the bolt (7) .
- ☐ Unclip the trim at (8) and (9) .

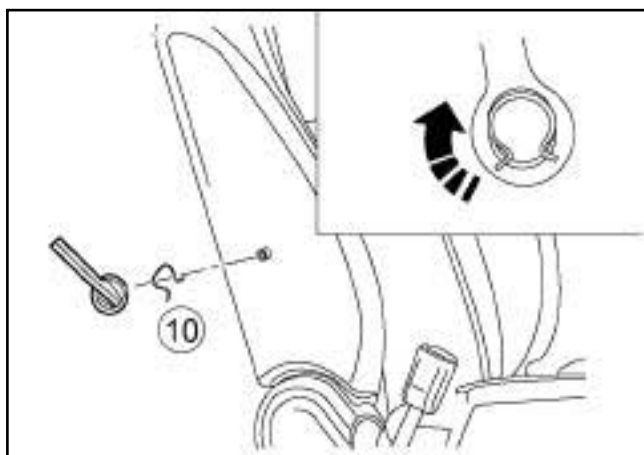


132019

- ☐ Remove the lumbar adjustment lever knob (10) .

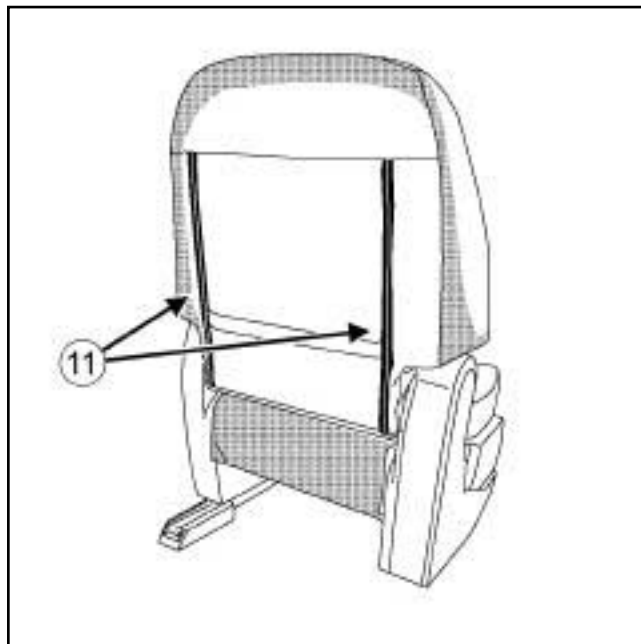

132020

- ☐ Open the zip fasteners (11) .

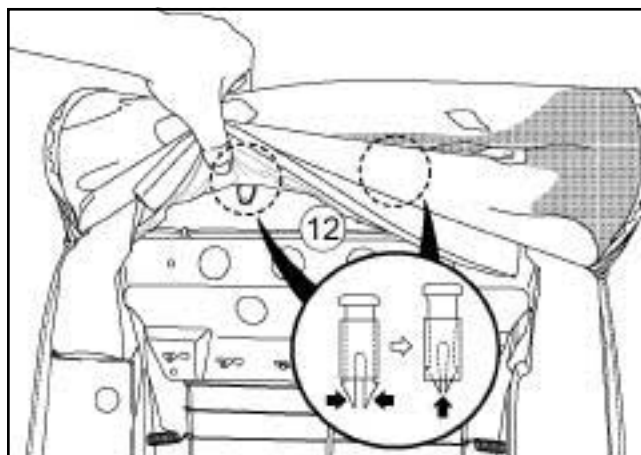

132021

- ☐ Extract the headrest guides (12) from the support.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit the headrest guides on the support.
- ☐ Close the zip fasteners.
- ☐ Refit:
 - the lumbar adjustment lever knob,
 - the trim ,
 - the bolt (7) ,
 - the connector,

Front seat headrest guide: Removal - Refitting

- the trim ,
- the bolt **(4)** ,
- the retaining strip,
- the seat trim **(2)** .

FRONT SEAT TYPE 01

- ☐ Refit the height adjustment lever.

- ☐ Refit the seat slide and the height adjuster switch.

II - FINAL OPERATION.

- ☐ Refit:
 - the headrest,
 - the front seat belt buckle stalk (see **Front seat belt buckle: Removal - Refitting**) (88C, Airbag and pretensioners),
 - the seatback table (see **79A, Seat components, Seatback tray: Removal - Refitting**, page 79A-1)
 - ,
 - the entire front seat (see **75A, Front seat frames and runners, Complete front seat: Removal - Refitting**, page 75A-6) .
- ☐ Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).


SEAT COMPONENTS

Rear centre arm rest: Removal - Refitting

79A

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

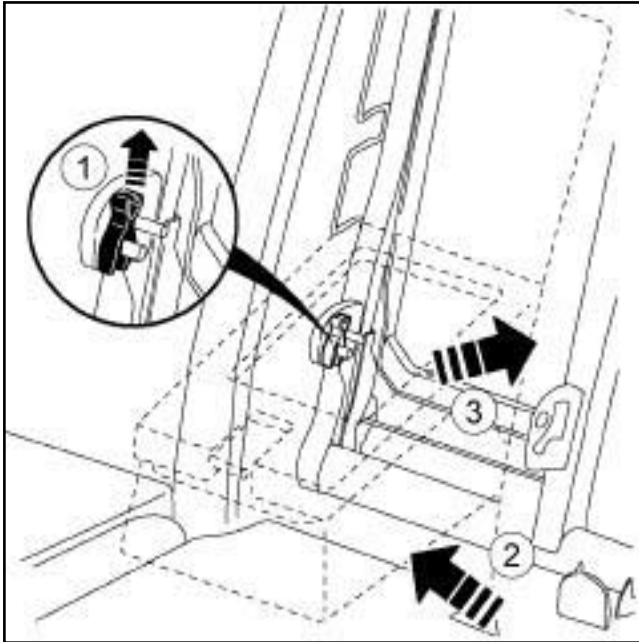

131924

❑ Remove:

- the rear central armrest clip (1) ,
- the rear central armrest at (2) and (3) .

REFITTING

REFITTING OPERATION FOR PART CONCERNED

❑ Refit:

- the rear central armrest,
- the rear central armrest clip.

Rear bench seat headrest guide: Removal - Refitting


REMOVAL

I - REMOVAL PREPARATION OPERATION

☐ Remove:

- the headrest,
- the rear bench seatback trim, partially (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting, page 78A-3**).

II - OPERATION FOR REMOVAL OF PART CONCERNED

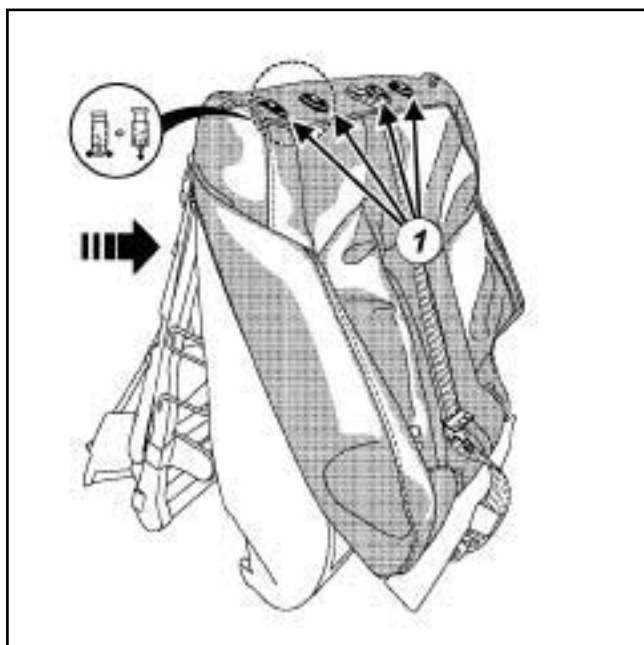

131925

- ☐
- Extract the headrest guides (1) from the support.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐
- Refit the new headrest guides on the support.

II - FINAL OPERATION.

☐ Refit:

- the rear bench seatback trim (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting, page 78A-3**),
- the head rest.