

plano fusibles interiores amarok

F1 - 10A	F10 - 5A	F19 - 15A	F28 - 15A
F2 - 10A	F11 - 15A	F20 - 15A	F29 - 10A
F3 - 10A	F12 - 10A	F21 - 5A	F30 - 10A
F4 - 15A	F13 - 5A	F22 - 5A	F31
F5 - 5A	F14 - 10A	F23 - 10A	F32 - 10A
F6 - 5A	F15 - 5A	F24 - 10A	F33 - 5A
F7 - 5A	F16 - 10A	F25 - 10A	F34 - 15A
F8 - 5A	F17 - 5A	F26 - 5A	F35 - 15A
F9 - 10A	F18 - 5A	F27 - 5A	F36 - 5A

MINI FUSE 1-36

F1	10A	Basic	ABS/ESP Module (A8)
			ESP Switch (A4)
F2	10A	Basic	Dual Washer Pump Switch (A22)
F3	10A	Basic	Reverse Gear Switch
F4	15A	Basic	BCM Side Marker/Stop Lamps
F5	5A	Motor	Luftmassenm. (Diesel)
F6	5A	Optional	Trailer Socket Module
F7	5A	Basic	Key Signal
		Optional	Radiovorbereitung
		Optional	ELT. Interface (1-A6)
F8	5A	Basic	Ignition switch
F9	10A	Basic	Airbag Module
			Airbag Module
F10	5A	Basic	ECU (KL15)
			Luftmassenm. (Otto)
F11	15A	Optional	Differential Lock Control Unit (A18)
F12	10A	Basic	Common Rail Valves (Diesel)
			Taktventil (Otto)
F13	5A	Basic	AGR/EPW Valves (Diesel)
F14	10A	Optional	Wasserumwälpumpe (Diesel)
	15A	Optional	Hochdruckpumpe (Otto)
F15	5A	Basic	Nachlaufpumpe Relais (Contact)
F16	10A	Basic	Rear Fog Lamps
F17	5A	Basic	RH Position Lamps
F18	5A	Basic	LH Position Lamps
		Optional	ELT. Interface (1-A10)
F19	15A	Optional	BCM Power Mirror Heater
F20	15A	Basic	BCM Electronic (B39)
F21	5A	Basic	BCM Dome Lamp
F22	5A	VTs	Vehicle Tracking System
F23	10A	Basic	ECU (KL30)
F24	10A	Optional	Sirene
F25	10A	Basic	Entlüft. Heizrohr.
F26	5A	Basic	TFL Lamp RH
F27	5A	Basic	TFL Lamp RH
F28	15A	Basic	License Plates / 58d
F29	10A	Basic	LH Low Beam
		Optional	ELT. Interface (1-A4)
F30	10A	Basic	LH High Beam
		Basic	Cluster (A14)
		Optional	ELT. Interface (1-A8)
F31			
F32	10A	Basic	RH High Beam
		Optional	ELT. Interface (2-A1)
F33	5A	Optional	Power Mirror Switch
F34	15A	Optional	ECU Supply KL.87 (Otto)
F35	15A	Basic	Lambdasonde (Diesel)
			Lambdasonde vor KAT (Otto)
			Lambdasonde nach KAT (Otto)
F36	5A	Basic	Stg. Gluehstift (A6)
			Cooling Control Unit
			Nachlaufpumpe Relay Coil
			EKP Relais Coil (Diesel)
			Motor Relay Coil (Otto)
			Clutch Pedal Switch

F37 - 20A	F46 - 25A	F55 - 15A	F64 - 40A
F38 - 15A	F47 - 20A	F56 - 25A	F65 - 15A
F39 - 25A	F48 - 20A	F57 - 30A	F66 - 30A
F40 - 25A	F49 - 20A	F58	F67 - 30A
F41 - 25A	F50 - 20A	F59 - 20A	F68
F42 - 15A	F51 - 20A	F60 - 5A	F69 - 15A
F43 - 25A	F52 - 15A	F61 - 5A	F70 - 5A
F44 - 30A	F53 - 20A	F62 - 30A	F71 - 25A
F45 - 15A	F54 - 15A	F63 - 10A	F72 - 10A

MIDI FUSE 37-72

F37	20A	Optional	Ignition Coil (Otto)
F38	15A	Optional	12V Power Supply (Panel)
F39	25A	Optional	Trailer Socket Module (see fuse HSB-F6)
F40	25A	Optional	Trailer Socket Module (see fuse HSB-F6)
F41	25A	Optional	Trailer Socket Module (see fuse HSB-F6)
F42	15A	Basic	Differential Lock Control Unit
			Cluster (A31)
			TOG Lang
			Steering Column Switch (A6)
			Brake Pedal Sensor
			Steering Column Switch (A28)
			Transfer Case Control Unit
			A/C Pressure Sensor
			Diagnose (A1)
F43	25A	Basic	BCM Front Wiper
F44	30A	Basic	BCM Rear Window Heater
F45	15A	Basic	Cluster
			Diagnose
			Climatronic Gebläseregler (A1)
			Climatronic Klimaanlage (A1)
			Climatic SG (A19)
			Steering Column Switch (A5)
F46	25A	Optional	Transfer Case Control Unit
F47	20A	Basic	BCM Horn
F48	20A	Basic	Front Left Window Lift Module
F49	20A	Basic	Front Right Window Lift Module
F50	20A	Basic	Rear Left Window Lift Module
F51	20A	Basic	Rear Right Window Lift Module
F52	15A	Basic	12V Power Supply (Center Console)
F53	20A	Basic	Front Fog Lamps
		Optional	ELT. Interface (1-A2)
F54	15A	Basic	Cigar Lighter
F55	15A	Basic	RH Low Beam
			LWR
		Optional	ELT. Interface (1-A5)
F56	25A	Basic	Stg. Kraftstoffpumpe (Otto)
F57	30A	Optional	Seat Heater Switch LH
			Seat Heater Switch RH
			Seat Heater Module
F58			
F59	20A	Steckdose	Steckdose in Cargo Bay
F60	5A	AHK	T-Piece
F61	5A	AHK	T-Piece
F62	30A	Optional	Additional Heater Unit (B1)
			Dachdisplay (A13)
			Funkpfaenger (A1)
			Add. Heater Relay (A7) - Wasserumwälpzu
F63	10A	Optional	Cargo Box Lamp
F64	40A	Basic	Blower Motor
			Blower Motor Unit
F65	15A	Basic	ECU
F66	30A	Basic	BCM Door Lock
F67	30A	Basic	Radio Navigation
			Radio Navigation
F68			
F69	15A	Optional	ELT. Interface (1-A1)
F70	5A	Optional	ELT. Interface (1-A9)