

## FUSES

### ENGINE COMPARTMENT FUSE BOX

Fuse # - Amp - Color - Circuit

- 1 - 80 - Black - Main power
- 2 - 60 - Yellow - Engine cooling fan
- 3 - 60 - Yellow - ABS braking system, Heater blower motor
- 4 - 20 - Yellow - Daytime running lights
- 5 - 15 - Light Blue - Fog lamp
- 6 - Not used
- 7 - 20 - Yellow - ABS system
- 8 - Not used
- 9 - 20 - Light Blue - ECU
- 10 - 20 - Light Blue - Ignition switch
- 11 - 3 - Violet - ECU memory
- 12 - 15 - Light Blue - Horn, Hazard flasher warning system
- 13 - 20 - Yellow - Oxygen sensor
- 14 - 15 - Light Blue - Fuel pump
- 15 - 10 - Red - Low beam, passenger side
- 16 - 10 - Red - Low beam, driver's side
- 17 - 10 - Red - High beam, passenger side
- 18 - 10 - Red - High beam, driver's side

### PASSENGER COMPARTMENT FUSE BOX

Fuse # - Amp - Color - Circuit

- 19 - Not used
- 20 - 10 - Black - Wiper motors (circuit breaker)
- 21 - 40 - Orange - Power windows
- 22 - 7.5 - Brown - ABS module
- 23 - 15 - Light Blue - Backup lights
- 24 - 15 - Light Blue - Brake lights
- 25 - 20 - Yellow - Door locks
- 26 - 7.5 - Brown - Main light
- 27 - 15 - Light Blue - Cigarette lighter
- 28 - 30 - Light Green - Electric seats
- 29 - 30 - Light Green - Rear window defroster
- 30 - 7.5 - Brown - Engine management system
- 31 - 7.5 - Brown - Instrument panel illumination
- 32 - 7.5 - Brown - Radio
- 33 - 7.5 - Brown - Parking lamps - drivers side
- 34 - 7.5 - Brown - Interior lights, electric side mirrors, clock
- 35 - 7.5 - Brown - Parking lights - passenger side
- 36 - 10 - Red - Air bag
- 37 - 30 - Light Green - Heater blower motor
- 38 - Not used

## RELAYS

### ENGINE COMPARTMENT FUSE BOX

Relay - Circuit

R1 - Daytime running lights

R2 - Radiator fan, high speed

R3 - Air conditioning

R4 - Air conditioning clutch

R5 - Radiator fan, low speed

R6 - Starter solenoid

R7 - Horn

R8 - Fuel pump

R9 - Headlight, low beam

R10 - Headlight, high beam

R11 - ECU module

D1 - Reverse voltage protection

### PASSENGER COMPARTMENT FUSE BOX

Relay - Circuit

R12 - Interior lighting

R13 - Rear window defroster

R14 - Heater blower motor

R15 - Wiper motor

R16 - Ignition

D2 - Reverse voltage protection

## AUXILIARY RELAYS (outside of fuse boxes)

Relay - Circuit - Location

R18 - One Touch window switch (driver only) - Drivers door

R20 - Not used

R21 - Not used

R22 - Foglights - Module bracket

R23 - Turn signals - Steering column

R24 - Panic alarm - drivers side, Door lock module bracket

R25 - Panic alarm - passenger side, Door lock module bracket

R26 - Not used