

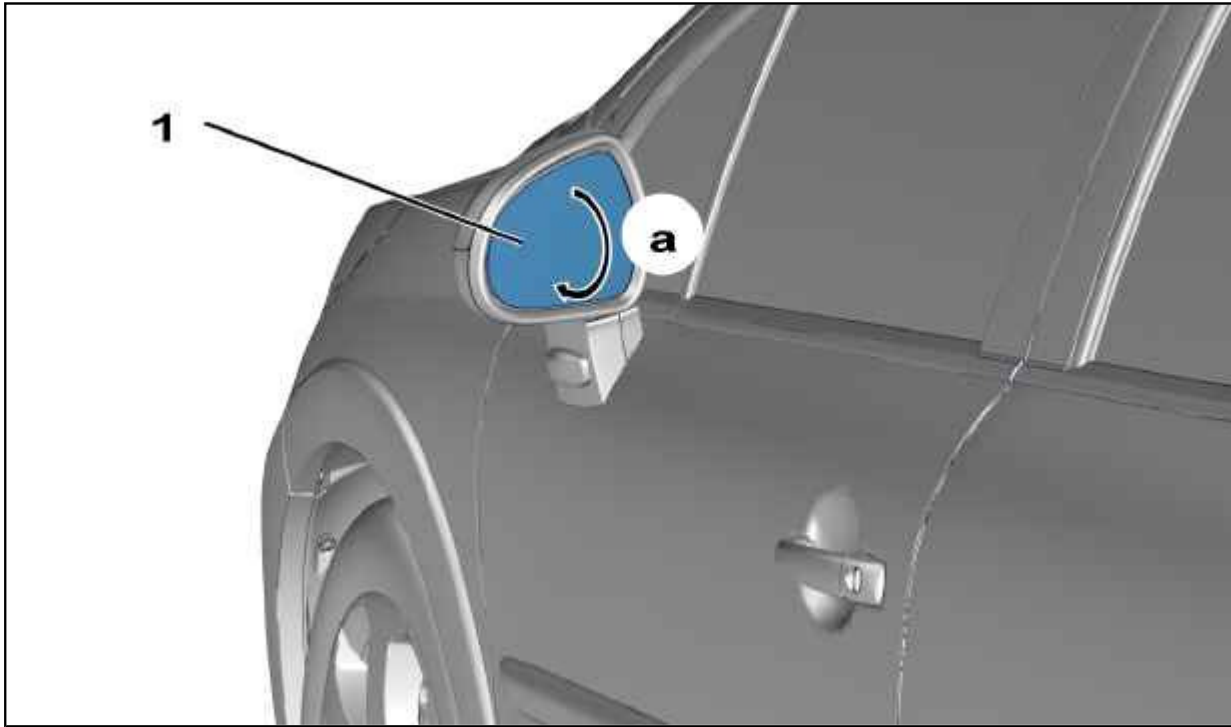
REMOVING - REFITTING : EXTERIOR REAR VIEW MIRROR GLASS**1. Removing**

Figure : C4CM0EVD

Adjust the position of the exterior rear view mirror glass (1)(To the lowest position) (At "a").

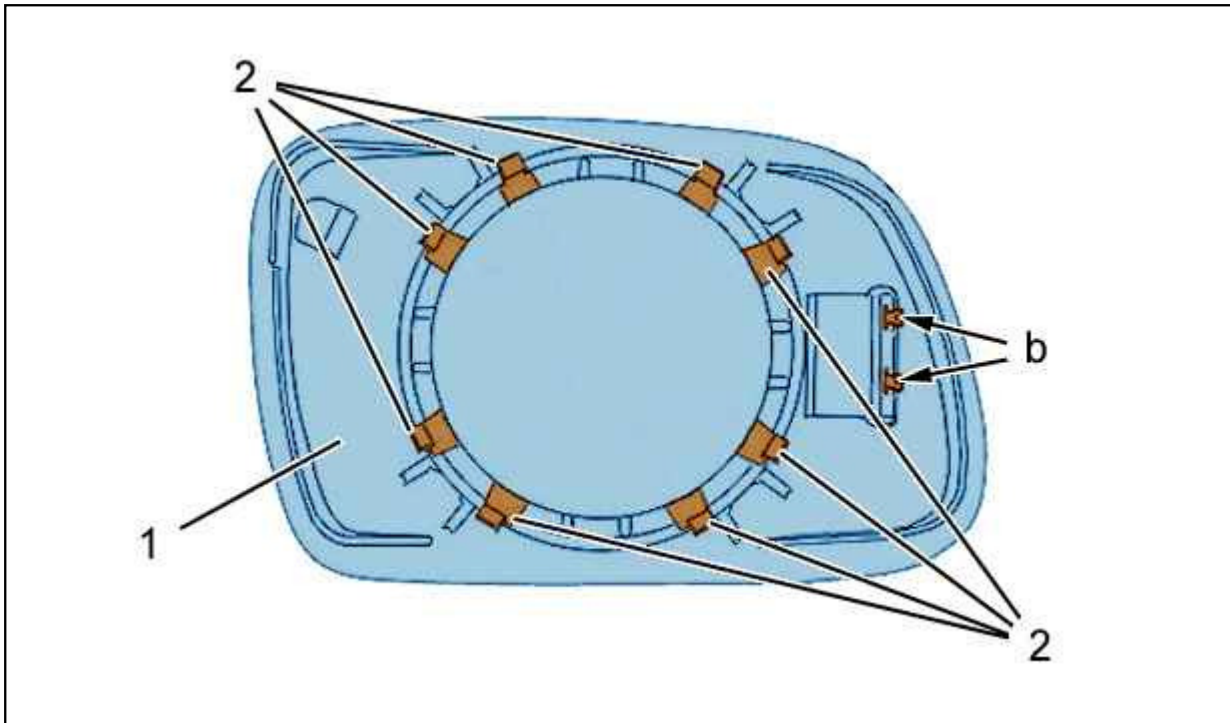


Figure : C4CM0EWD

Pass your hand behind the exterior rear view mirror glass (1) and detach the fixing lugs (2) from the exterior rear view mirror glass.

Disengage the glass from the exterior rear view mirror (1).

Unplug : The electrical connections (as "b") (According to equipment).

Remove : The exterior rear view mirror glass (1).

2. Refitting

Proceed in the reverse order to removal.

Check the electrical operation of the exterior rear view mirror(According to equipment).