

REMOVING - REFITTING : POLLEN FILTER

AUTOMATIC AIR CONDITIONING OR SINGLE AIR CONDITIONING

1. Removing

N.B. : The pollen filter is situated in the engine compartment (On the right-hand side (/)) .

CAUTION : The filter element is made up of 2 pollen filters of different sizes.

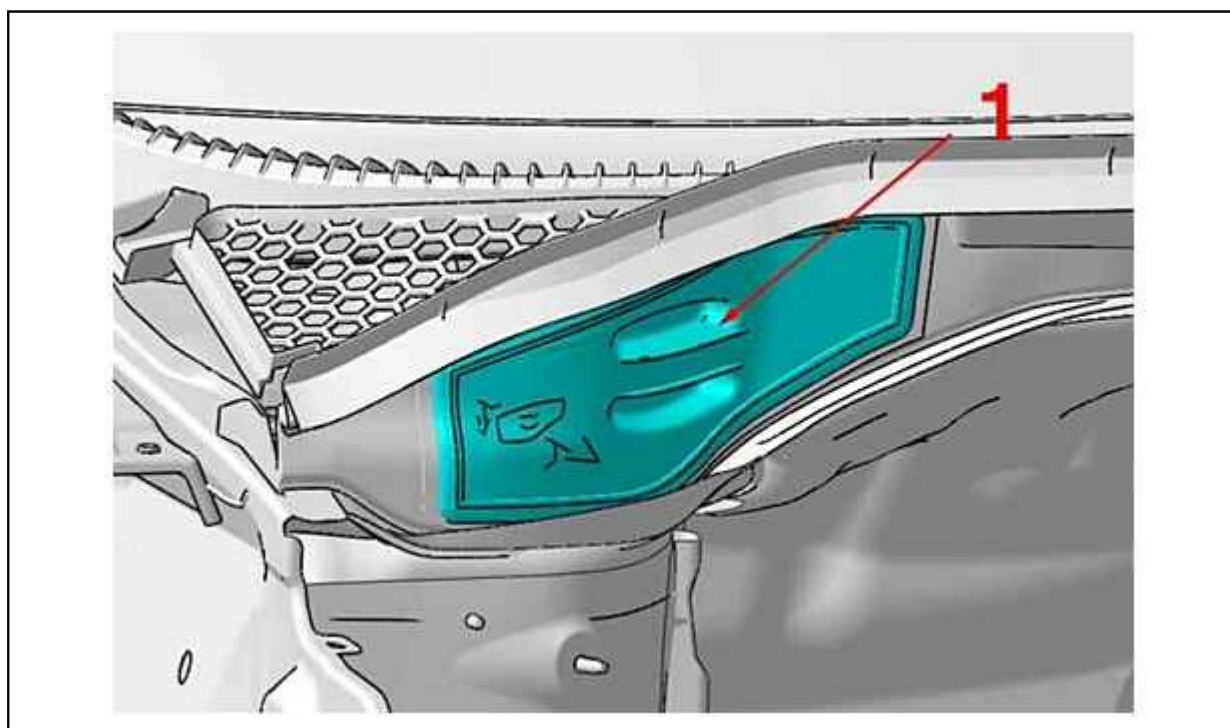


Figure : C5HKFHXD

Remove the plastic cover (1).

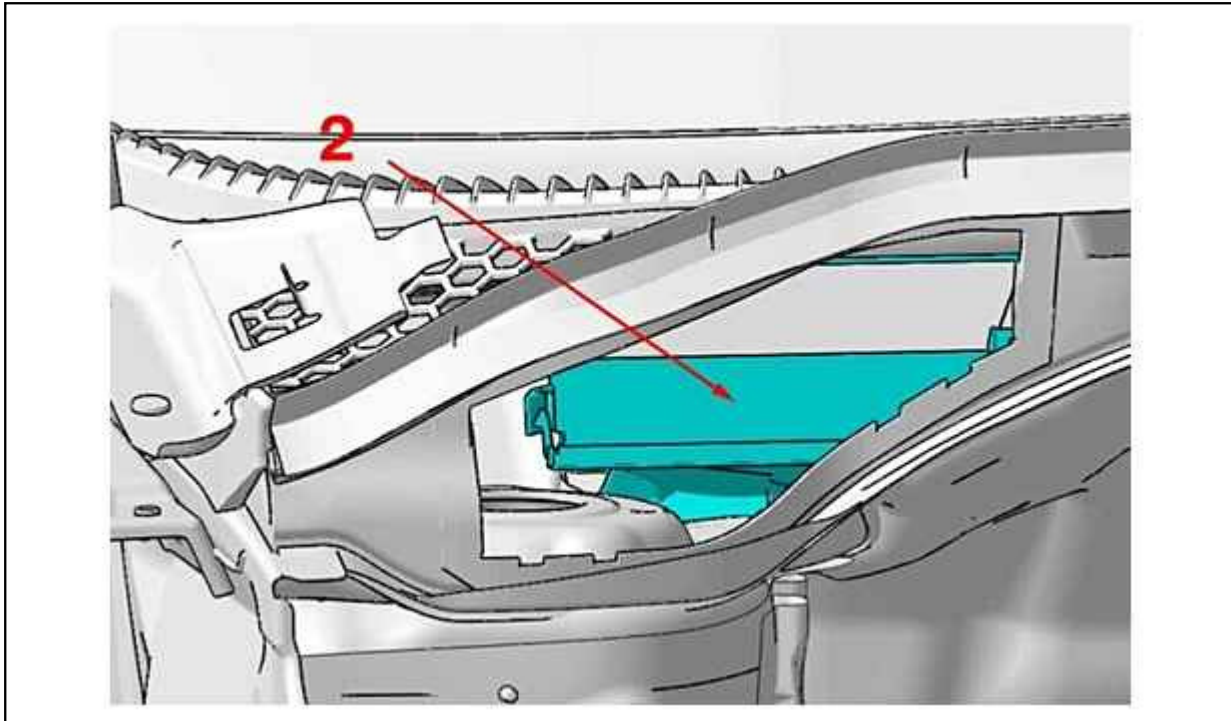


Figure : C5HKFHYD

Tilt the flap (2).

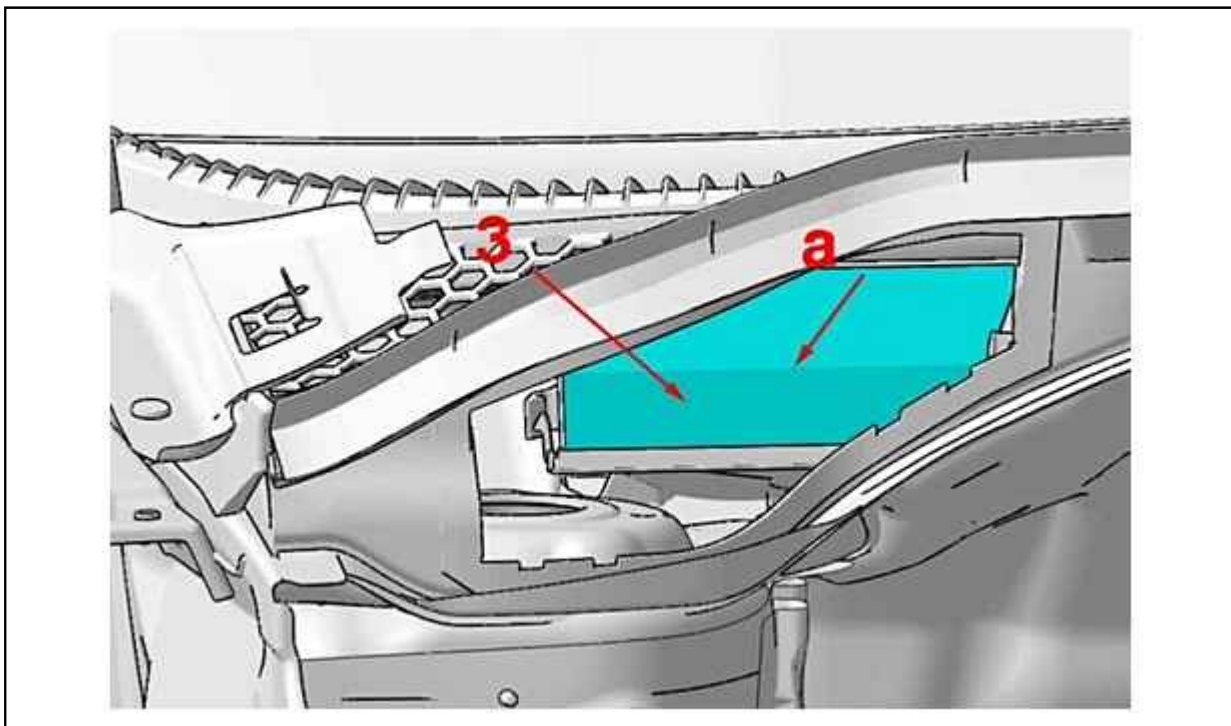


Figure : C5HKFHZD

Remove the first part of the pollen filter (3) sliding it in direction (a).

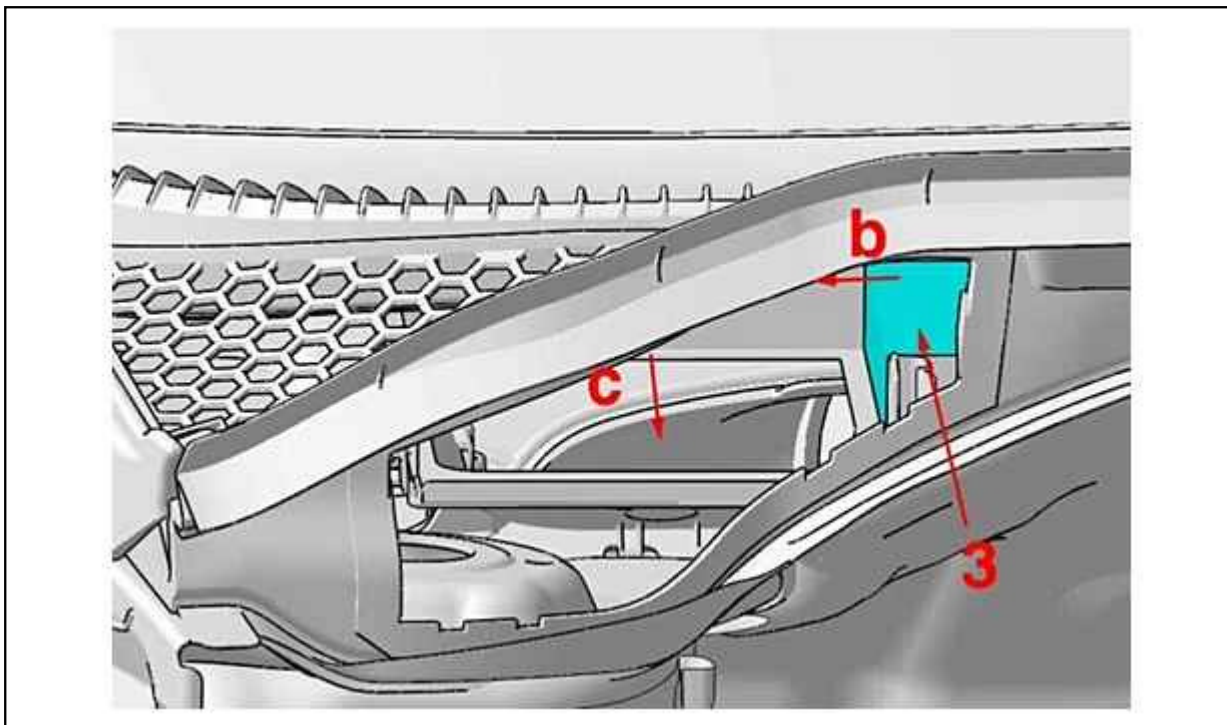


Figure : C5HKFJ0D

Slide the second part of the pollen filter (3) in direction (b).
Remove the second part of the pollen filter sliding it in direction (c).

2. Refitting

Clean the pollen filter housing.
Fit the 2 new pollen filters.
Tilt the flap (2).
Refit the plastic casing (1).
Check the air flow of the air blower by operating it at different speeds.