

REMOVING - REFITTING : REAR DAMPER

URGENT : Observe the safety and cleanliness recommendations ⓘ .

1. Removing

Raise and support the vehicle, with the rear wheels hanging free.
Remove the rear wheels.

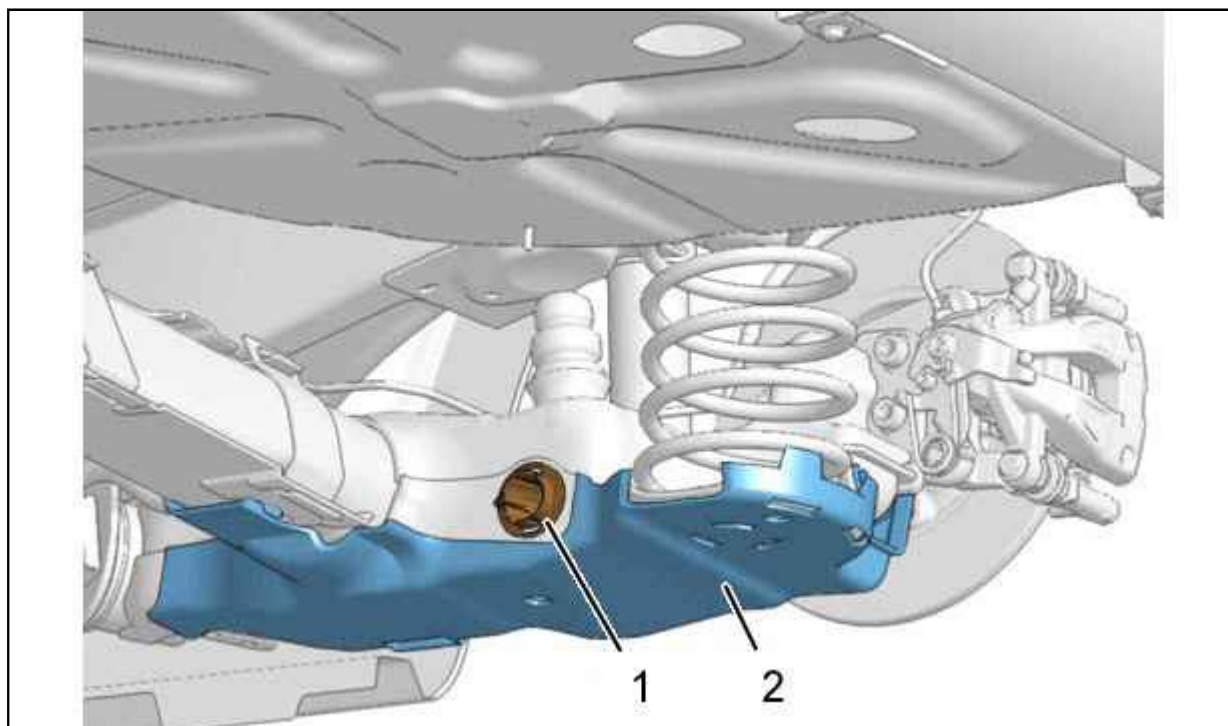


Figure : B3BP1CAD

Remove :

- The bolt guide (1)
- The rear crossmember cover (2)

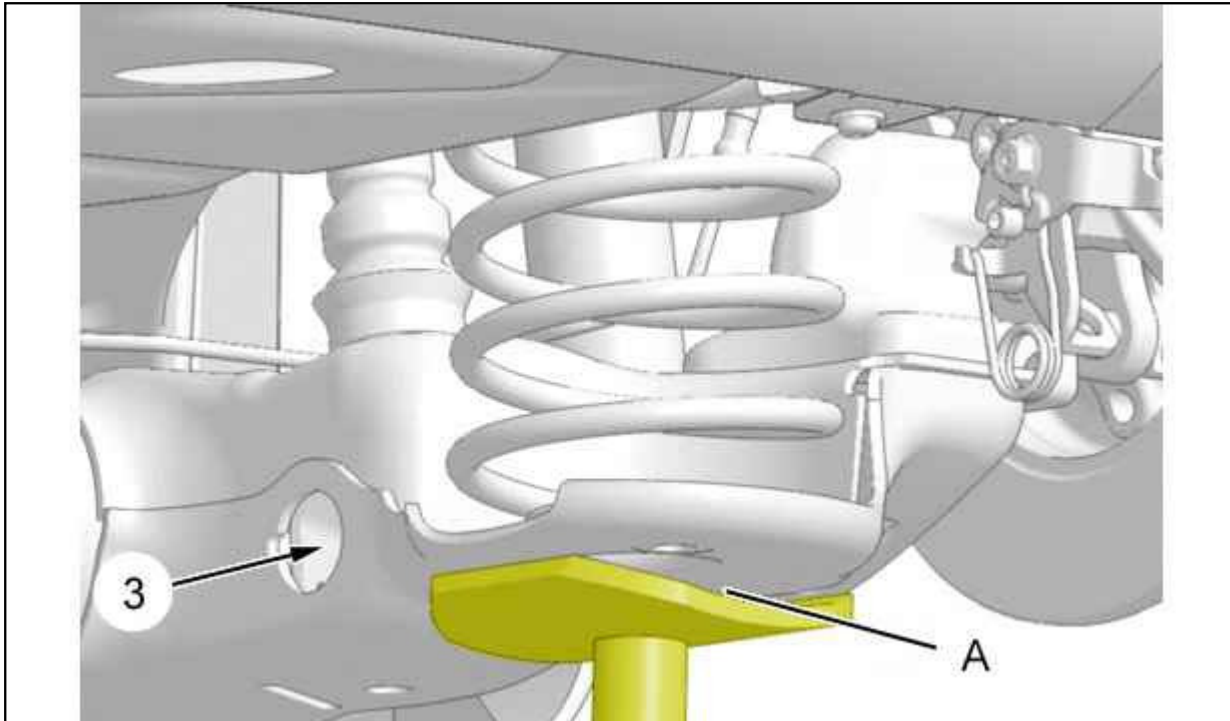


Figure : B3BP1CBD

Position lifting equipment (as "A").
Compress the suspension spring slightly.
Remove bolts (3).

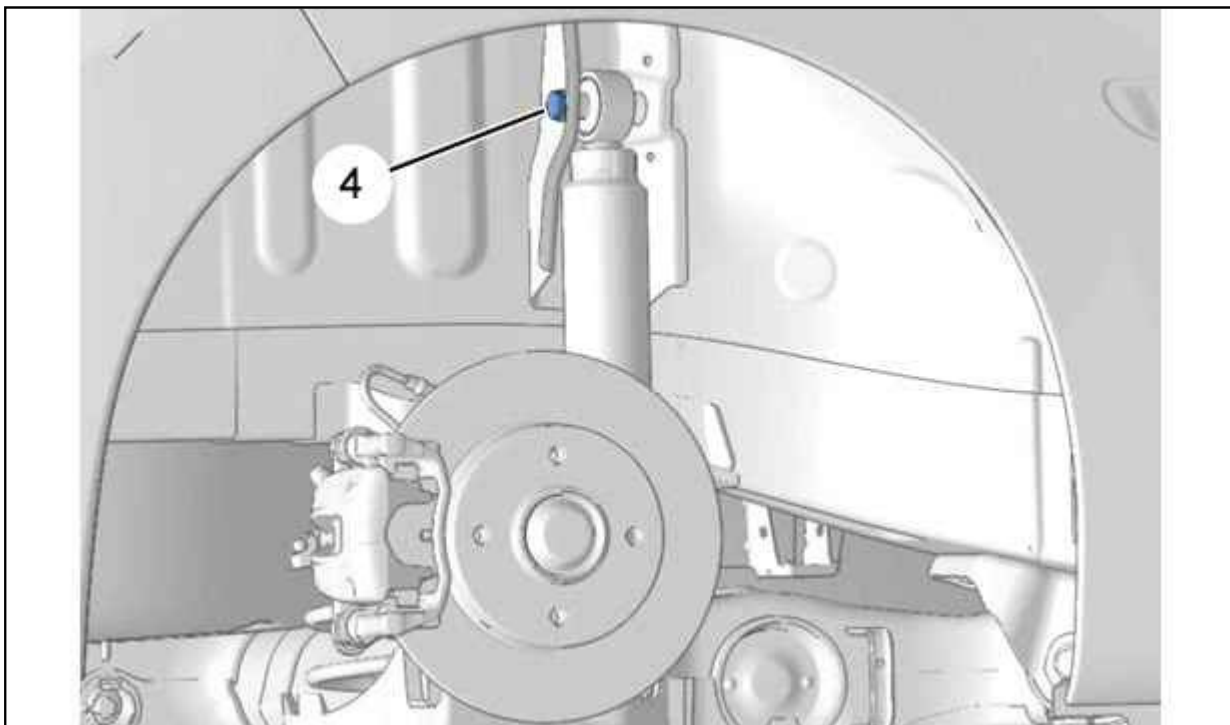


Figure : B3BP1CCD



Remove :

- The splash shield (/)(Side concerned)
- The (4) bolt
- The rear damper

2. Refitting

CAUTION : Adhere to the tightening torques.

Tightening torques :

- **Rear axle** 
- **road wheels** 

Fit :

- The rear damper
- The (4) bolt (without tightening)
- The splash shield (/)(Side concerned)
- The (3) bolt (without tightening)

Take away the lifting equipment.

Fit :

- The rear crossmember cover (2)
- The bolt guide (1)
- The rear wheels

Return the vehicle to its wheels.

Tighten the rear wheel bolts.

Place the vehicle at its reference ride height  .

Tighten :

- The (3) bolt
- The (4) bolt