

REMOVING - REFITTING : ROOF CONSOLE

1. Removing

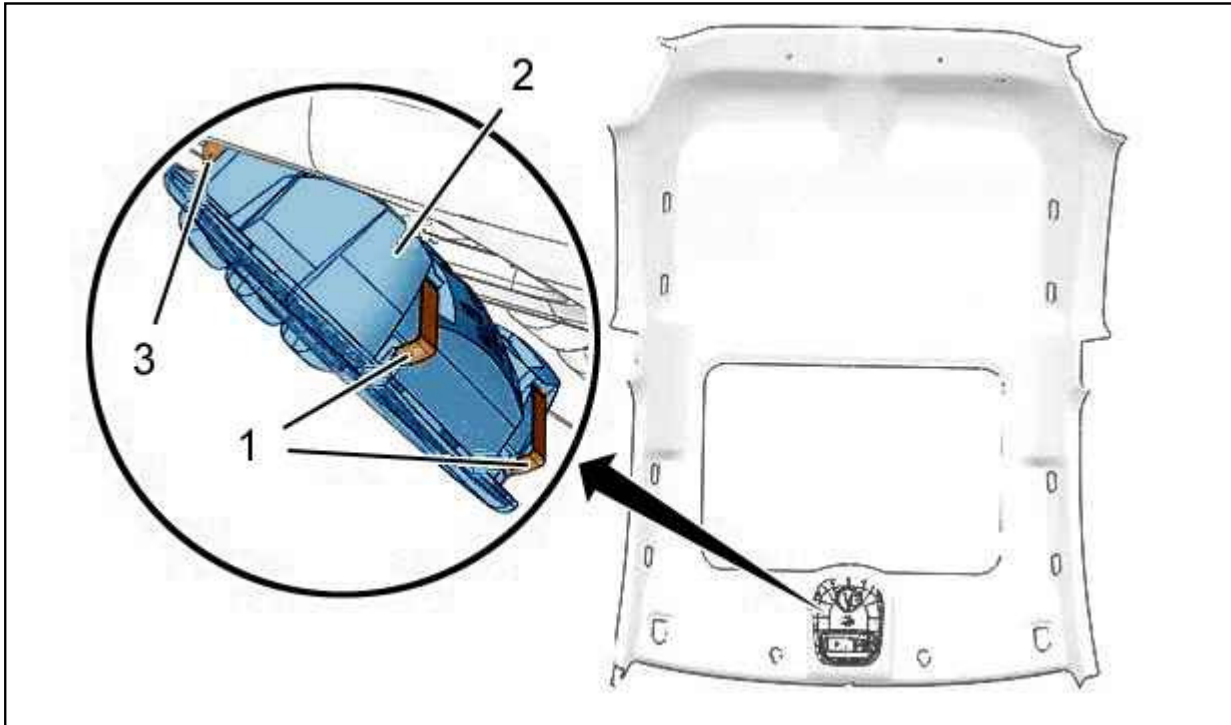


Figure : C5GP0K5D

Unclip the light (1) 2 retaining springs (2) 1.
Detach the light (2) rearwards to release the front retaining lugs (3).

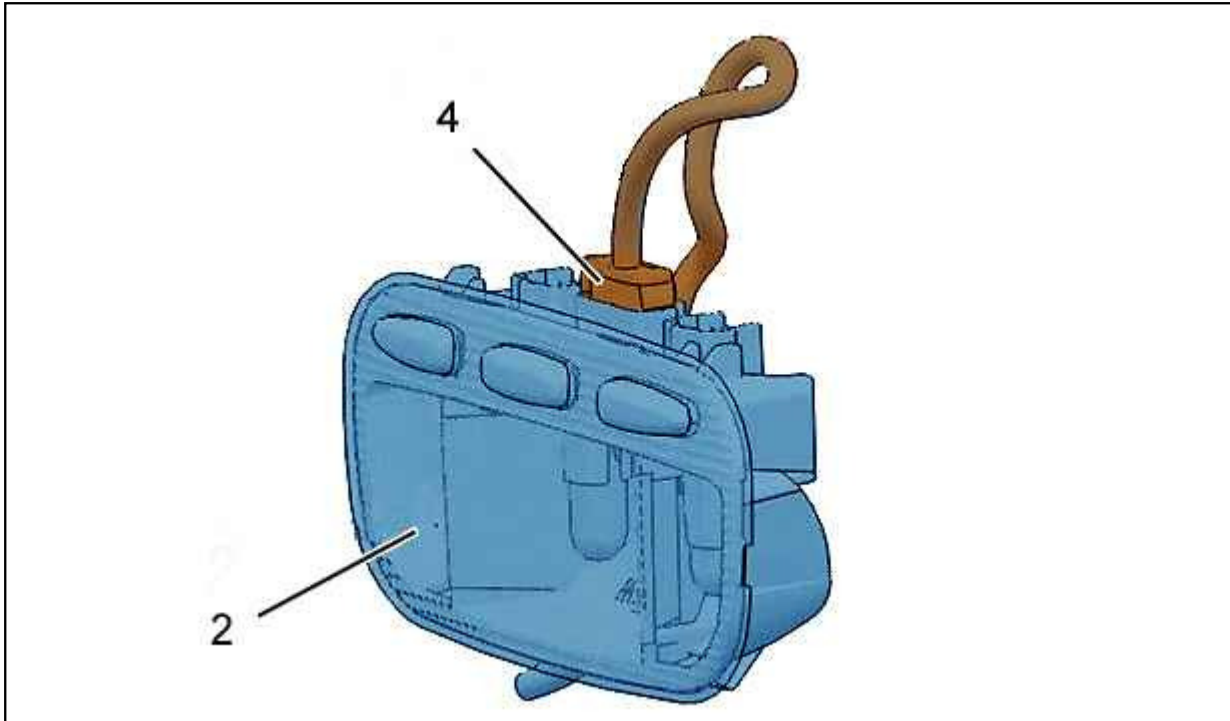


Figure : C5EP03HD

Disconnect the light (4) 2 connectors (2) 1 (According to equipment).
Remove the light (2).

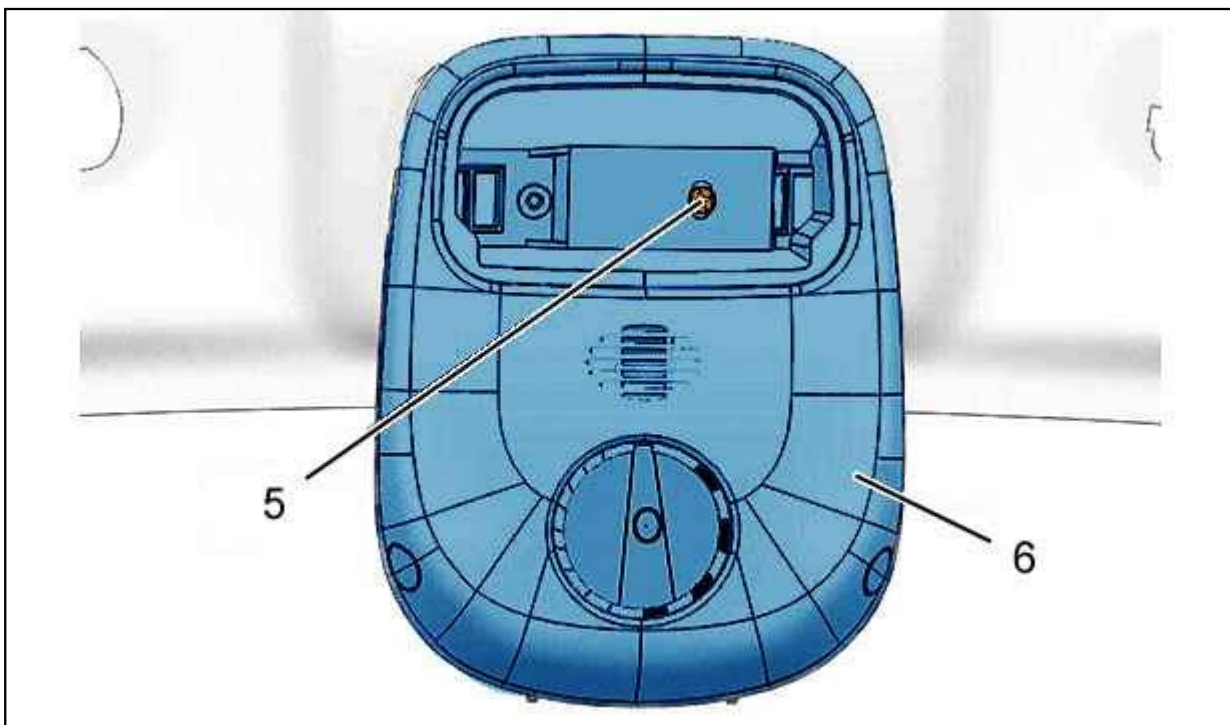


Figure : C5GP0K6D

Remove the roof console (5) 2 bolt (6) 1.

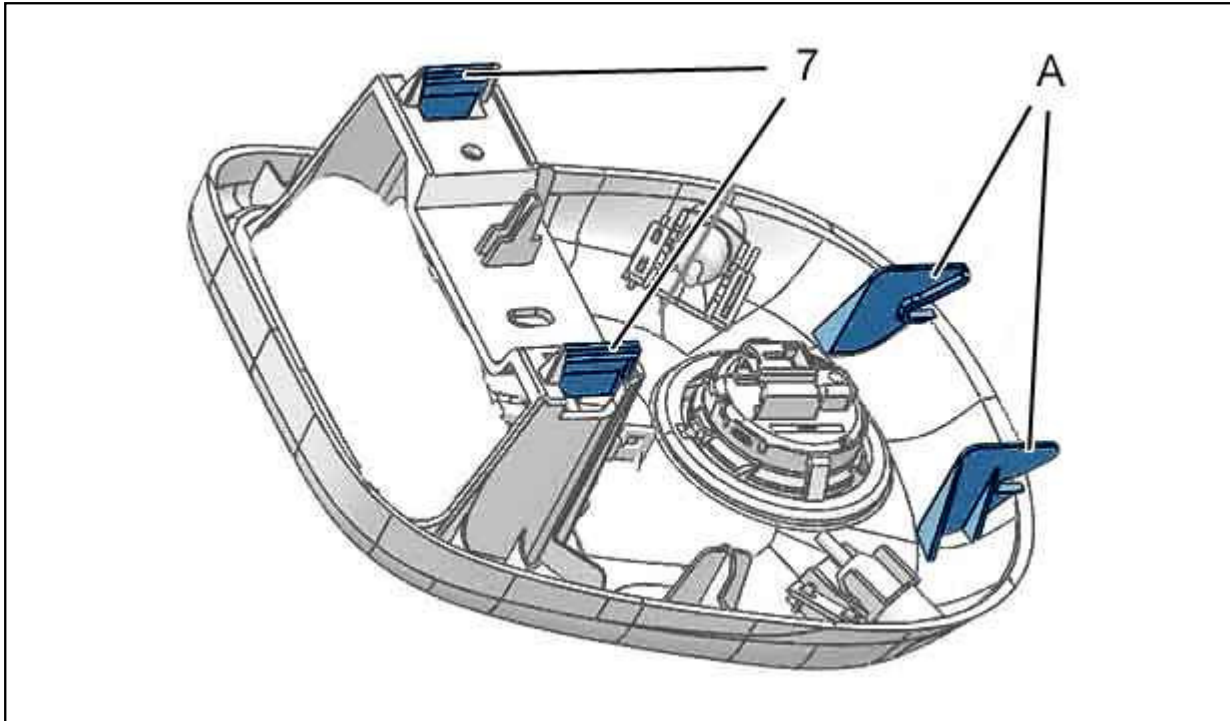


Figure : C5GP0K7D

Unclip the clips (7) pulling the front of the roof console downwards.
Detach the rear anchorages (A) by pushing the roof console towards the front of the vehicle.

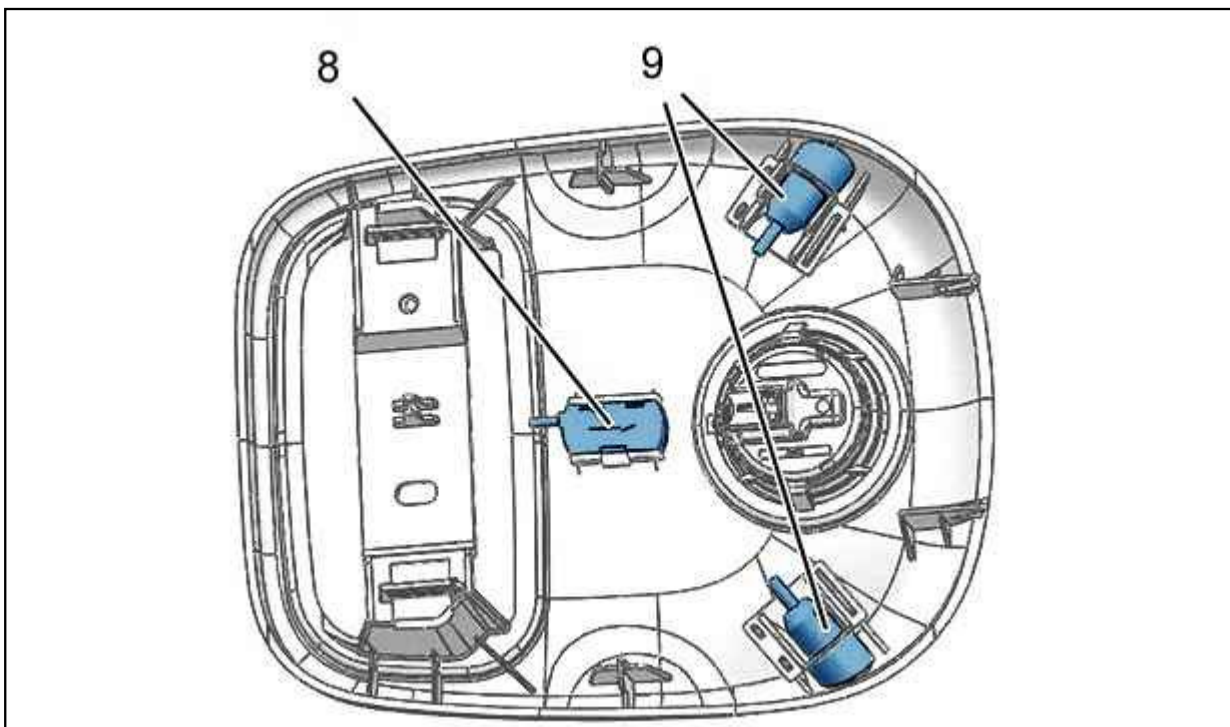


Figure : C5GP0K8D

Unclip :

- The audio/telephone microphone (8) (According to equipment)

- The alarm sensors (9) (According to equipment)

SUNROOF SEQUENTIAL ASSISTED CONTROL + ANTI PINCH

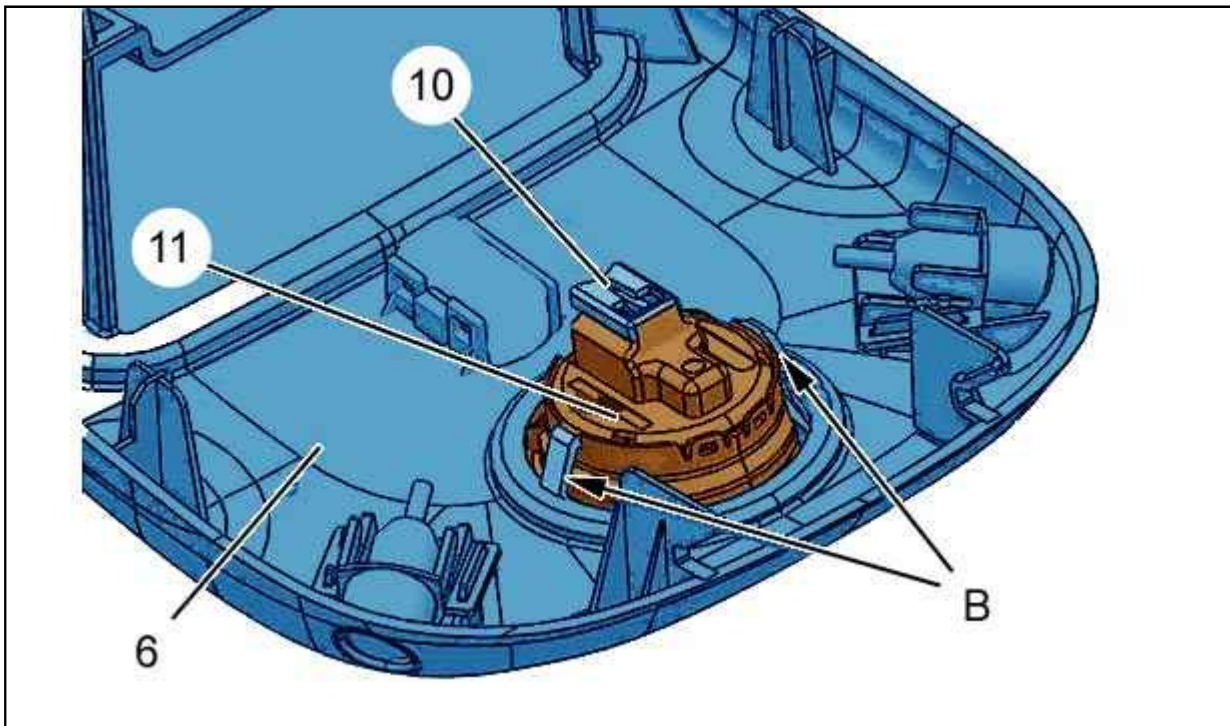


Figure : C5GP0K9D

Unclip the connector (10).
Press the clips simultaneously (as (B)).
Remove the sunroof switch (11).
Remove the roof console (6).

2. Refitting

Proceed in the reverse order to removal.
Check that the electrical equipment operates correctly.