

REMOVING - REFITTING : TAIL LAMP

1. Removing

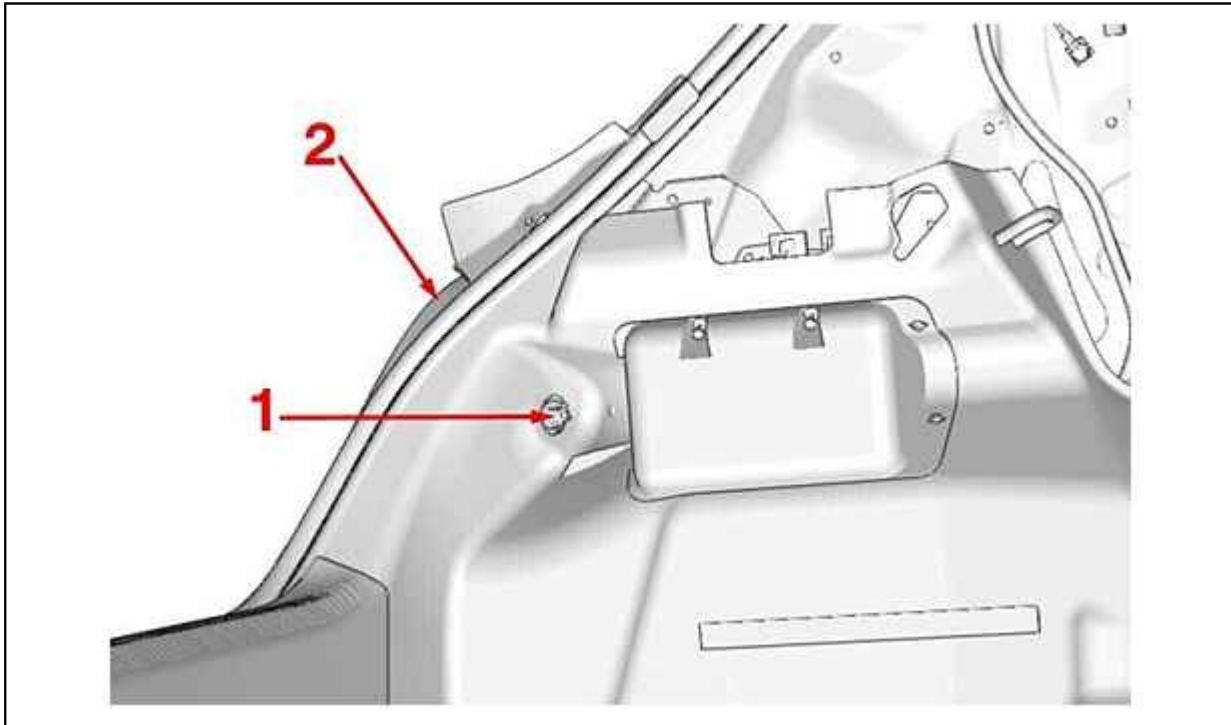


Figure : C5EK04LD

Remove the fastener (1) (each side) .
Detach the rear light (2) by pulling it.

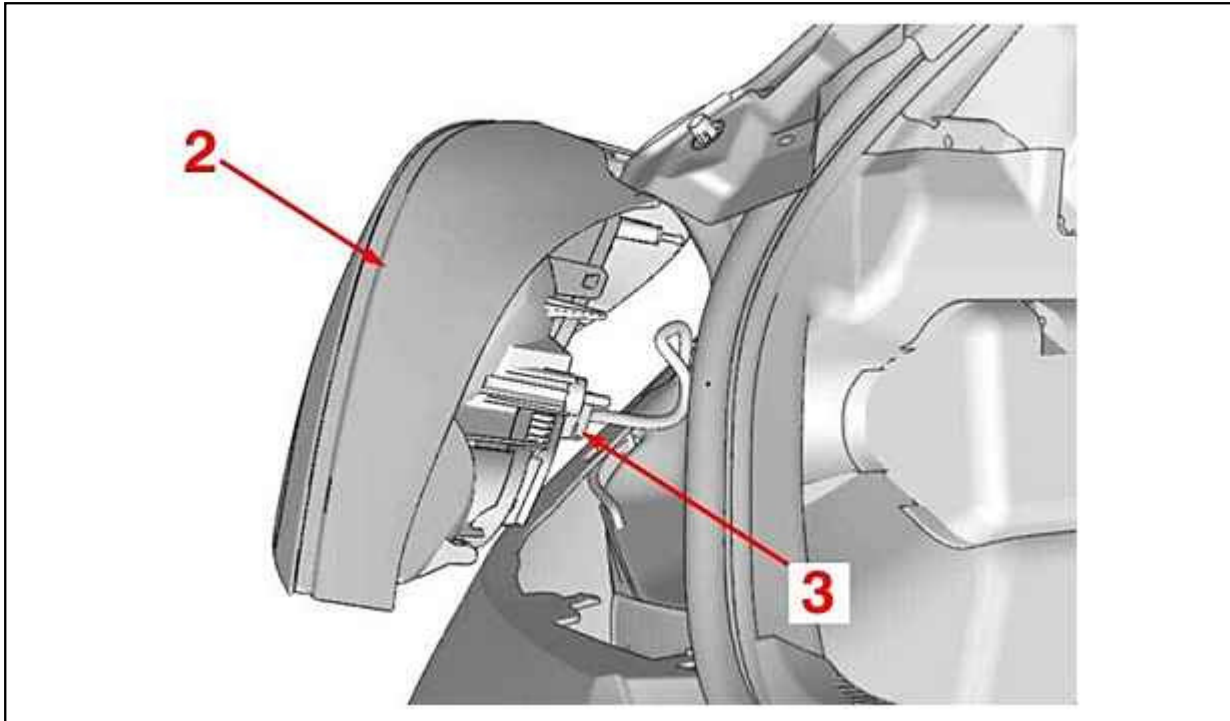


Figure : C5EK04MD

Disconnect the connector (3) (each side) .
Remove the rear lamp (2) (each side) .

2. Refitting

Proceed in the reverse order to removal.
Check operation.