

REMOVING - REFITTING : VACUUM PUMP

URGENT : Observe the safety and cleanliness recommendations ⓘ .

1. Removing

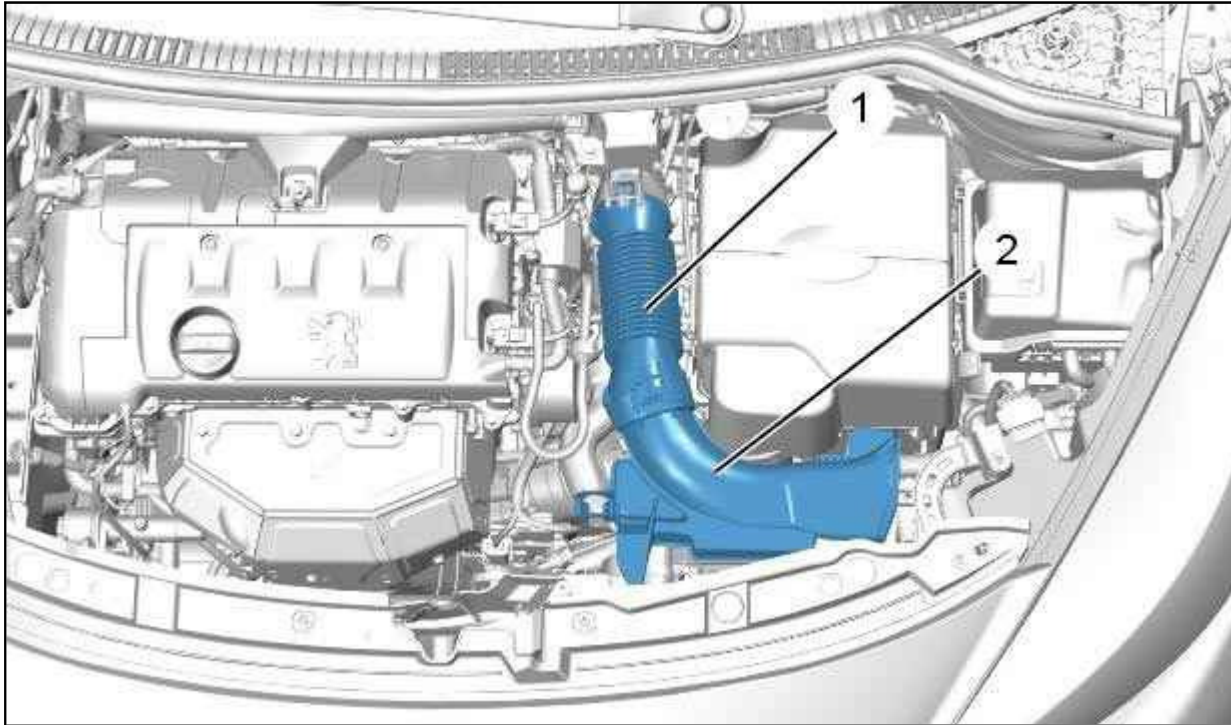


Figure : B3FG0E9D

Remove :

- The resonator (2)
- The air duct (1)

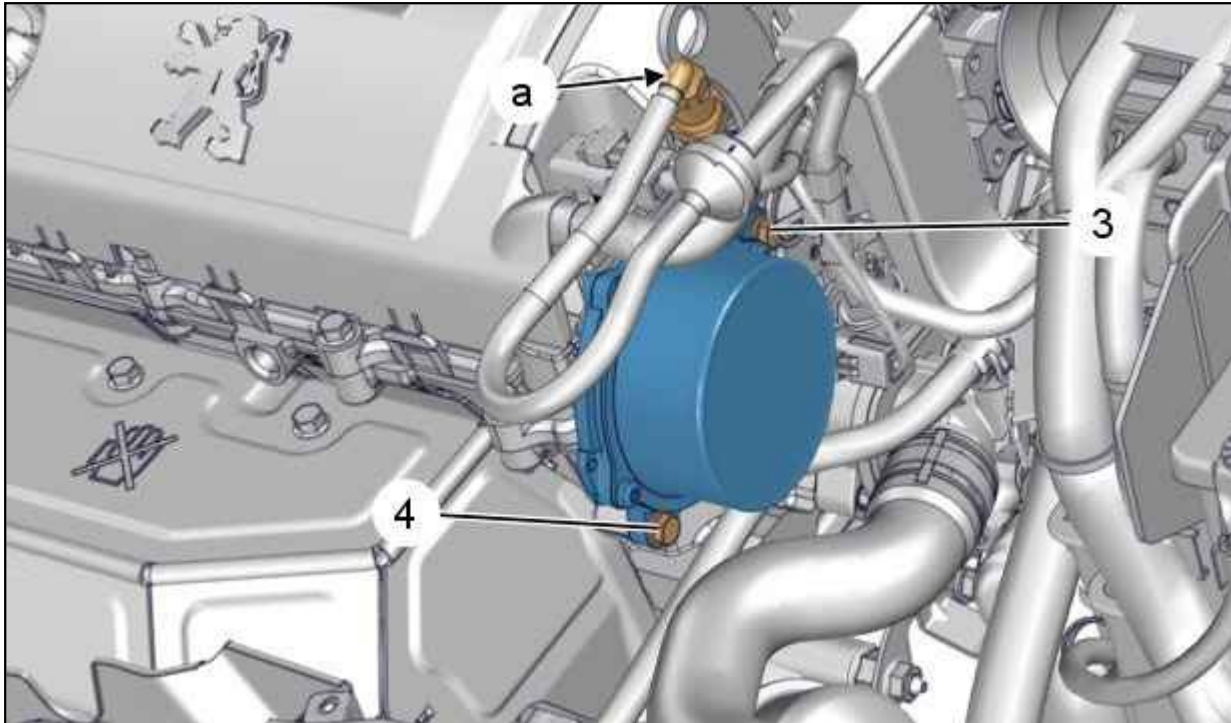


Figure : B3FG0EAD

Uncouple : The pipe (as "a").

Remove :

- The (3) bolt
- The (4) bolt
- The vacuum pump (5)

2. Refitting

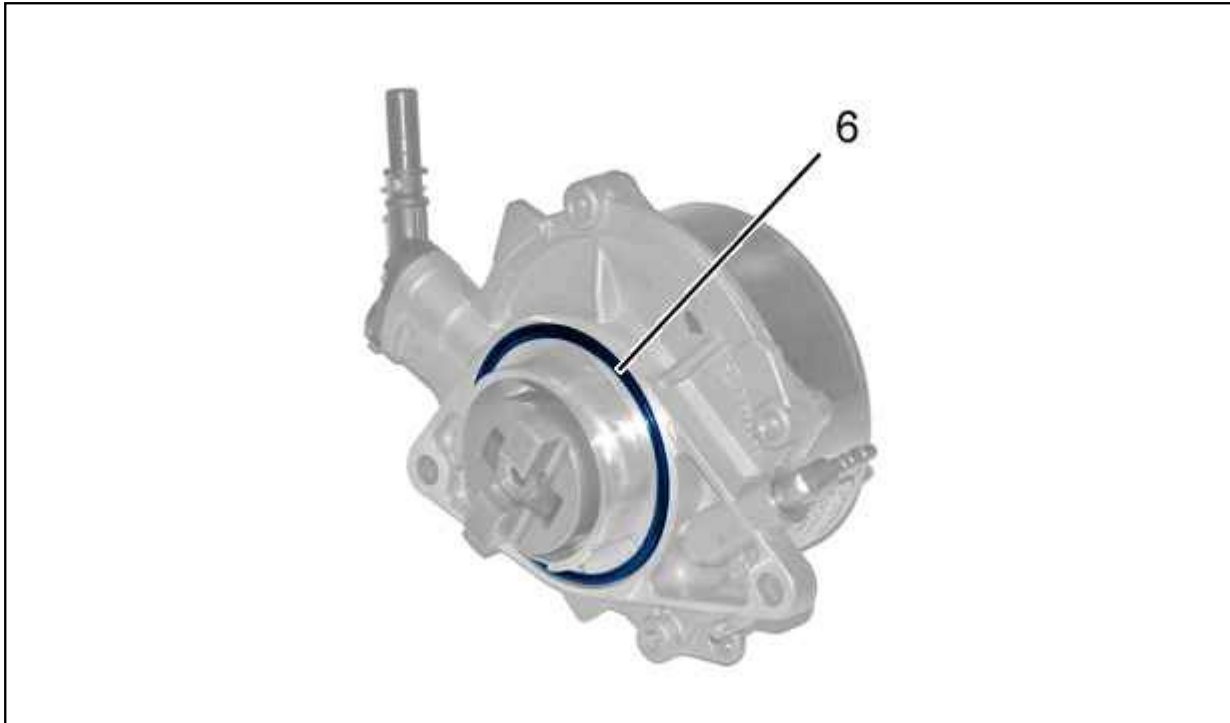


Figure : B3FG0EBD

CAUTION : On each removal : Systematically replace the seal (7).

Clean the joint faces.

Fit :

- The vacuum pump (5)
- The (4) bolt ; Tighten to 0,9 daN.m
- The (3) bolt ; Tighten to 0,9 daN.m

Recouple the unions (/)(as "a").

Fit :

- The air duct (1)
- The resonator (2)