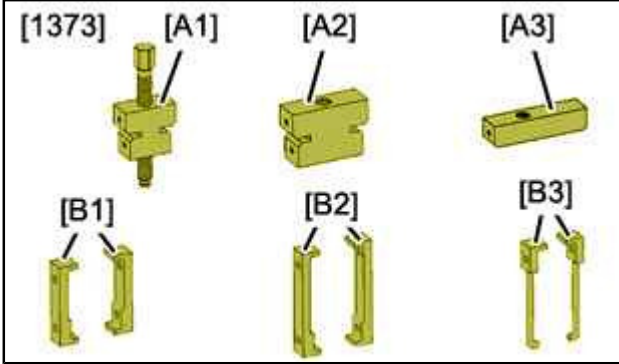
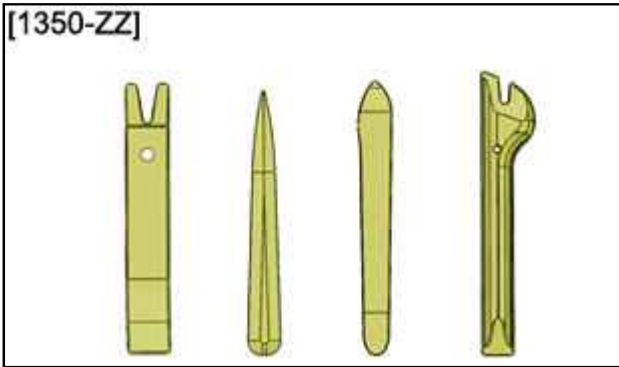


## REMOVING - REFITTING : REAR WIPER MECHANISM

**URGENT** : Observe the safety and cleanliness recommendations ⓘ .

### 1. Tooling

tool	Reference	Designation
 <p>Figure : E5AG030T</p>	[1373-I]	Windscreen wiper arm extractor
 <p>Figure : E5AG02MT</p>	[1350-ZZ]	Stripping tools

### 2. Removing

**Disconnect the battery** ⓘ .

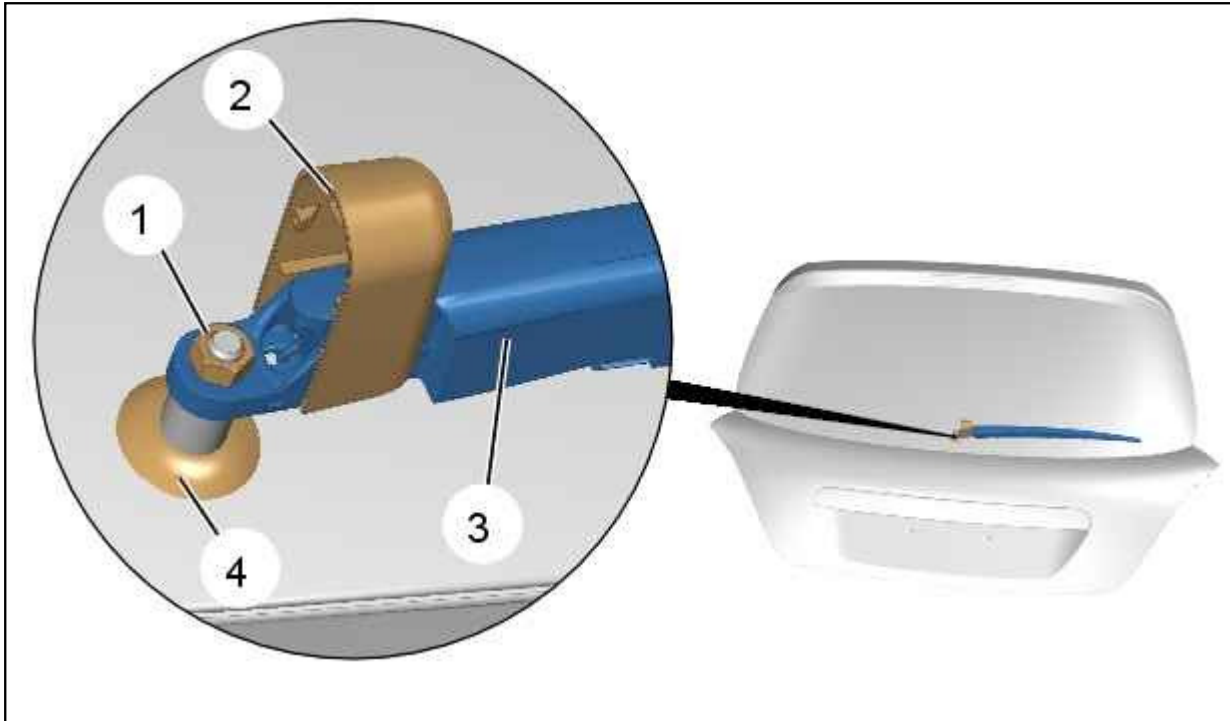


Figure : C5DGY27D

Open the cover (2) (Windscreen wiper arm (3)).

Remove :

- The nut (1)
- The rear wiper arm (3) ; Using tool [1373-I]
- Seal (4)

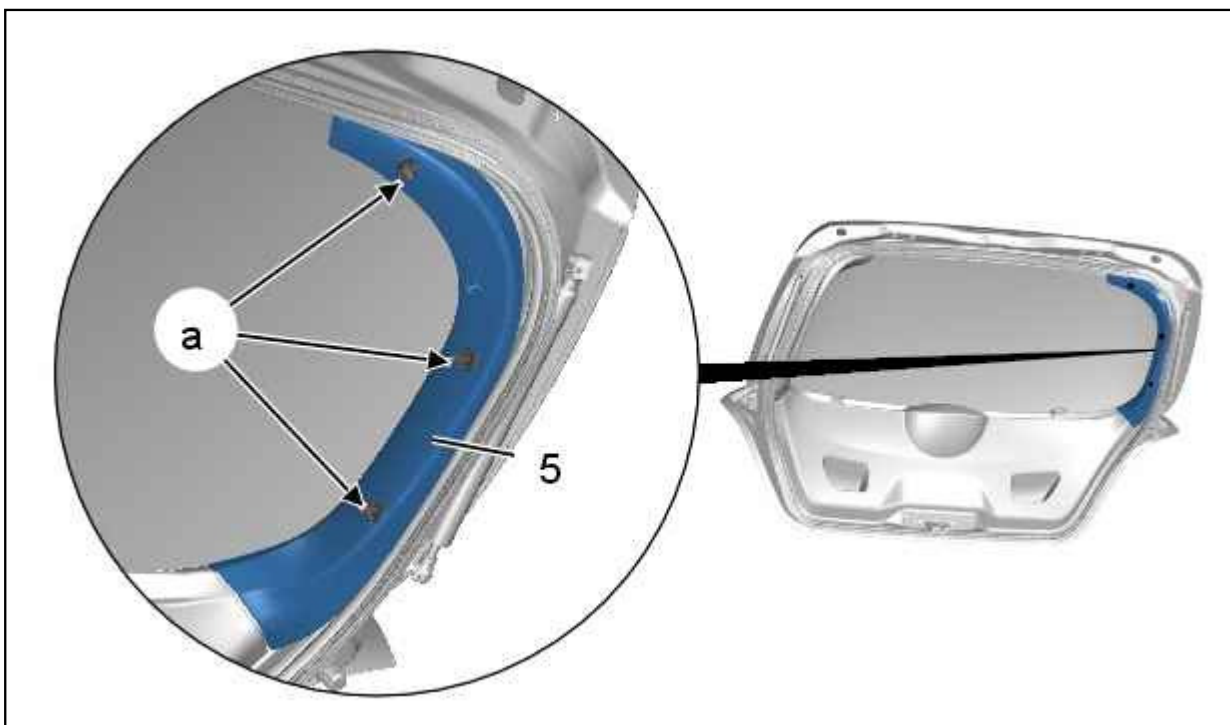


Figure : C5GG0F7D

Symmetrical operations :

- Unclip the trim (5) (Tailgate pillar ) (at "a") ; Using tool [1350-ZZ]
- Remove the trim (5)

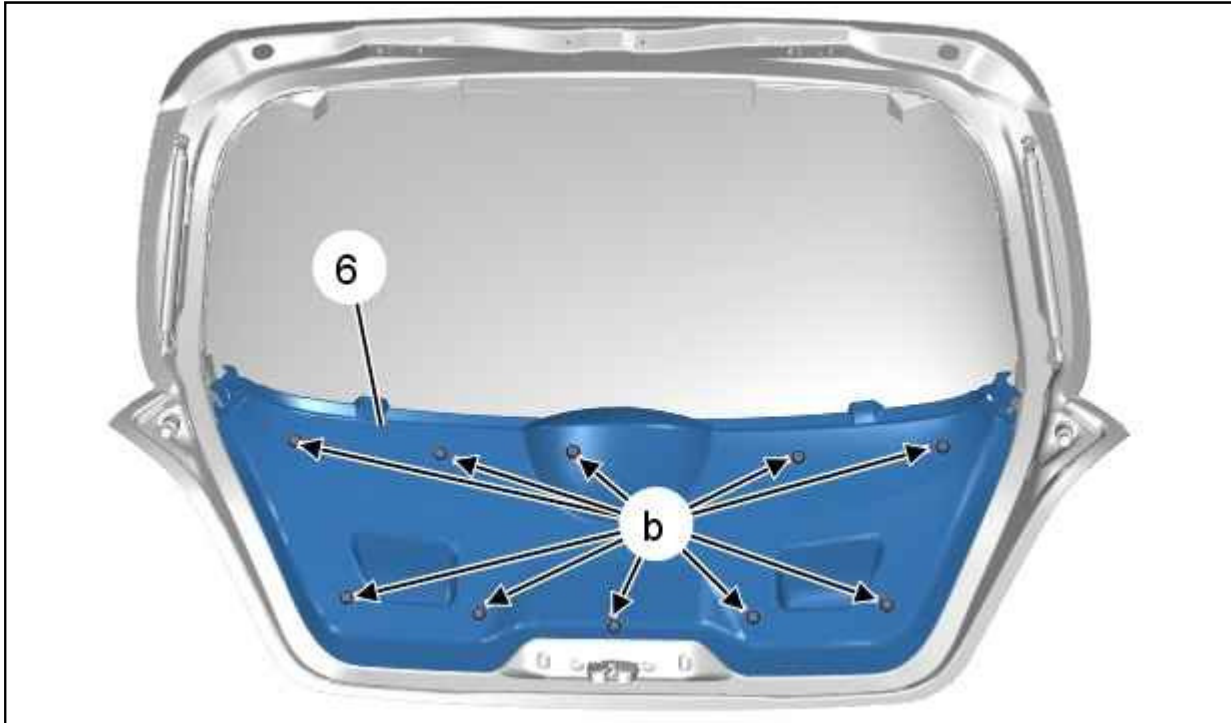


Figure : C5GG0F9D

Unclip the tailgate lining (6) (at "b") ; Using tool [1350-ZZ].  
Remove the tailgate lining (6).

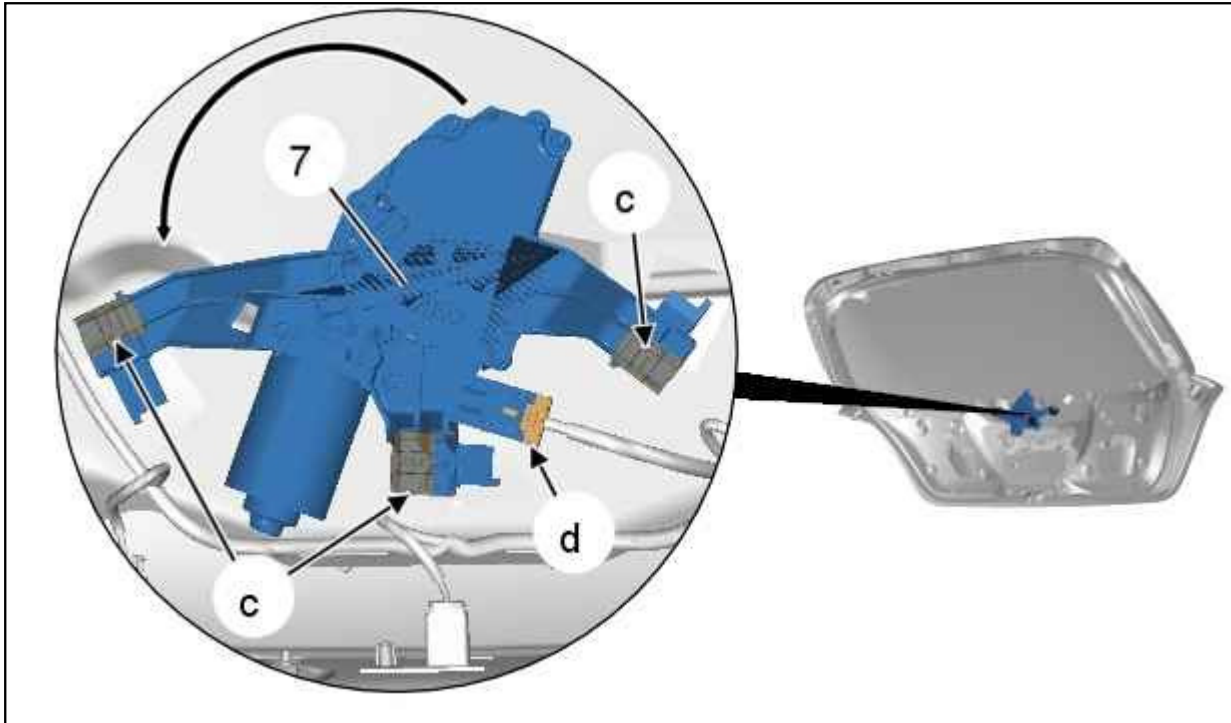


Figure : C5DGY2FD

Disconnect the wiper motor (7) connector (at "d").  
Release and pull simultaneously on the clips (at "c") ; (By means of a screwdriver).  
Pivot the wiper motor (7) (Following the arrow ).  
Release and remove the windscreen wiper motor (7).

### 3. Refitting

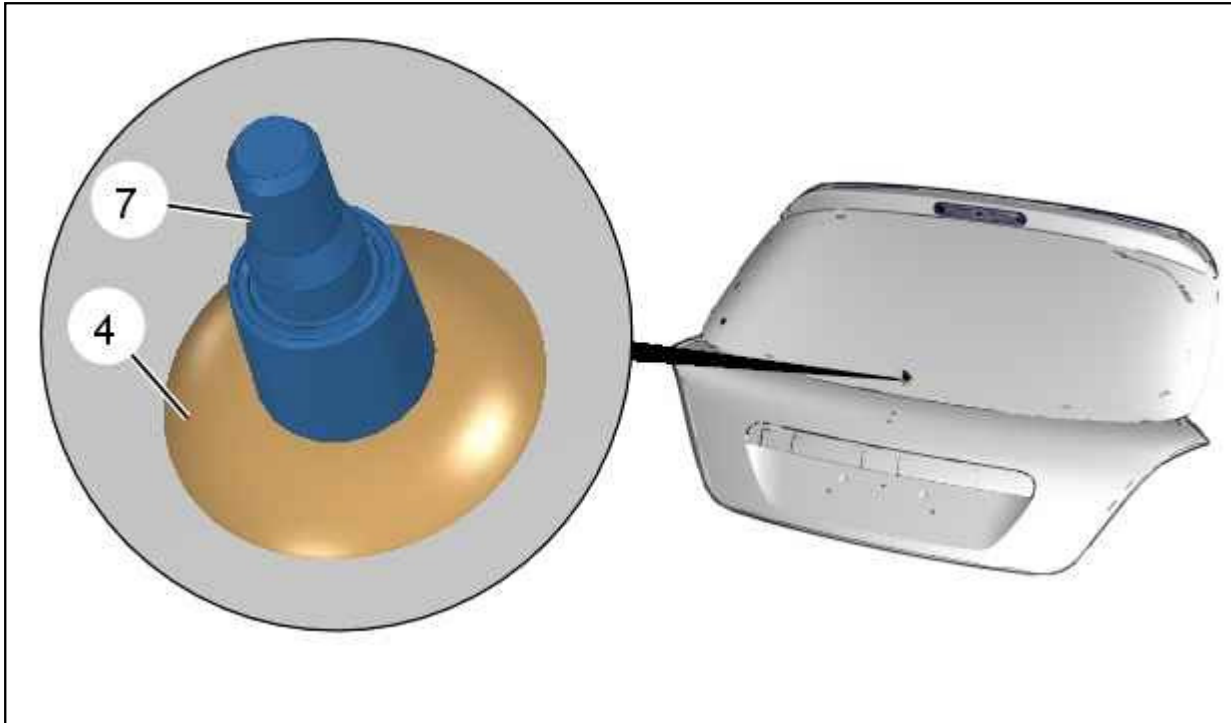


Figure : C5DGY2KD

**CAUTION :** When refitting the rear screen wiper mechanism (7) ; Check the condition of the seal (4).

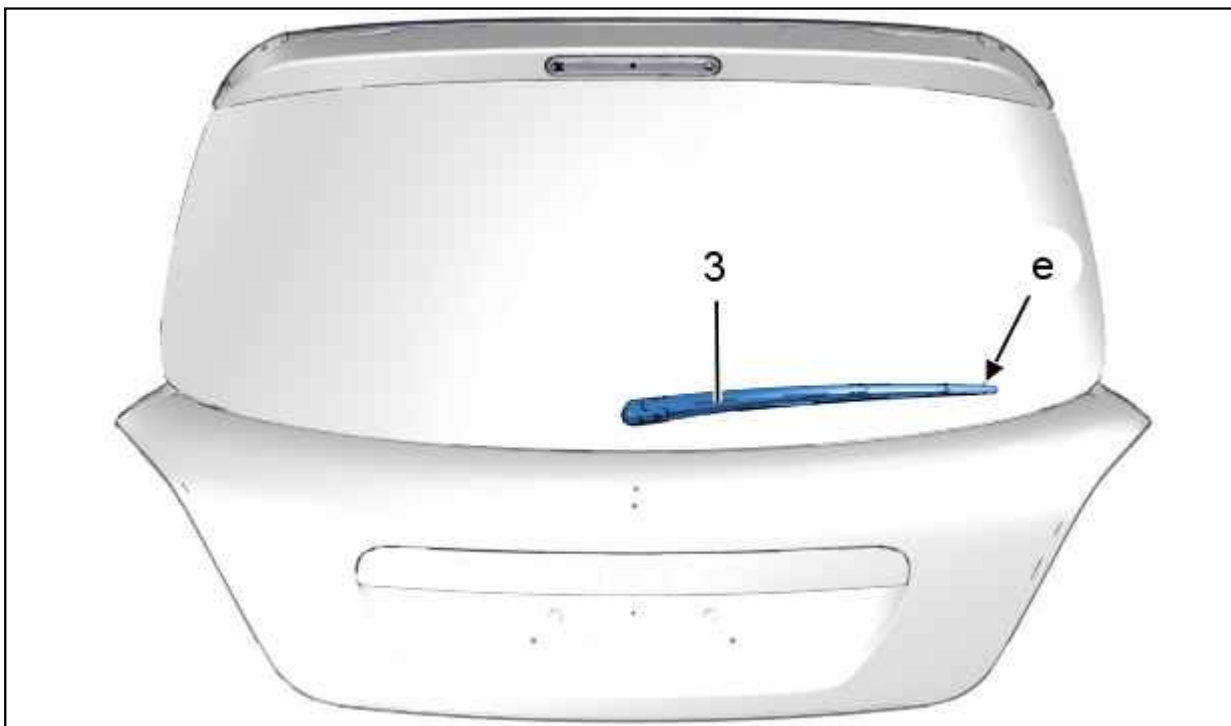


Figure : C5DGY2LD

**CAUTION :** Before tightening the windscreen wiper arm (3), operate the windscreen wiper mechanism (7) ; Place the

wipers control in the off position.

**CAUTION** : Fit the wiper arm (3) (In accordance with the marking on the rear screen ( as "e")).

Proceed in the reverse order to removal.

Tighten the nut (1) to 1,2 m.daN.

Connect the battery.

Check the operation of the equipment.