

REMOVING - REFITTING : INSTRUMENT PANEL (/)

URGENT : Observe the safety and cleanliness recommendations ⓘ .

1. Removing

Disconnect the battery ⓘ .

Fit the steering wheel in the low position.

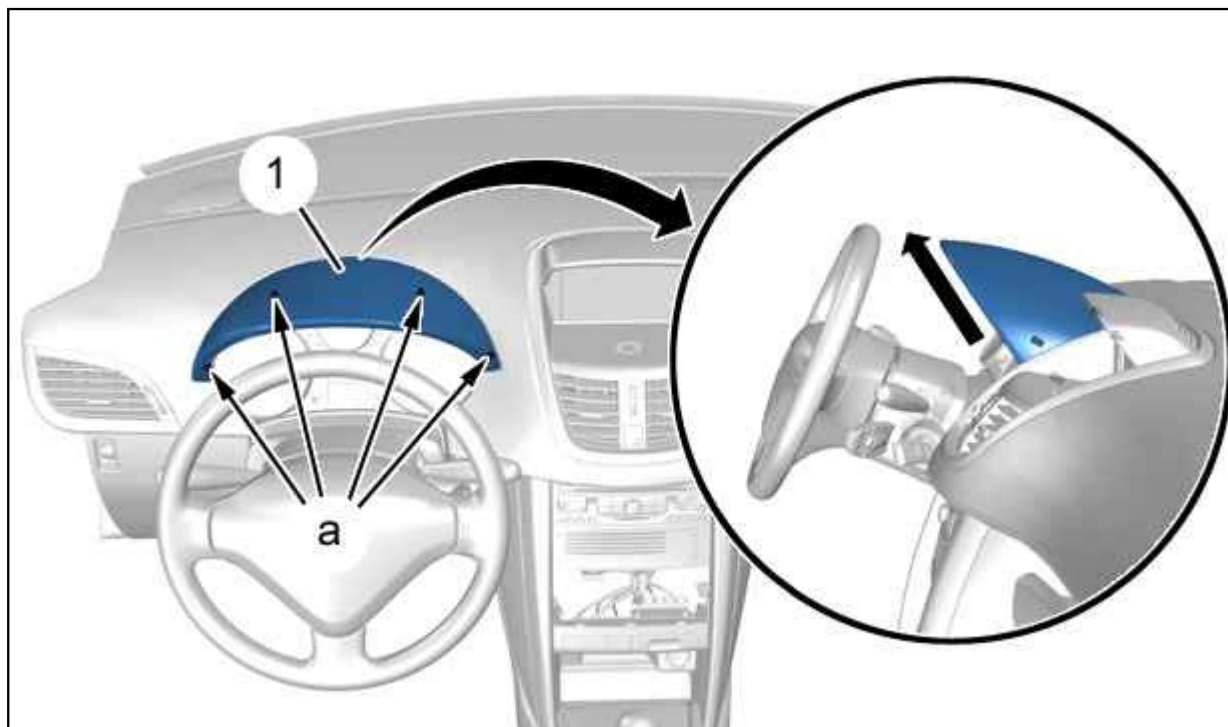


Figure : C5FG08JD

Detach and remove the instrument panel visor (1) (as "a") (following the arrow).

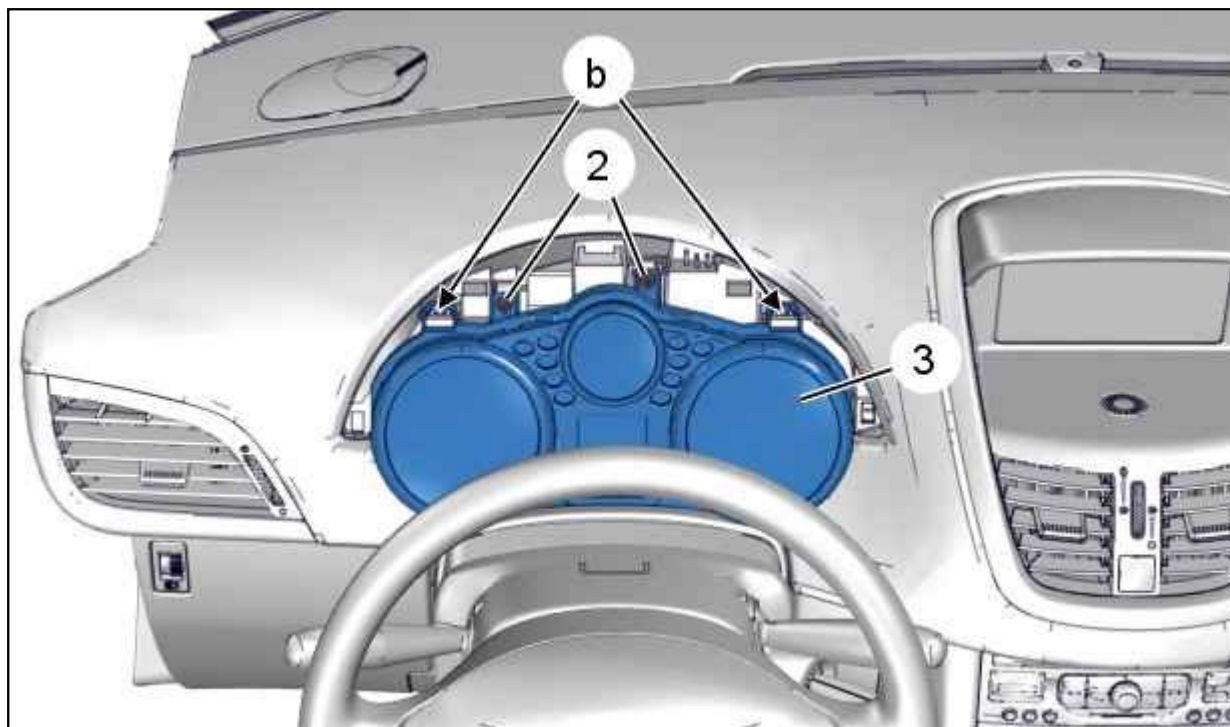


Figure : C5FG08KD

Remove the bolts (2).
Unclip the instrument panel (3) (as "b") .
Detach the instrument panel (3) (Upwards) .
Disconnect the instrument panel connector .
Remove the instrument panel (3) .

2. Refitting

Proceed in the reverse order to removal.
Connect the battery.

N.B. : When the instrument panel is replaced, it must be initialised using the diagnostic equipment.

Check the electric operation.