

REMOVING - REFITTING : SCUTTLE PANEL GRILLE

1. Recommended tools

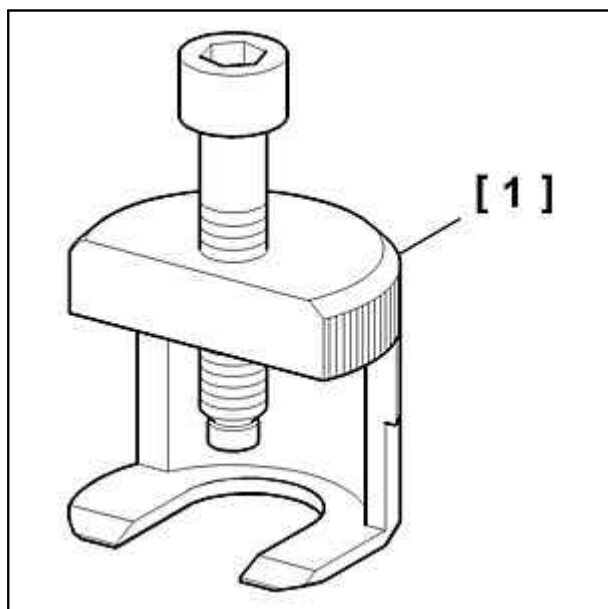


Figure : C5DF02JC

[1] Wiper arm extractor (-).1335.

2. Removing

URGENT : Switch on the ignition ; Ensure that the motor is in the stop position (Stop position on the stalk).

Switch off the ignition.

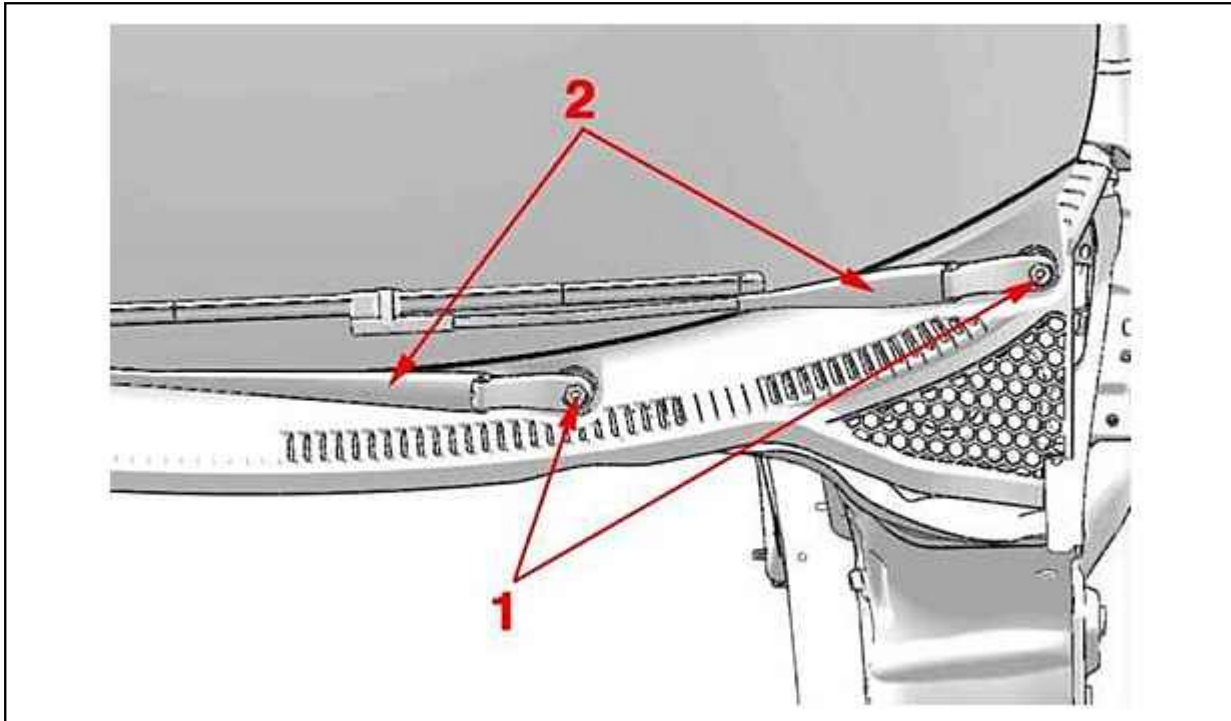


Figure : C4AK3GUD

Remove (on each side) :

- The windscreen wiper shaft cover
- The nut (1)

Using the tool [1] extract the wiper arms (2).

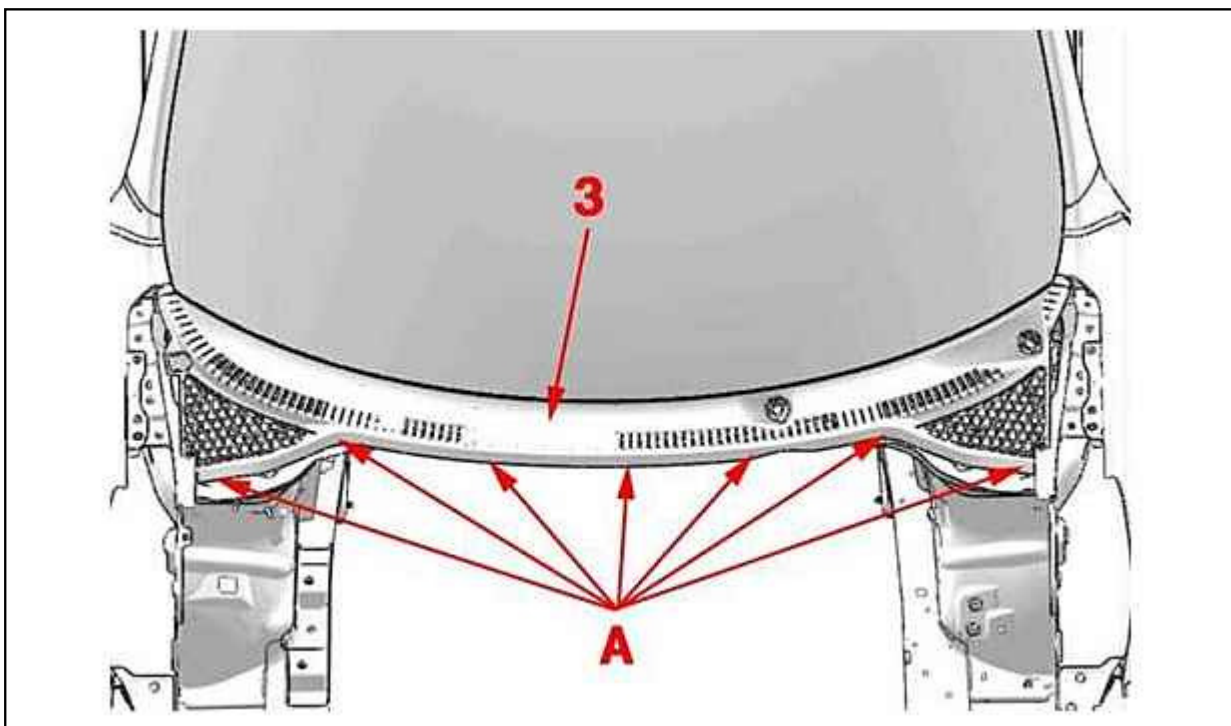


Figure : C4AK3GVD

Detach : The seal (/) (as (A)) .

Unclip : The scuttle grille (3) (Upwards) .

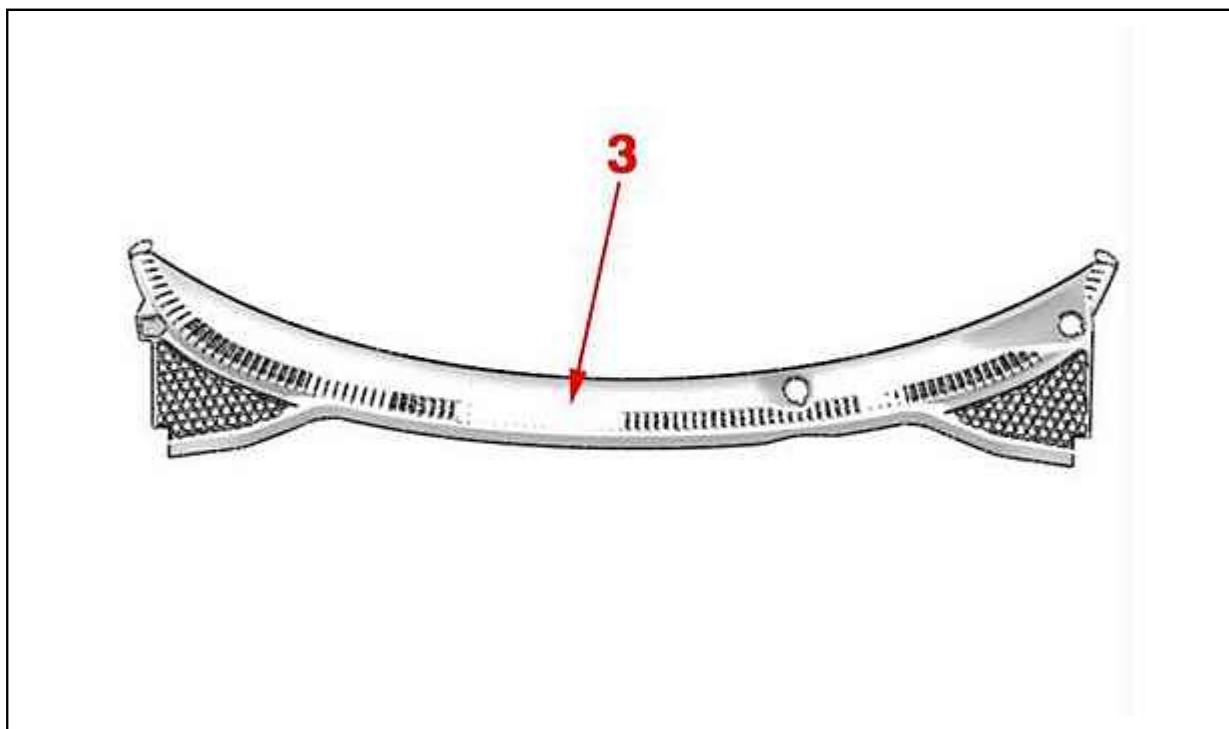


Figure : C4AK3GWD

Remove the scuttle grill (3).

3. Refitting

Proceed in the reverse order to removal.

Tighten the nuts (1) to 2.5 dan.m.

Check the operation.