

## REMOVING - REFITTING : FRONT SEAT

**URGENT** : Observe the safety and cleanliness recommendations ⓘ .

### 1. Removing

Disconnect the battery.

Place the seat in position :

- Maximum rearwards
- Maximum height

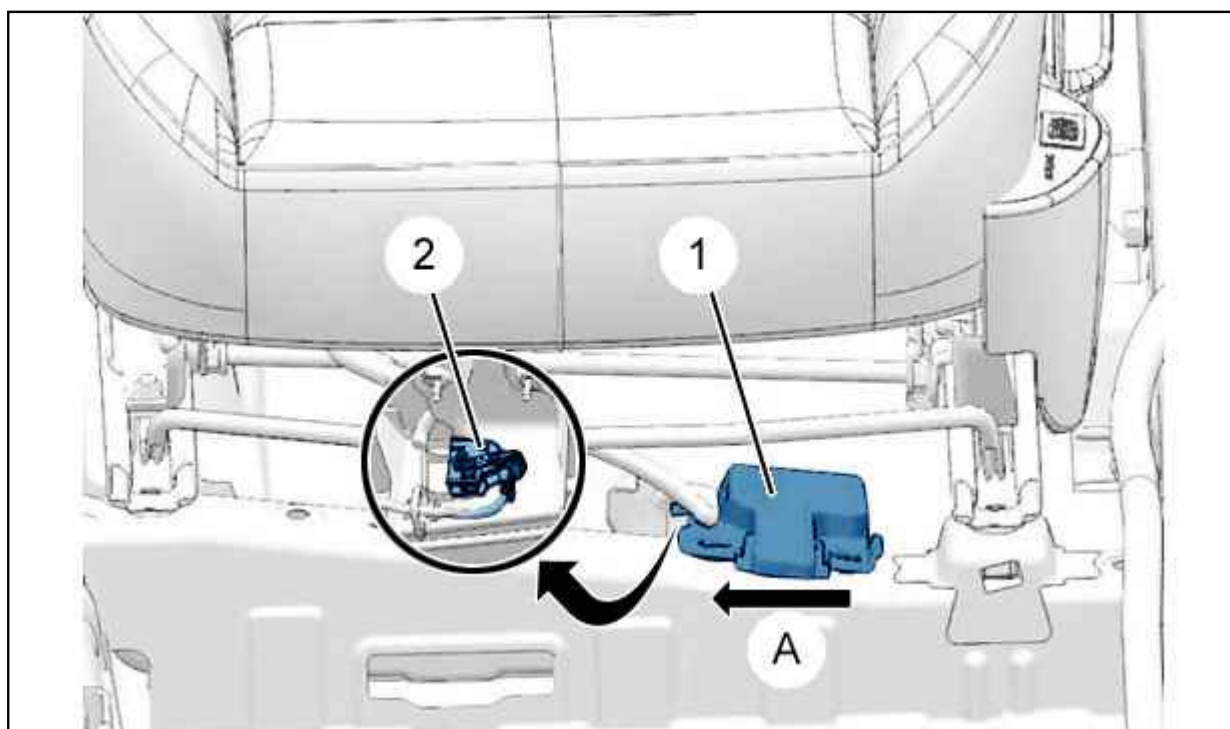


Figure : C5GK0XSD

Unclip the cover (1) ( as (A)) .

Disconnect the connector (2) under the seat.

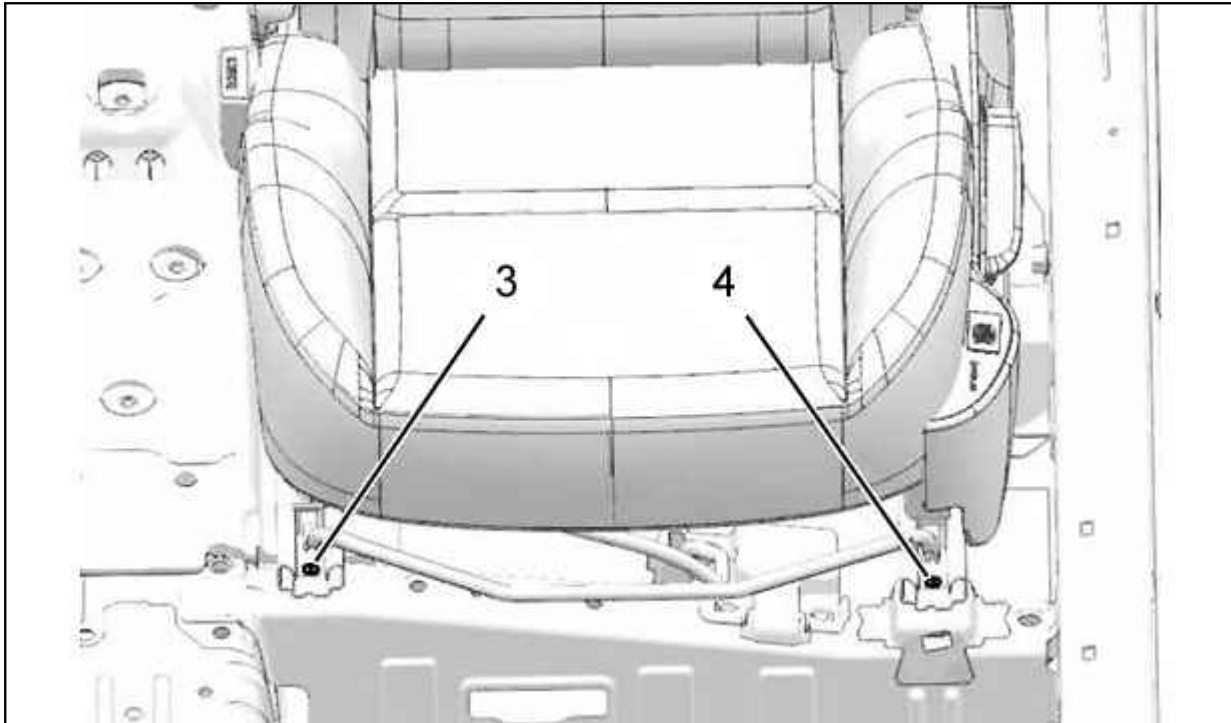


Figure : C5GK0XTD

Remove the mountings (3 - 4).

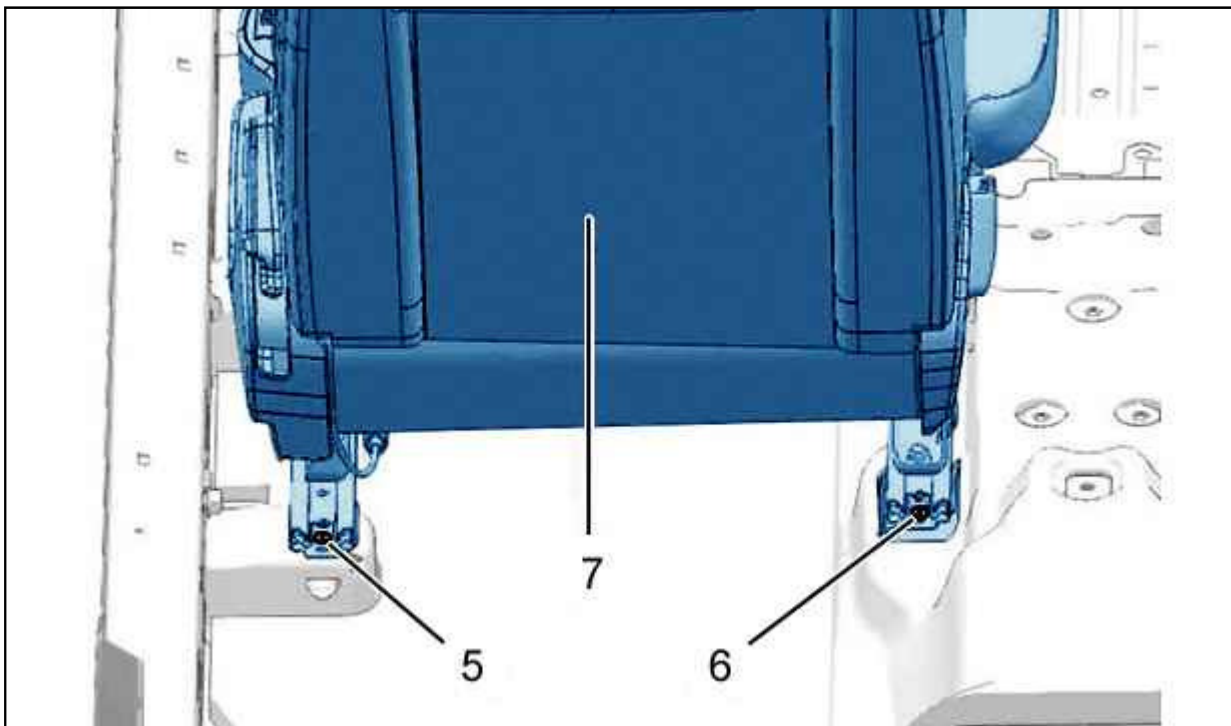


Figure : C5GK0XUD

Push the seat fully forward.

Remove :

- The mountings (5 - 6)

- The front seat (7)

## 2. Refitting

Fit :

- The front seat (7)
- The bolts (3), (4), (5), (6)

**URGENT** : When screwing in the rear bolts, check that the slides are re-latched correctly.

Tighten the screws (3), (4), (5), (6) to  $2 + 0,4 / - 0,2$  m.daN .

Proceed in the reverse order to removal.

Check the operation.