

REMOVING - REFITTING : FRONT SUSPENSION ARM

URGENT : Observe the safety and cleanliness recommendations ⓘ .

1. Removing

Remove the front pivot ⓘ .

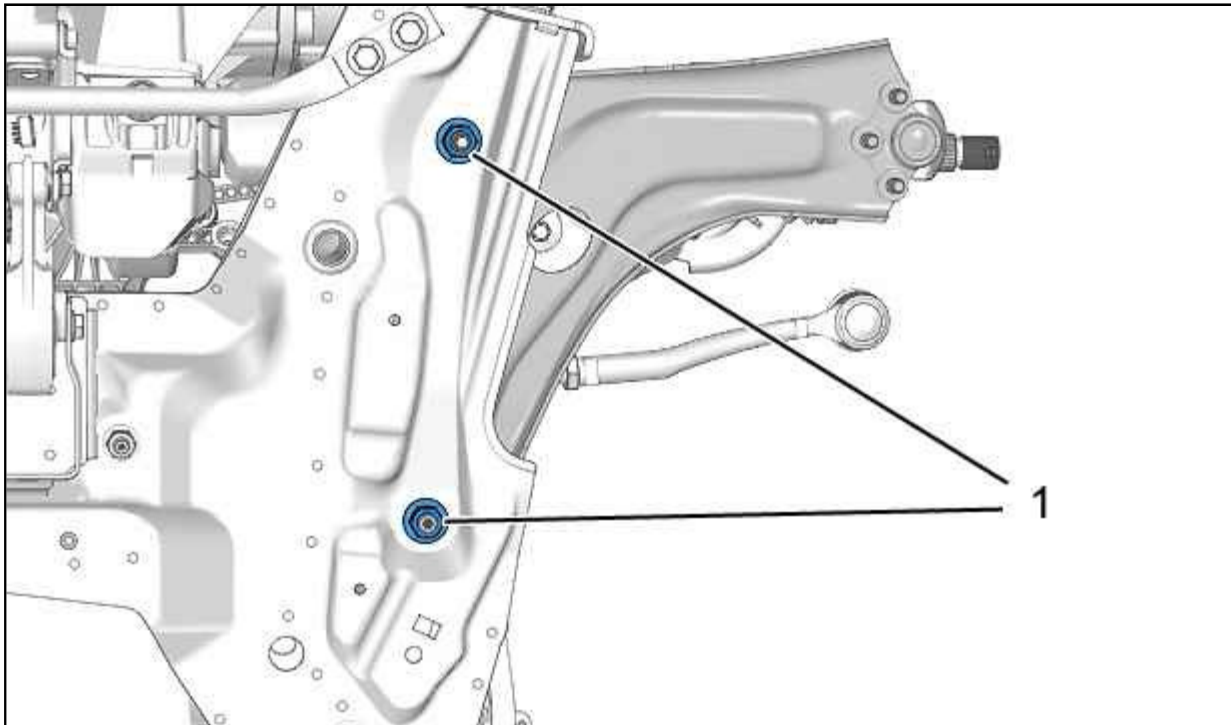


Figure : B3BG009D

Remove the nuts (1).

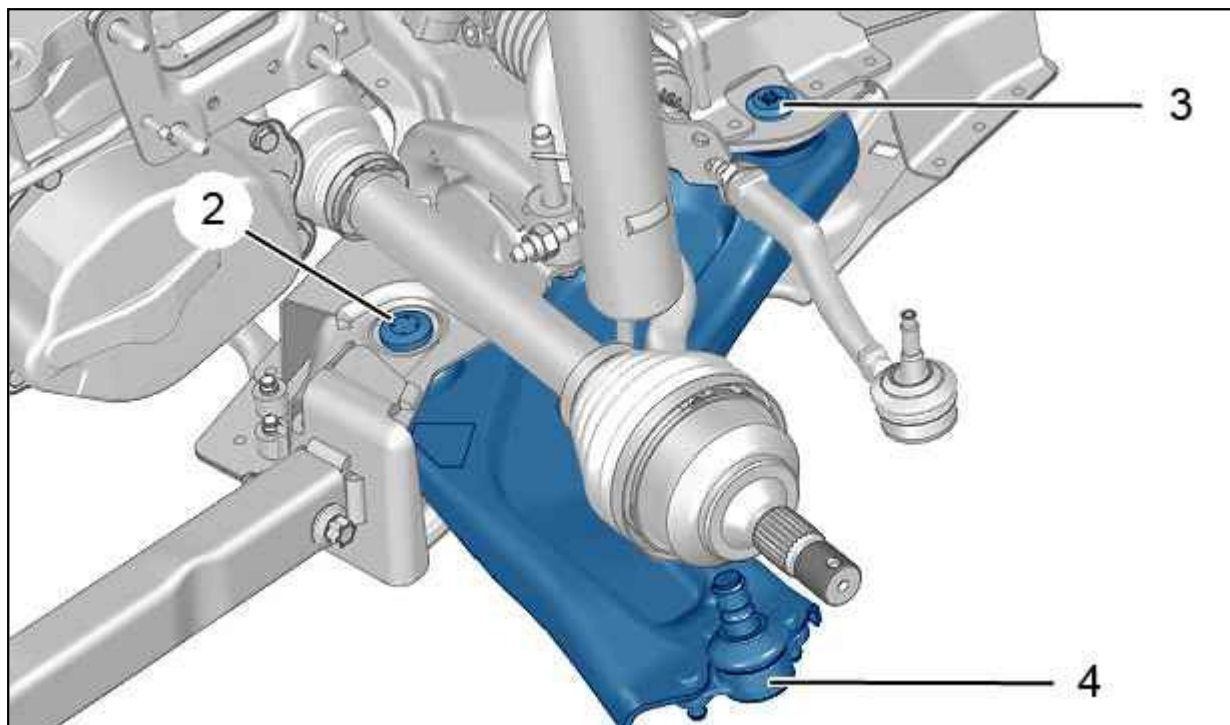


Figure : B3BG00AD

Separate the drive shaft - Remove : The front fixing screw (2) of the suspension arm.

Remove :

- The rear fixing screw (3) of the suspension arm
- The suspension arm (4)

2. Refitting

CAUTION : Systematically replace the nuts (1).

CAUTION : Adhere to the tightening torques  .

Engage the suspension arm (4) complete with its rubber bushes and ball-joint.

Fit : The rear fixing screw (3) of the suspension arm.

Separate the drive shaft.

Fit :

- The front fixing screw (2) of the suspension arm
- The nuts (1)
- **The front hub carrier** 