

REMOVING - REFITTING : EXTERIOR MIRROR

1. Recommended tools

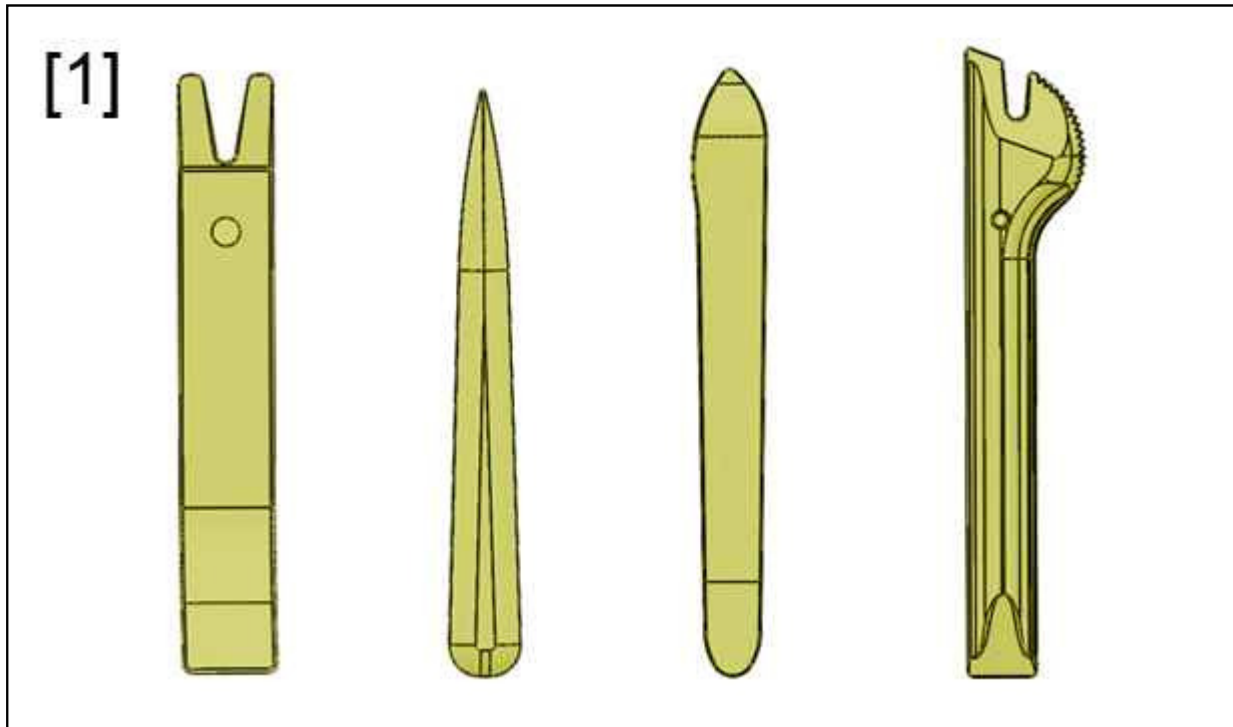


Figure : E5AP30WD

[1] Stripping tool (-).1350-ZZ.

2. Removing

Remove the door trim pad ⓘ .

2.1. Electric mirror

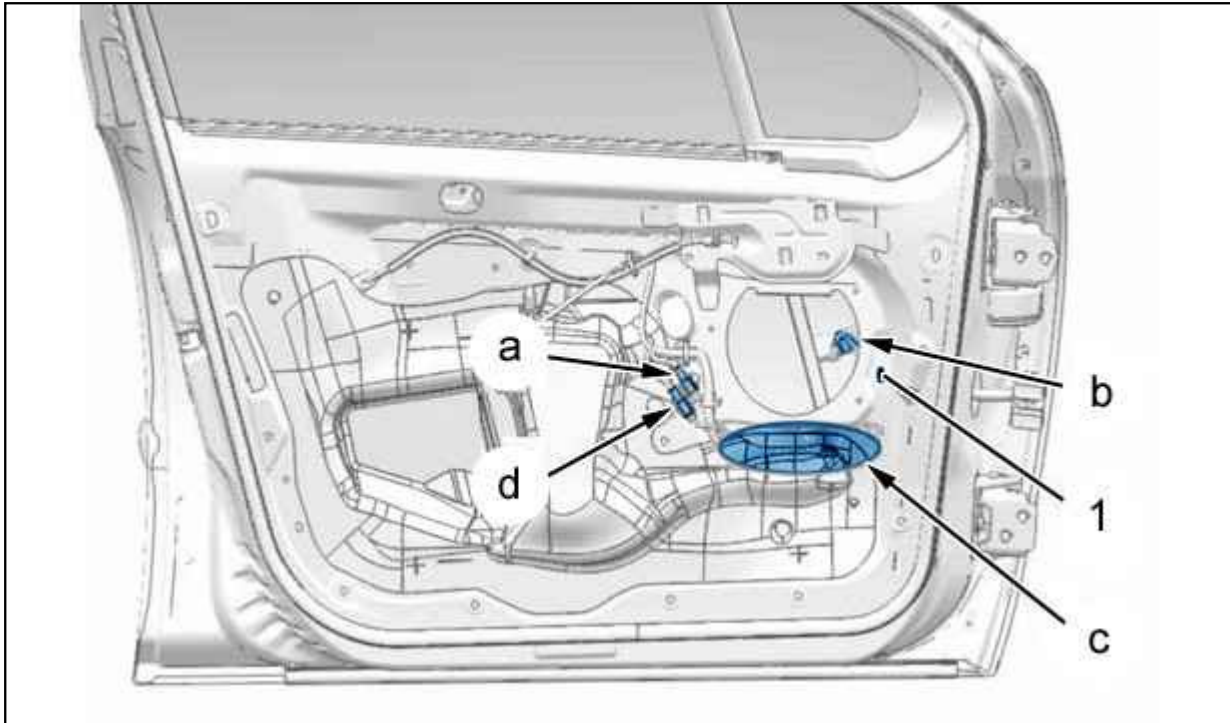


Figure : C4CM0GVD

Partially detach the sealing sheet (as "c") .

Unclip the clip (1) ; Using tool [1].

Unplug (According to equipment) :

- The connector (/) (as "b") (Green 2-way)
- The connector (/) (as "d") (Black 5-way)
- The connector (/) (as "a") (2-way brown)

2.2. Manual rear view mirror

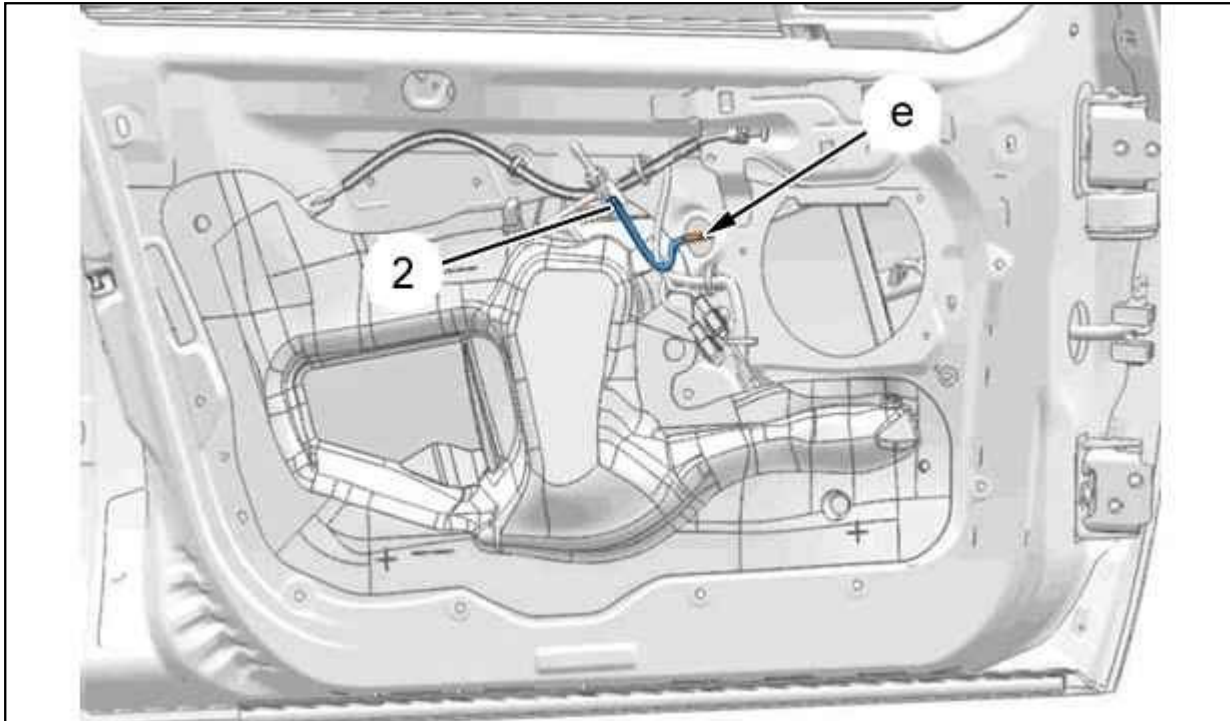


Figure : C4CM0GWD

Release the manual adjustment control cable (2) (as "e") (According to equipment) .

2.3. Removing (Continued)

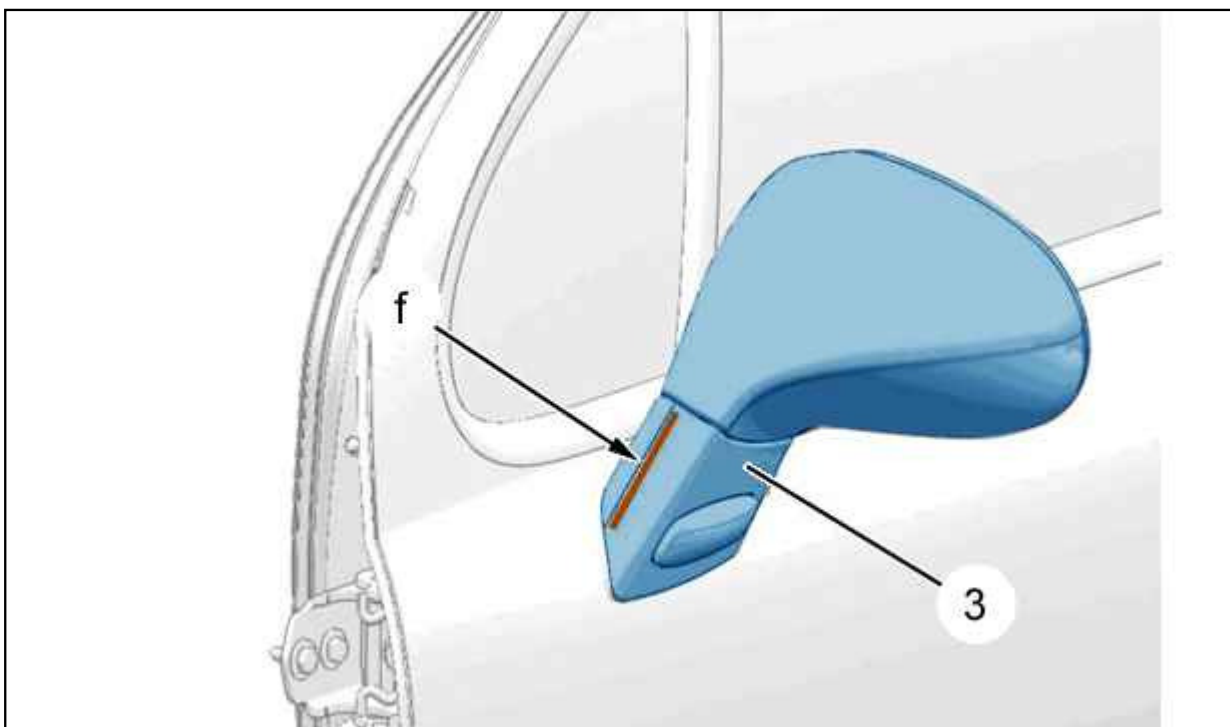


Figure : C4CM0GXD

Unclip the outer cover from the base of the exterior rear view mirror (3) (as "f") ; Using tool [1].

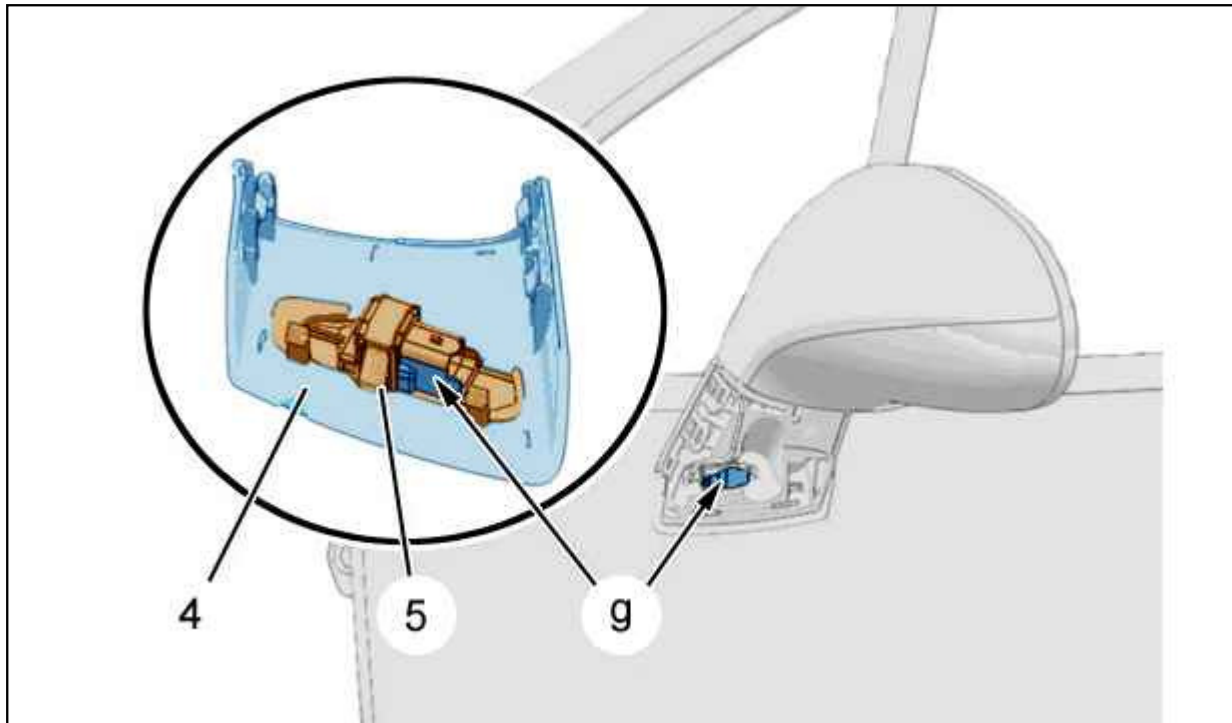


Figure : C4CM0GYD

Disconnect the connector (as "g").

Remove the whole outer cover from the base of the exterior rear view mirror (4) and the side repeater (5).

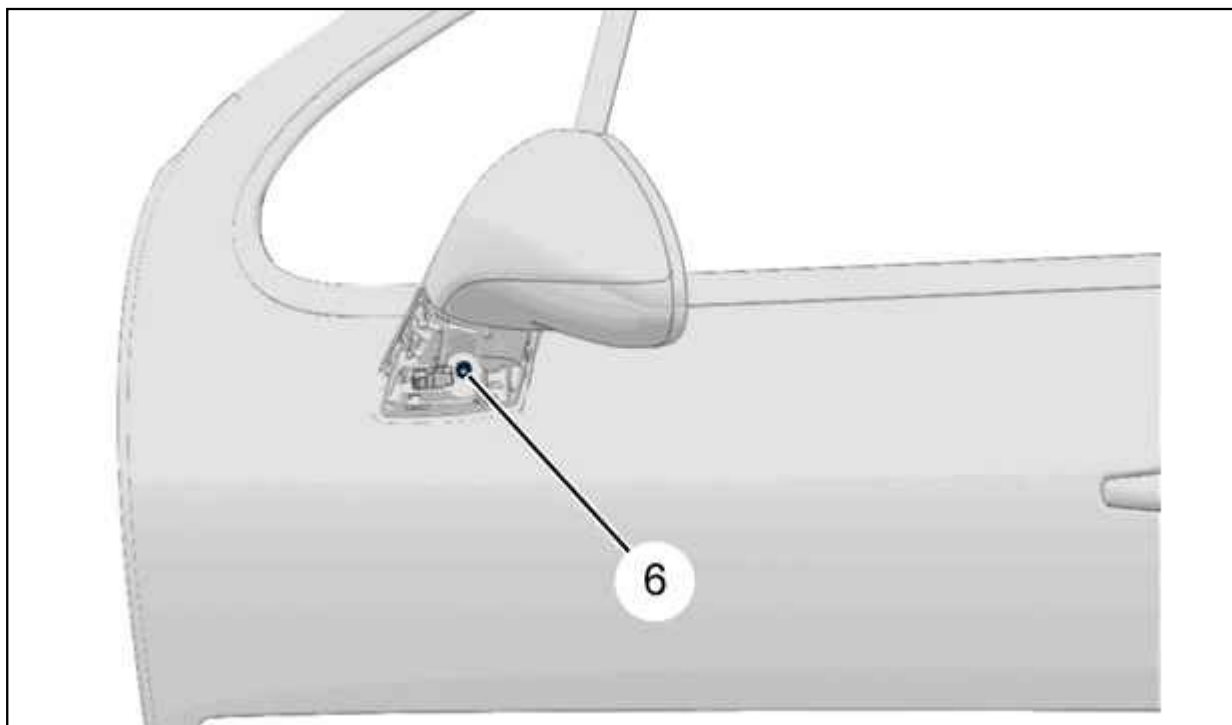


Figure : C4CM0GZD

Remove bolts (6).

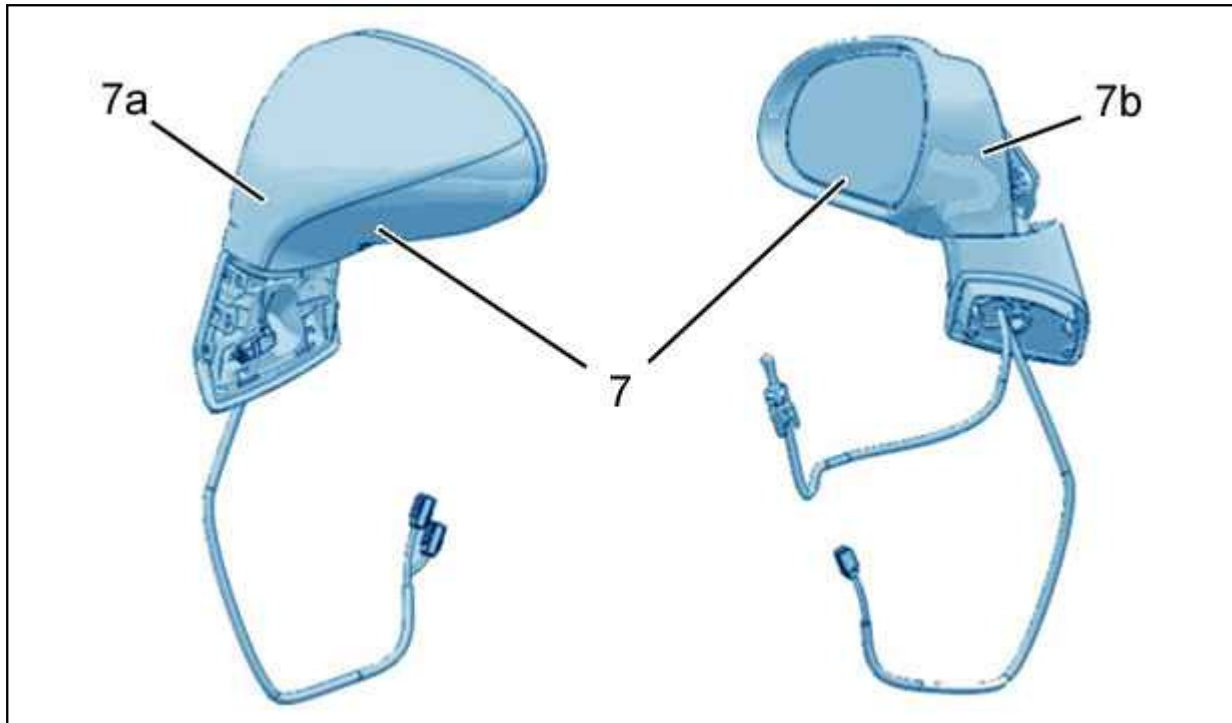


Figure : C4CM0H0D

(7a) : Electric exterior rear view mirror .

(7b) : Manual exterior rear view mirrors.

Release and remove the exterior rear view mirror (7) (According to equipment) .

3. Refitting

Proceed in the reverse order to removal.

Check the electrical operation of the equipment.