

REMOVING - REFITTING : STEERING COLUMN

1. Removing

Remove the driver's air bag .

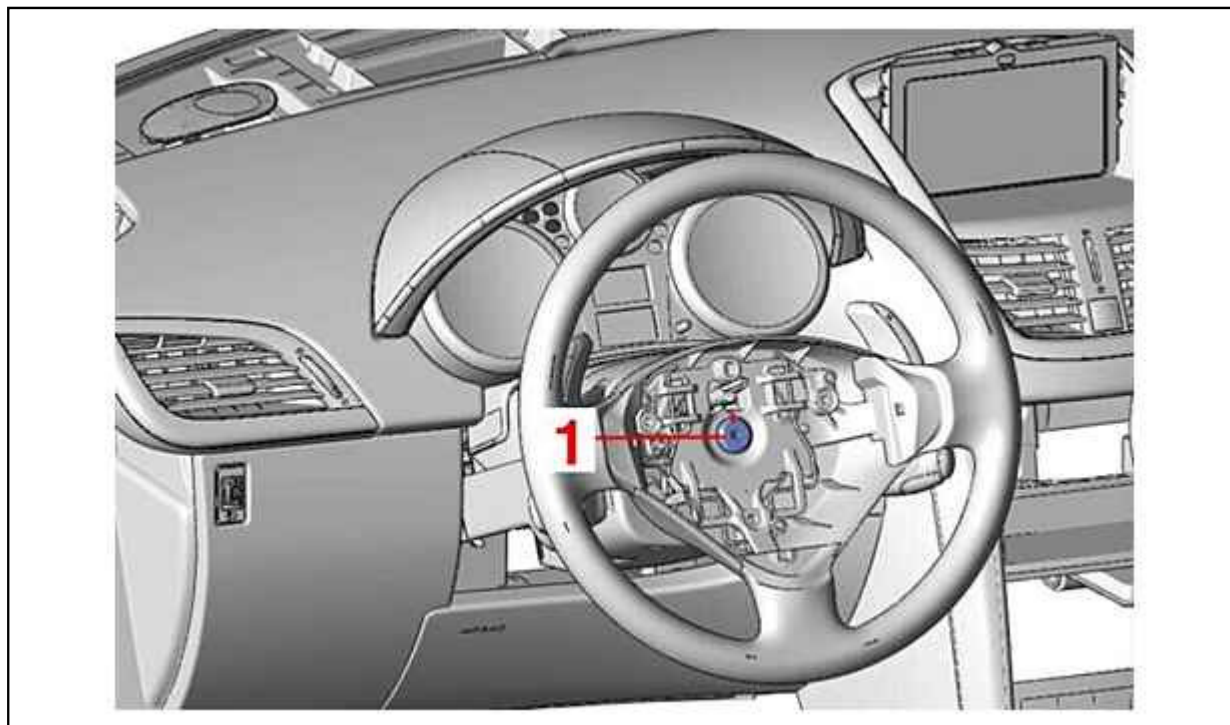


Figure : B3EK143D

Make a mark to guarantee the position of the steering wheel on refitting.

Remove the fixing (1) from the steering wheel .

Remove the steering wheel carefully without pulling out the supply connector .

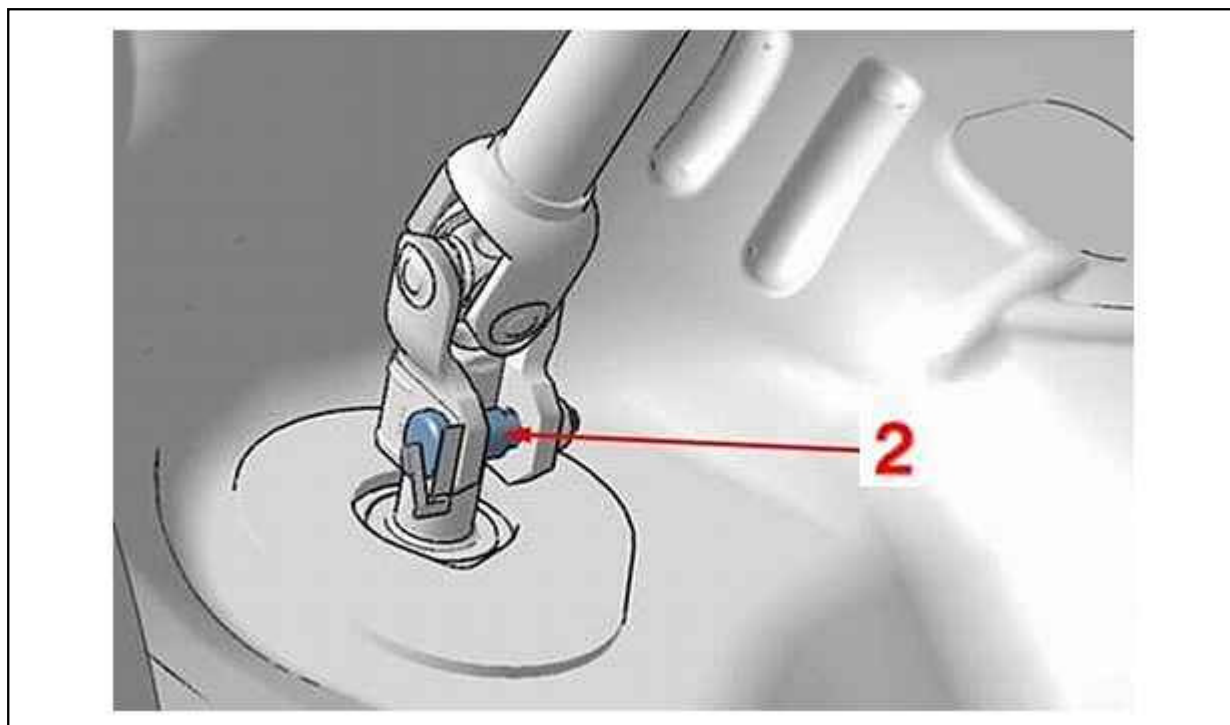


Figure : B3EK144D

Remove the screw (2) from the steering column universal joint .
Lock the steering lock.

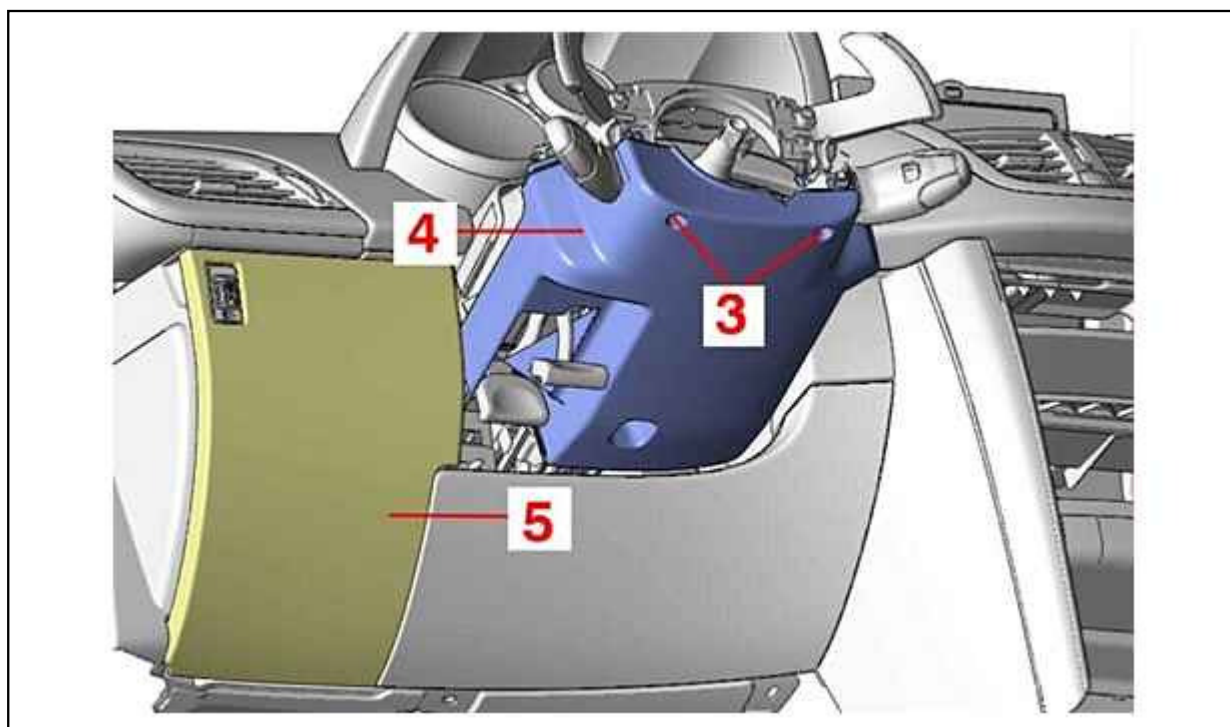



Figure : B3EK145D

Remove :

- The bottom cowl fixing screws (3)

- The bottom cowl (4)
- **The fuse box (5) access flap** 
- The top of column
- The steering lock
- The driver's steering column air bag

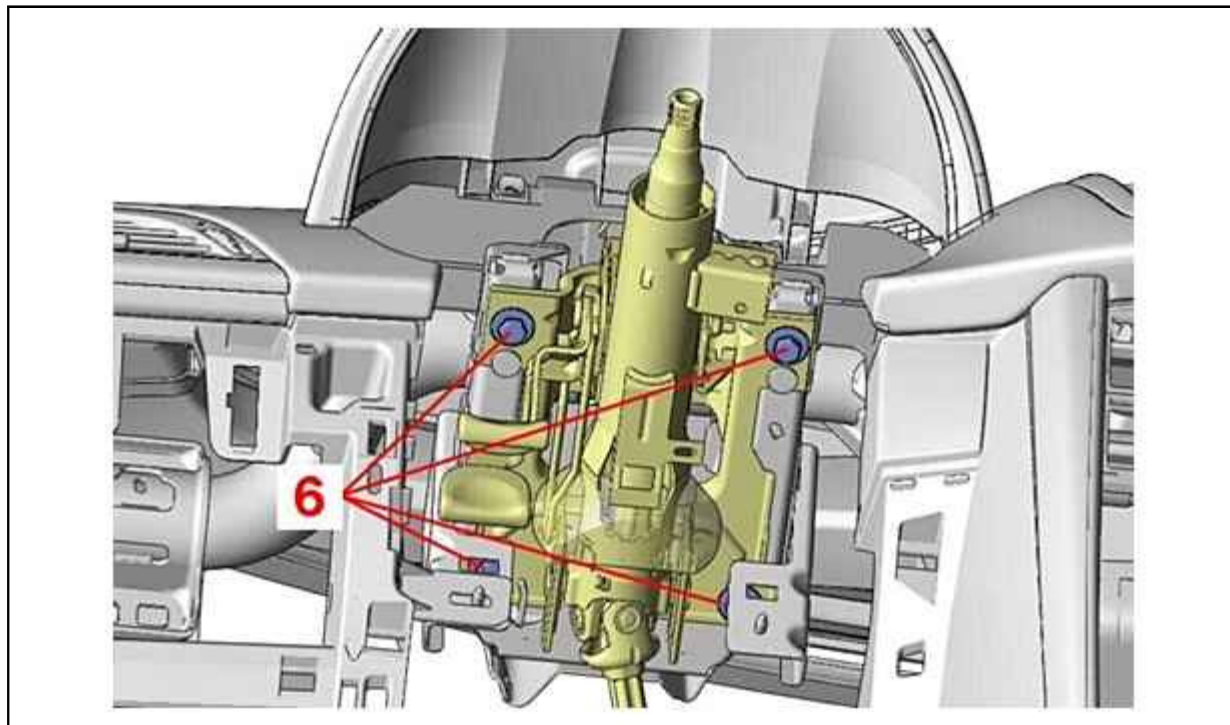


Figure : B3EK146D

Remove :

- The mountings (6)
- The steering column (/)

2. Refitting

Fit :

- The steering column universal joint bolt (2)
- The mountings (6)
- driver's knee airbag
- The steering lock
- The top of column
- The fuse box (5) access flap
- The bottom cowl (4)
- The bottom cowl fixing screws (3)
- The steering wheel (/)
- Steering wheel fixing (1)
- Driver's airbag

Check that the electrical accessories operate correctly.
Initialise the various ECUs.