

REMOVING-REFITTING : ENGINE OIL TEMPERATURE AND LEVEL SENSOR

URGENT : Observe the safety and cleanliness recommendations ⓘ .

1. Location

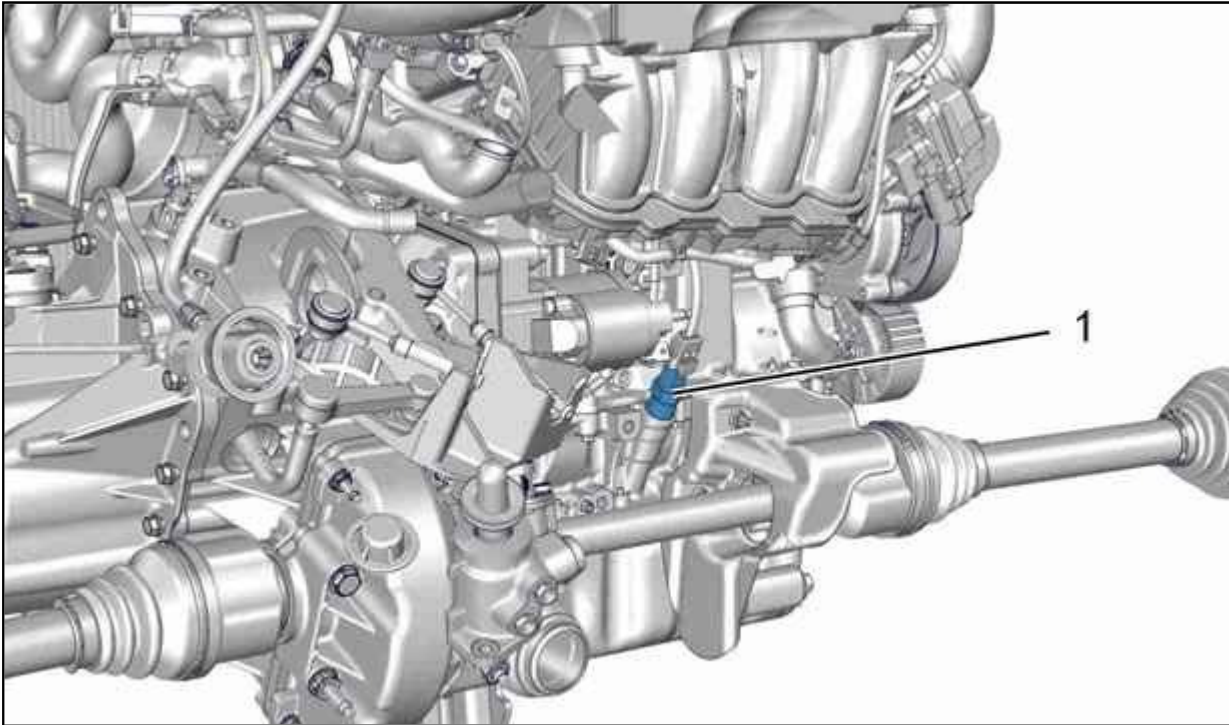


Figure : B1FM033D

(1) Engine oil temperature and level sensor.

2. Removing

Disconnect the battery.

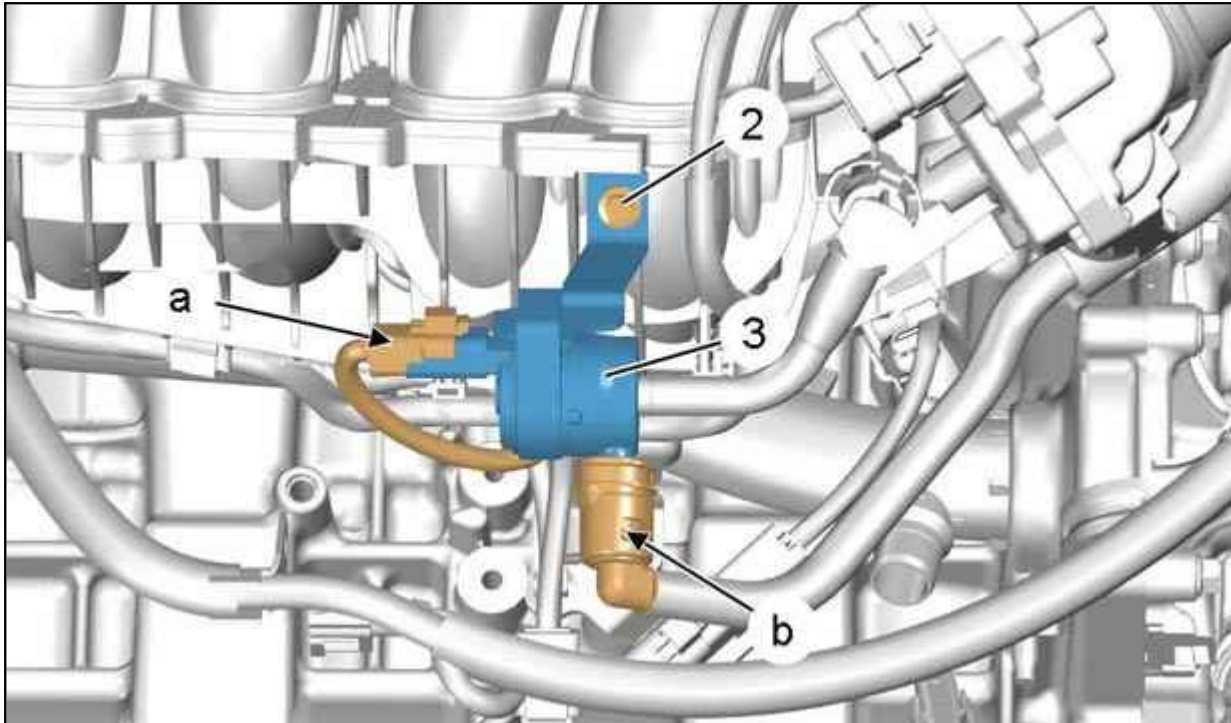


Figure : B1FG015D

Disconnect the connector (at "a").
Unclip the oil breather pipe (at "b").
Remove bolts (2).
Move aside and secure : The purge canister solenoid valve (3).

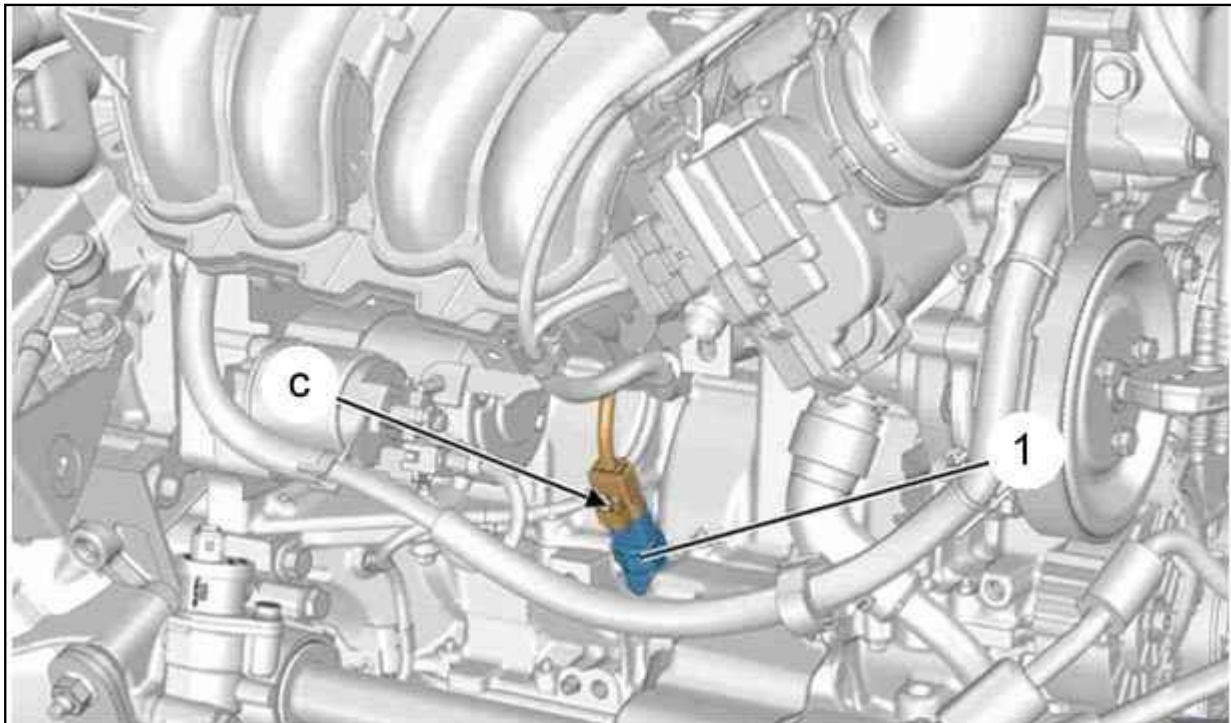


Figure : B1FG016D

Disconnect the connector (at "c").

Remove : The engine oil level and temperature sensor (1) and its seal.

3. Refitting

CAUTION : Adhere to the tightening torques  .

Fit : The engine oil level and temperature sensor (1) and its seal.

Connect the connector (at "c").

Fit :

- The purge canister solenoid valve (3)
- The (2) bolt

Connect the connector (at "a").

Clip : The oil vapour breather pipe (at "b").

CAUTION : Perform the operations to be carried out following reconnection of the battery.

Connect the battery.