

## REMOVING - REFITTING : REAR SEAT BELT

**URGENT** : Observe the safety and cleanliness recommendations ⓘ .

### 1. Preliminary operations

Disconnect the battery.

Remove the luggage compartment carpet.

### 2. Removing

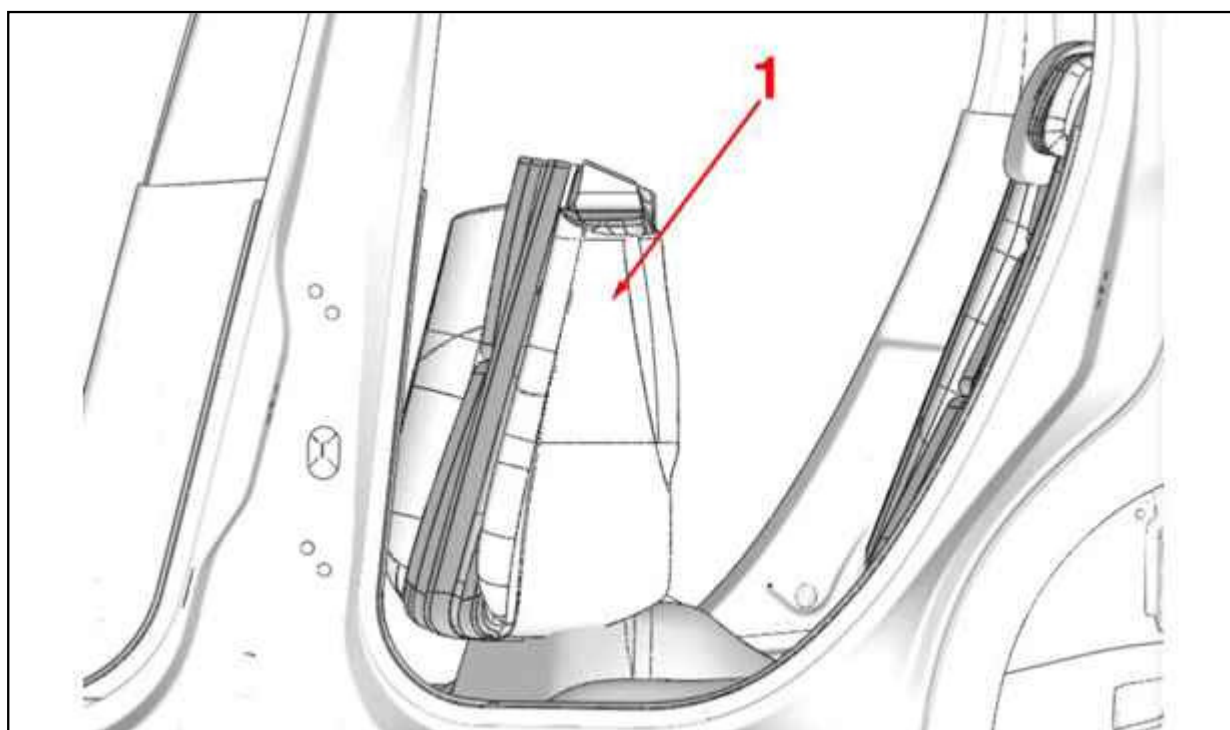


Figure : C5JK0QTD

Tilt the rear seat cushions (1).

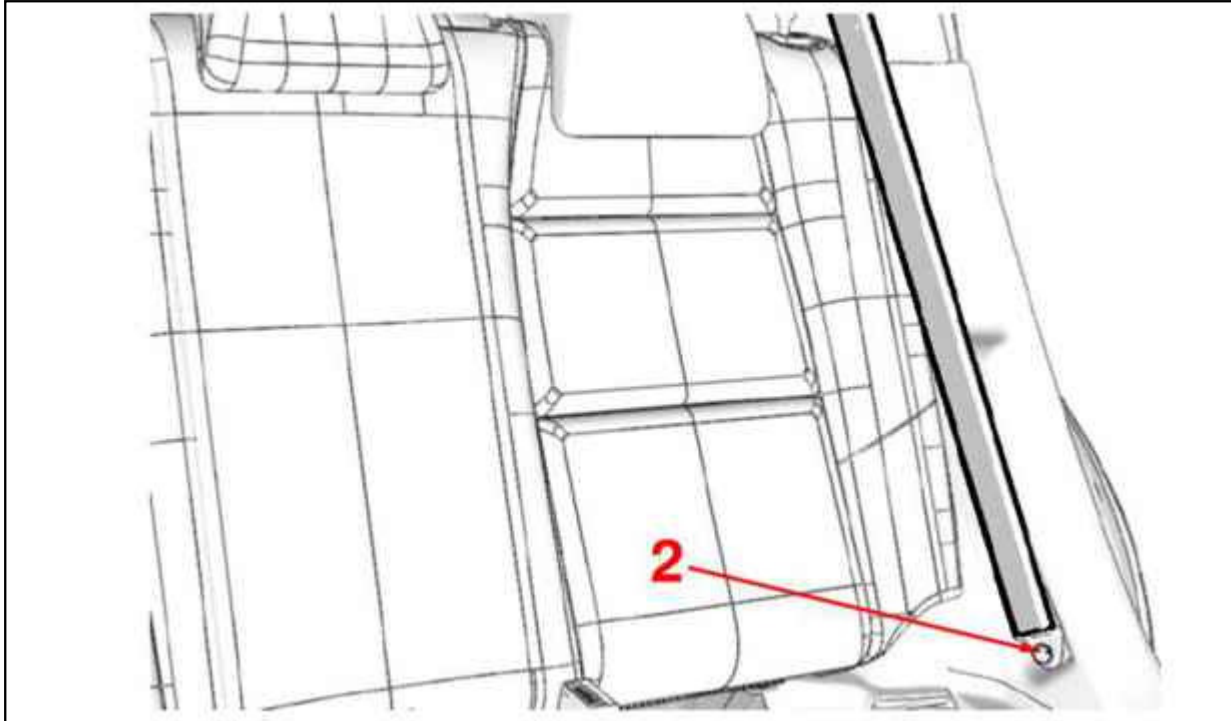


Figure : C5JK0QUD

Remove the fastener (2) (Symmetrical operation).

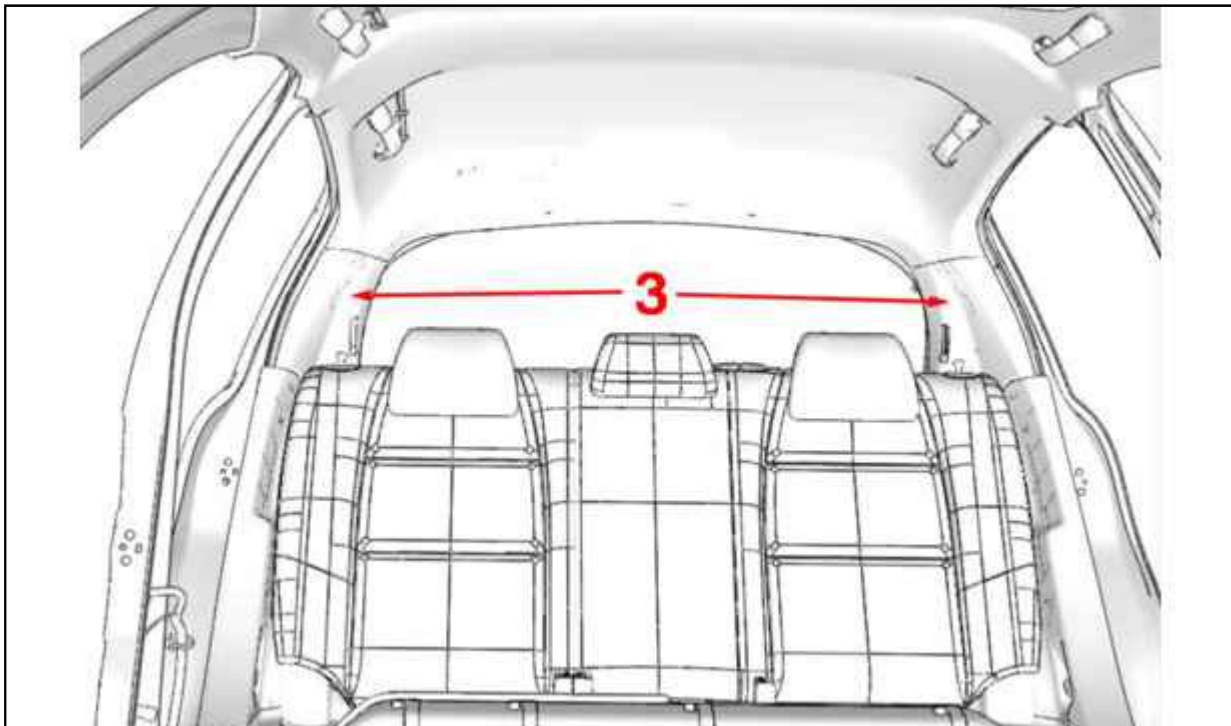


Figure : C5JK0QVD

**Remove the quarter panel trim (3) .**

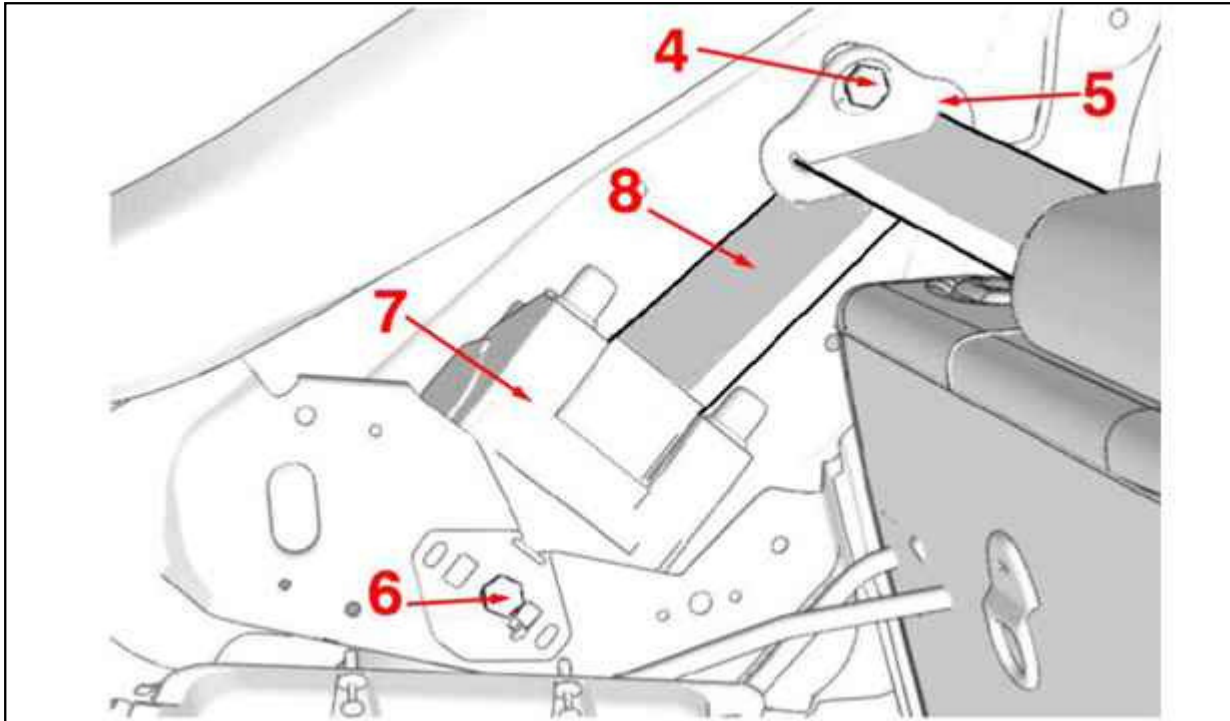


Figure : C5JK0QWD

Remove (Symmetrical operation) :

- The fixing (4) of the pulley (5) of the rear seat belt (8)
- The fixing (6) of the inertia reel (7) of the rear seat belt (8)

Remove the assembly (/) : Rear seat belts (8).

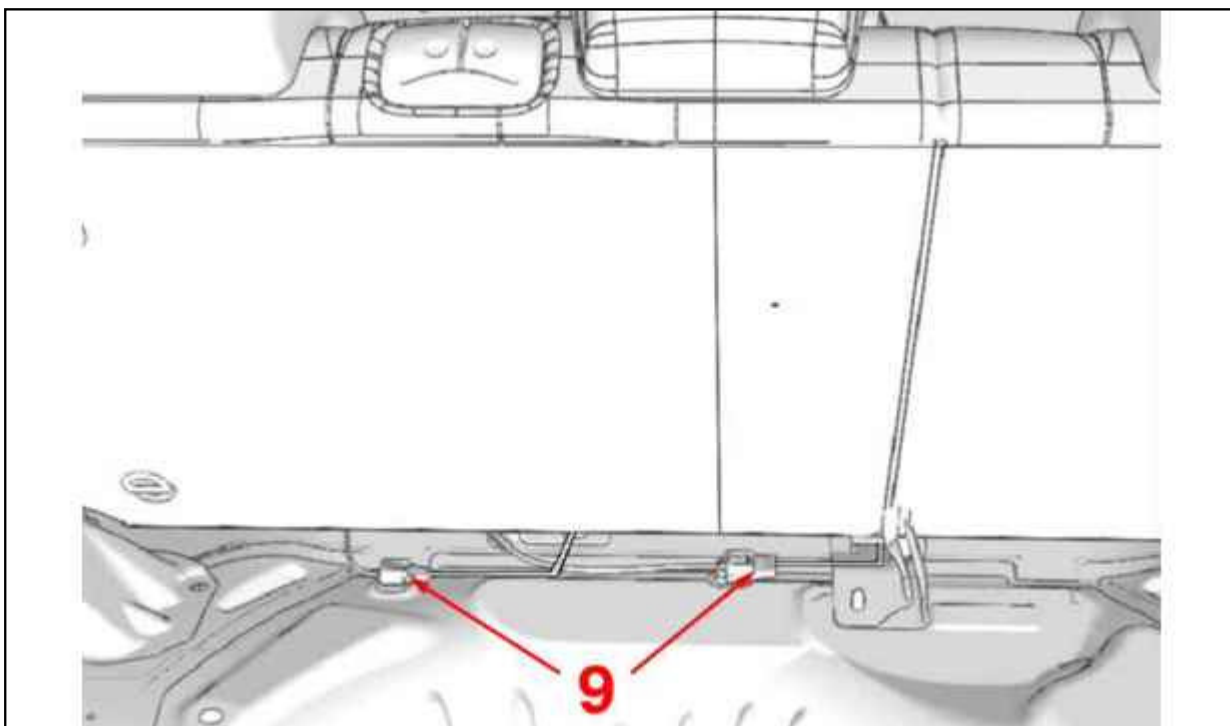


Figure : C5JK0QXD

Disconnect the connectors (9) (According to equipment).

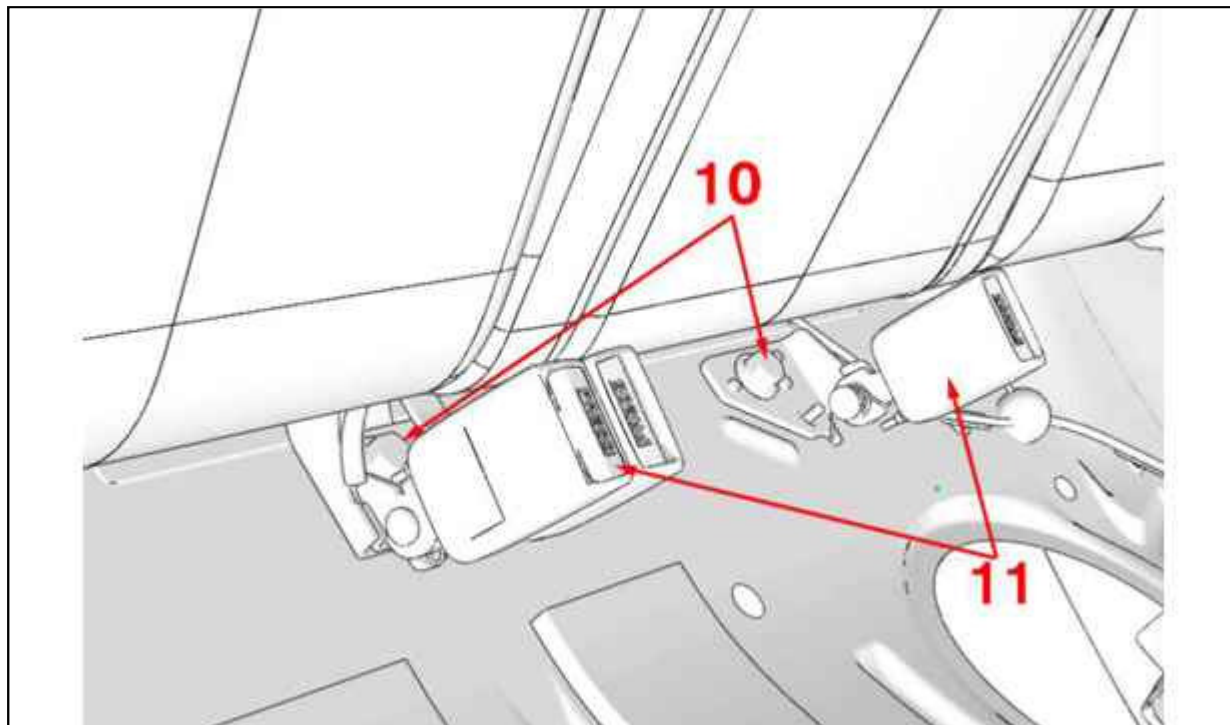


Figure : C5JK0QYD

Remove :

- The mountings (10)
- The rear seat belt buckle straps (11)

**Remove the reel of the central rear seat belt** .

### 3. Refitting

Proceed in the reverse order to removal.

**URGENT** : Adhere to the tightening torques.

Tighten :

- The fixing (10) to 3 m.daN
- The fixings (2), (4), (6) to 2,5 m.daN

**CAUTION** : Perform the operations to be carried out following reconnection of the battery.

Connect the battery.

Re-initialise all the electronic components.

Check that the electrical equipment is working correctly.