


## DISC PLAYER ASSY REPLACEMENT

HINT:

COMPONENTS: See page 67-2

1. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2(See page 71-12 )
2. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY(See page 71-12 )
3. REMOVE GLOVE COMPARTMENT DOOR SUB-ASSY(See page 71-12 )
4. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2(See page 71-12 )

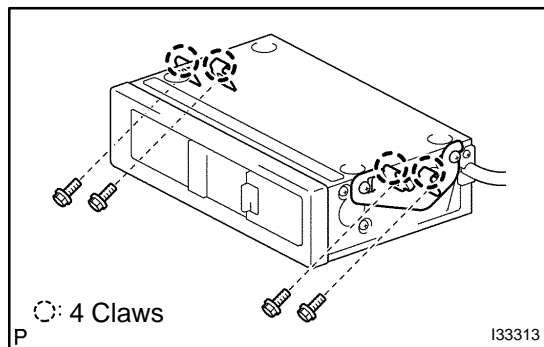

### 5. REMOVE DISC PLAYER ASSY

- (a) Remove the 4 bolts.
- (b) Disengage the 4 claws of disc player assy.
- (c) Disconnect the connectors and remove the disc player assy.

### 6. INSTALL DISC PLAYER ASSY

- (a) Connect the connectors.
- (b) Engage the 4 claws of disc player assy and install the disc player assy with the 4 bolts.