


FRONT NO.2 SPEAKER ASSY REPLACEMENT

670KA-01

HINT:


COMPONENTS: See page 67-2

1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH(See page 75-15)
2. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH(See page 75-15)
3. REMOVE FRONT ARMREST ASSY LH(See page 75-15)
4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH(See page 75-15)

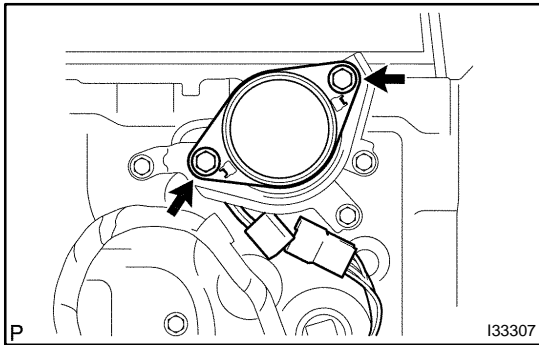

5. REMOVE FRONT NO.2 SPEAKER ASSY

- (a) Disconnect the connector and remove the 2 bolts.
- (b) Remove the front No.2 speaker assy from speaker mounting bracket No.1.

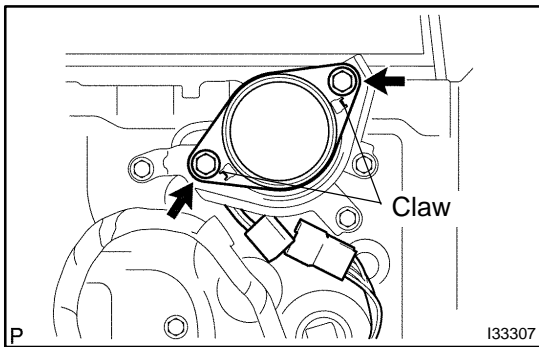

6. INSTALL FRONT NO.2 SPEAKER ASSY

- (a) Align a claw with the notch of the speaker mounting bracket No.1, and install the front No.2 speaker assy with 2 bolts.
- (b) Connect the connector.