

AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL (A340E)

400YW-01

REPLACEMENT


1. REMOVE PROPELLER SHAFT ASSY(See Pub. No. RM 1001U, page 30-11)

2. DRAIN AUTOMATIC TRANSMISSION FLUID

(a) Remove the drain plug, gasket and drain ATF.

(b) Install a new gasket and drain plug.


Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

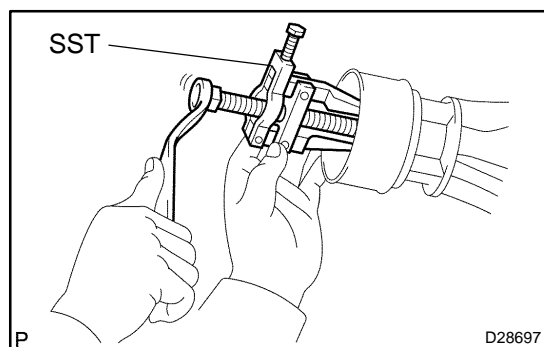

3. REMOVE AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL

(a) Using SST, remove the oil seal.

SST 09308-10010

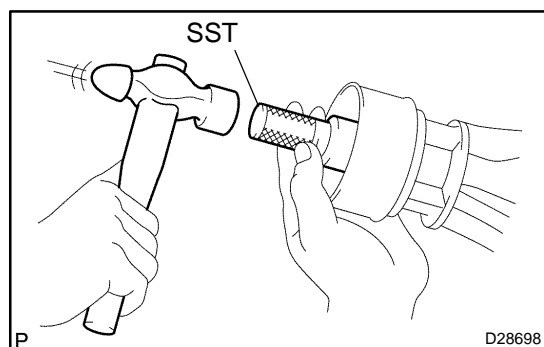

4. INSTALL AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL

(a) Using SST and a hammer, carefully drive in a new oil seal in as far as will go.

SST 09325-40010

Oil seal depth from flat end:

5.8 - 6.2 mm (0.228 - 0.244 in.)

(b) Coat the lip of the oil seal with MP grease.

5. INSTALL PROPELLER SHAFT ASSY(See Pub. No. RM 1001U, page 30-11)

6. ADD AUTOMATIC TRANSMISSION FLUID

7. INSPECT AUTOMATIC TRANSMISSION FLUID(See Pub. No. RM 1001U, page 40-2)