


ADJUSTMENT

1. INSPECT SHIFT LEVER POSITION

- (a) When shifting from P to R position only with ignition switch ON and depress brake pedal, make sure that the shifting lever moves smoothly and can be moderately operated.
- (b) When starting engine, make sure that the vehicle moves forward when shifting from N to D position and moves rearward when shifting to R position.

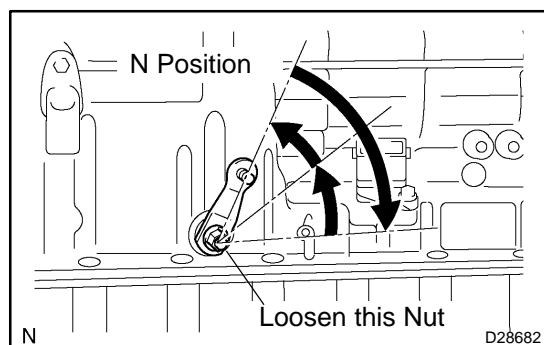

2. ADJUST SHIFT LEVER POSITION

- (a) Loosen the nut.
- (b) Push the control shaft fully rearward.
- (c) Return the control shaft lever 2 notches to N position.
- (d) Set the shift lever to N position.
- (e) While holding the shift lever lightly toward the R position side, tighten the nut.

Torque: 15.6 kgf·cm (159 kgf·cm, 12 ft·lbf)