


SPEED SENSOR FRONT LH REPLACEMENT

HINT:


Replacement of RH side is same as that of LH side.

1. REMOVE FRONT WHEEL

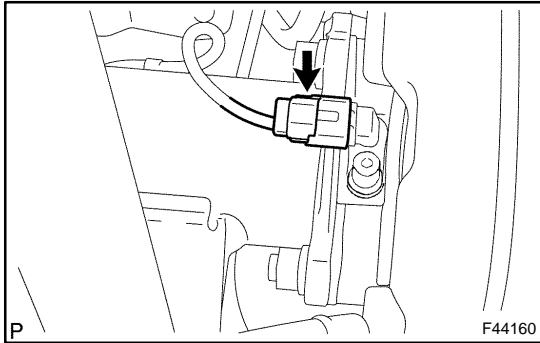

2. REMOVE SPEED SENSOR FRONT LH


- (a) Disconnect the speed sensor connector.

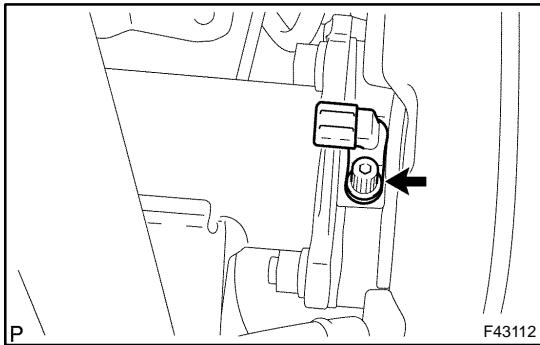

- (b) Using a hexagon wrench (5 mm), remove the bolt and front speed sensor from the steering knuckle.

NOTICE:

- Do not stick and foreign matter on the sensor tip.
- Do not let the foreign matter into the sensor installation hole.

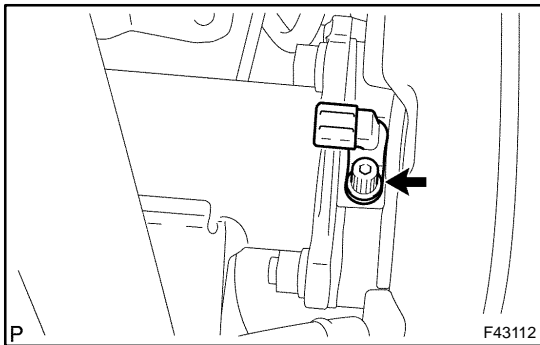


3. INSTALL SPEED SENSOR FRONT LH

- (a) Using a hexagon wrench (5 mm), install the front speed sensor with the bolt to the steering knuckle.

Torque: 8.3 N·m (85 kgf·cm, 73 in.-lbf)

NOTICE:

Make sure the sensor tip is clean.

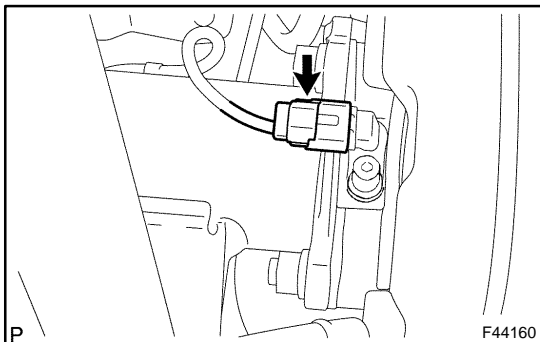

- (b) Connect the speed sensor connector.

4. **INSTALL FRONT WHEEL**
Torque: 110 N·m (1,122 kgf·cm, 81 ft·lbf)
5. **CHECK VSC SENSOR SIGNAL (See page [05-307](#))**