


# STEERING SENSOR REPLACEMENT


320P6-01

1. **PRECAUTION** (See page 60-23 )
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-23 )
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD** (See page 60-23 )
4. **REMOVE STEERING WHEEL COVER LOWER NO.3** (See page 50-8 )
5. **REMOVE STEERING WHEEL COVER LOWER NO.2** (See page 50-8 )
6. **REMOVE HORN BUTTON ASSY** (See page 50-8 )
7. **REMOVE STEERING WHEEL ASSY** (See page 50-8 )  
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
8. **REMOVE STEERING COLUMN COVER UPR** (See page 50-8 )
9. **REMOVE SPIRAL CABLE SUB-ASSY** (See page 50-8 )
10. **REMOVE TURN SIGNAL SWITCH ASSY** (See page 50-8 )

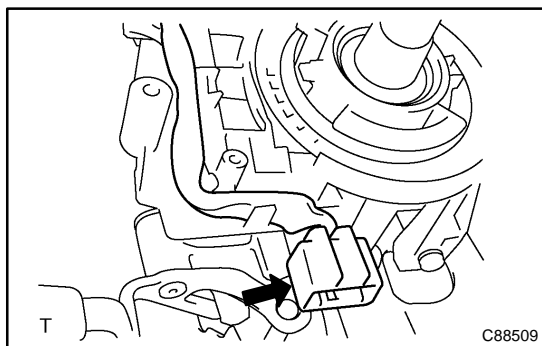


## 11. REMOVE STEERING SENSOR

- (a) Remove the steering sensor connector.

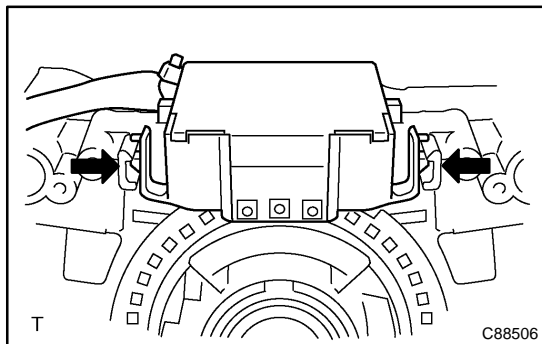


- (b) Remove the 2 claws, then remove the steering sensor.

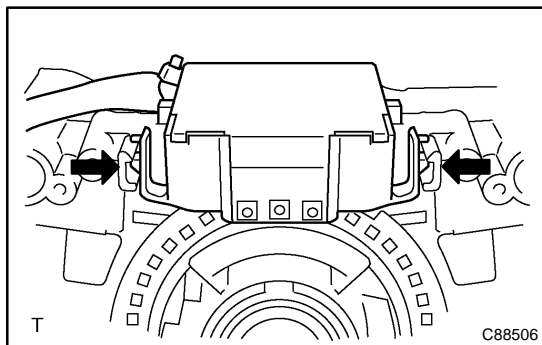

## 12. INSTALL STEERING SENSOR

- (a) Install the steering sensor.

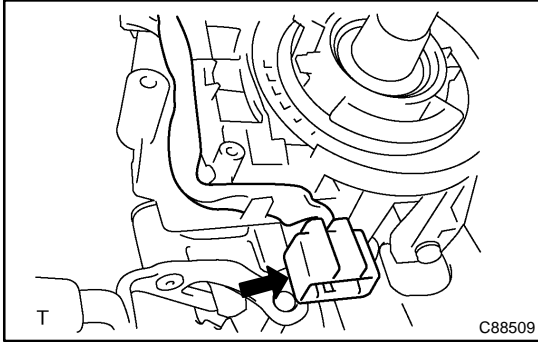

(b) Install the steering sensor connector.

**13. INSTALL TURN SIGNAL SWITCH ASSY (See page 50-8 )**

**14. INSPECT SPIRAL CABLE SUB-ASSY(See page 50-8 )**

If the following condition is identified, replace the spiral cable sub-assy with a new one.

**Condition:**

**Scratches or cracks on the connector**

**Cracks, dents or chipping of the spiral cable sub-assy**

**15. PLACE FRONT WHEELS FACING STRAIGHT AHEAD (See page 60-23 )**

**16. INSTALL SPIRAL CABLE SUB-ASSY (See page 50-8 )**

**17. INSTALL STEERING COLUMN COVER UPR (See page 50-8 )**

**18. INSTALL STEERING WHEEL ASSY (See page 50-8 )**

**19. INSTALL HORN BUTTON ASSY (See page 50-8 )**

**20. INSTALL STEERING WHEEL COVER LOWER NO.2 (See page 50-8 )**

**21. INSTALL STEERING WHEEL COVER LOWER NO.3 (See page 50-8 )**

**22. INSPECT SRS WARNING LIGHT (See page 05-614 )**

**23. PERFORM STEERING ANGLE SENSOR ZERO POINT CALIBRATION (See page 05-307 )**

**24. CHECK VSC SENSOR SIGNAL (See page 05-307 )**