


VSC WARNING LIGHT CIRCUIT (DOES NOT LIGHT UP)

CIRCUIT DESCRIPTION

If the ECU stores DTC, the VSC warning light lights on the combination meter.

WIRING DIAGRAM

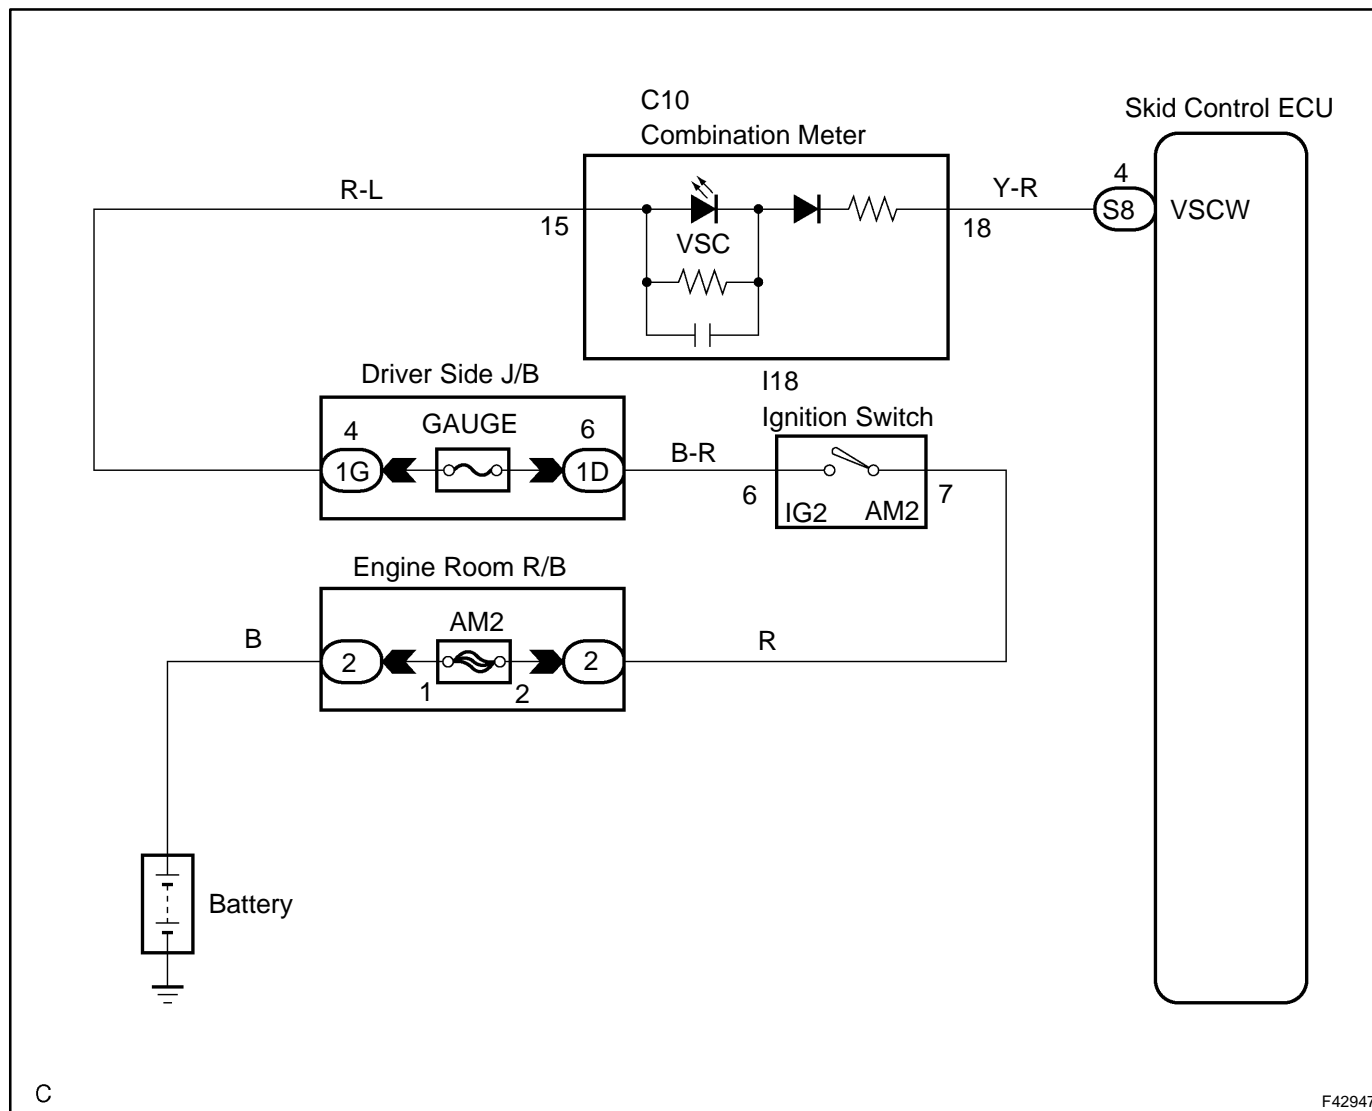

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1 PERFORM ACTIVE TEST BY VSC WARNING LIGHT

- (a) Check that "ON" and "OFF" of the VSC warning light can be shown on the combination meter with the hand-held tester.

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY

NG

2 INSPECT VSC WARNING LIGHT

- (a) See combination meter troubleshooting on page [05-1053](#).

NG

REPAIR OR REPLACE COMBINATION METER ASSEMBLY

OK

3 CHECK HARNESS AND CONNECTOR(SKID CONTROL ECU - COMBINATION METER)

- (a) Check for open and short circuit in harness and connector between skid control ECU and combination meter (See page [01-35](#)).

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY