


CRUISE MAIN INDICATOR LIGHT CIRCUIT

CIRCUIT DESCRIPTION

When the cruise control main switch is turned off, the cruise control does not operate.

WIRING DIAGRAM

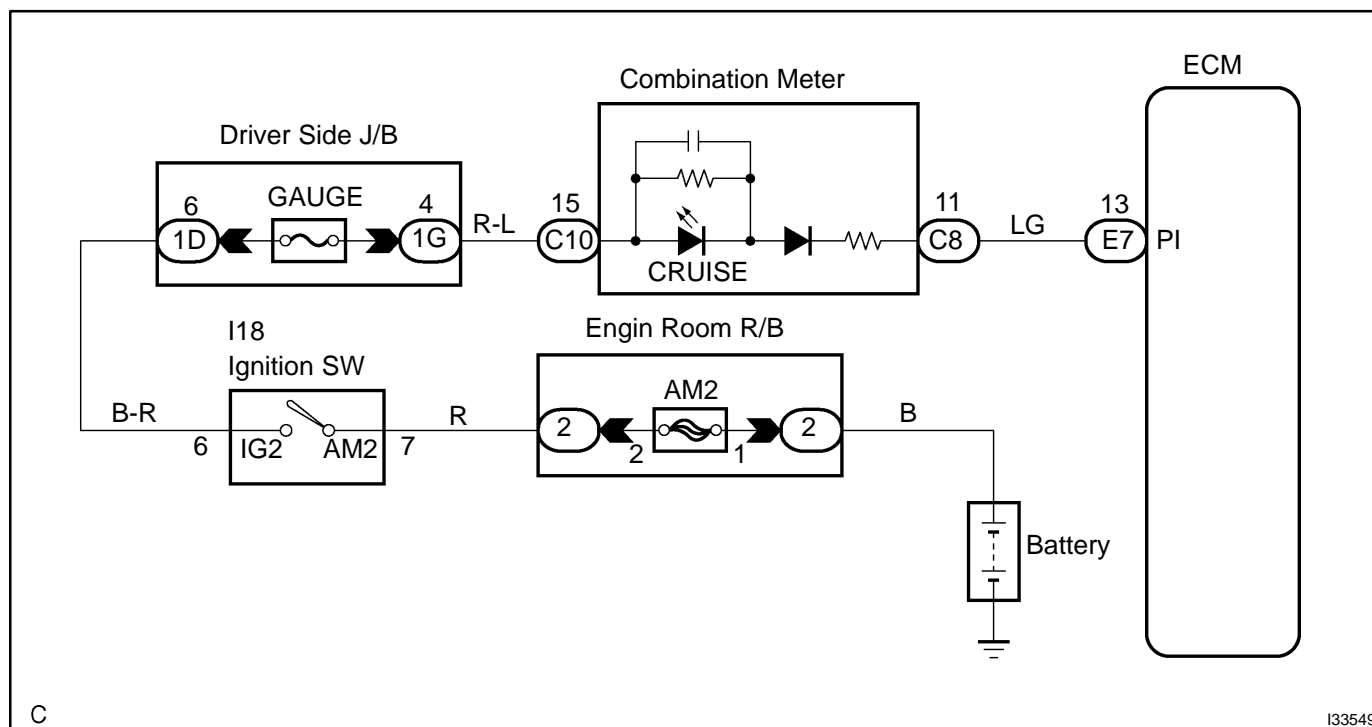

INSPECTION PROCEDURE

1	INSPECT COMBINATION METER ASSY
---	--------------------------------

(a) See combination meter troubleshooting on page 71-1 .

NG	REPAIR OR REPLACE COMBINATION METER ASSY
----	--

OK

2	CHECK HARNESS AND CONNECTOR(COMBINAITON METER ASSY - ECM)
---	---

(a) Check for open and short circuit in harness and connector between combination meter assy and ECM
(See page 01-35).

NG	REPAIR OR REPLACE HARNESS OR CONNECTOR
----	--

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (See page 05-1300)
--