


MAP DVD CANNOT BE EJECTED OR PLAYED

WIRING DIAGRAM

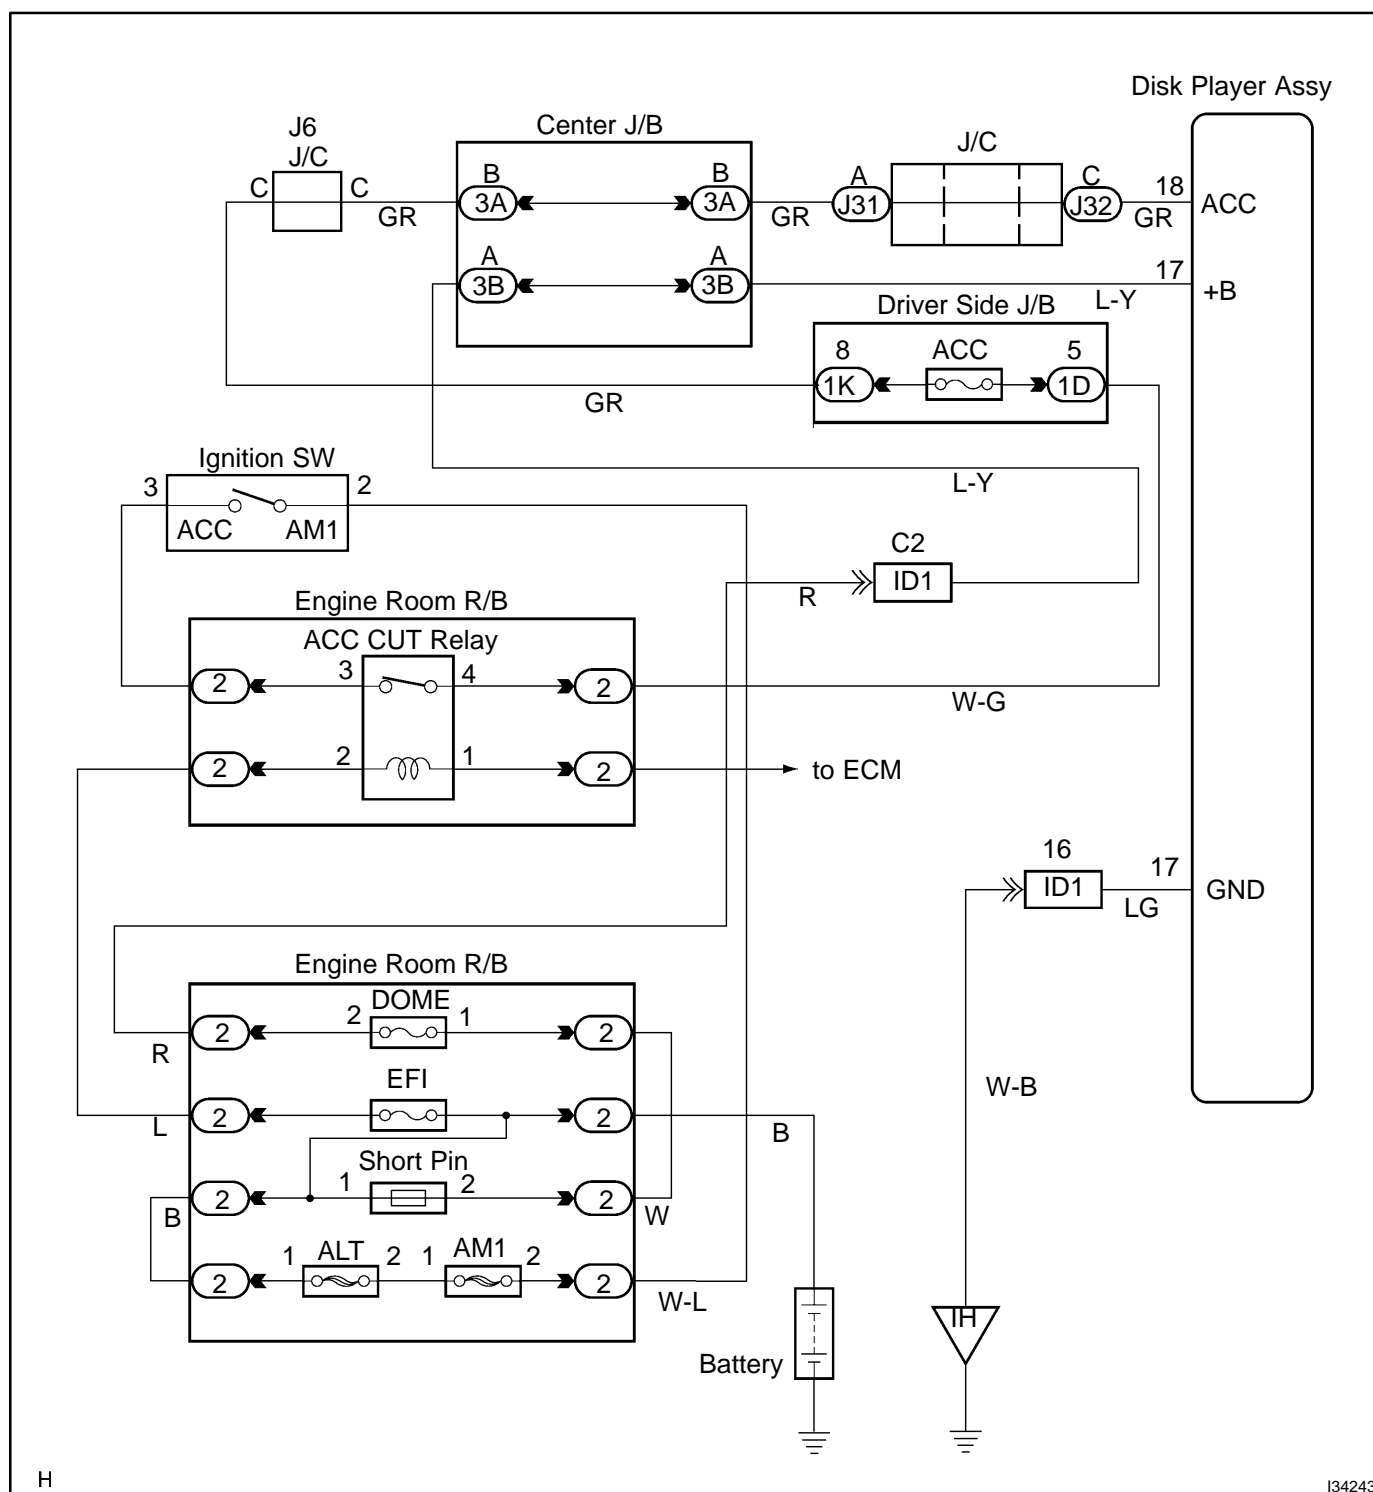


H

I34243

INSPECTION PROCEDURE

1 INSPECT DISC PLAYER ASSY

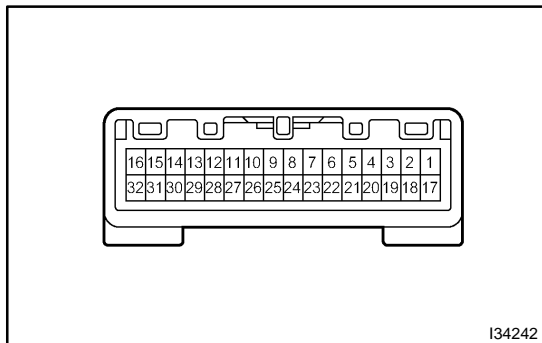

- (a) Remove the Disk player assy with connectors with still connected.
- (b) Check voltage.
 - (1) Measure voltage between terminals +B, ACC and GND of radio receiver assy at each conditions, as shown in the chart.

Standard:

Terminal	Condition	Voltage (v)
+B ⇔ GND	Constant	10 - 14 V
ACC ⇔ GND	Turn ignition switch ACC	10 - 14 V

- (c) Check continuity.
 - (1) Check that the continuity exists between terminal GND of Disk player assy and body ground.

Standard: Continuity exists.**OK****REPLACE DISC PLAYER ASSY****NG****REPAIR OR REPLACE HARNESS OR CONNECTOR**