


EVEN WHEN PRESSING "PWR/VOL" SWITCH OR ANY AUDIO SWITCH, THE SCREEN REMAINS BLACK

WIRING DIAGRAM

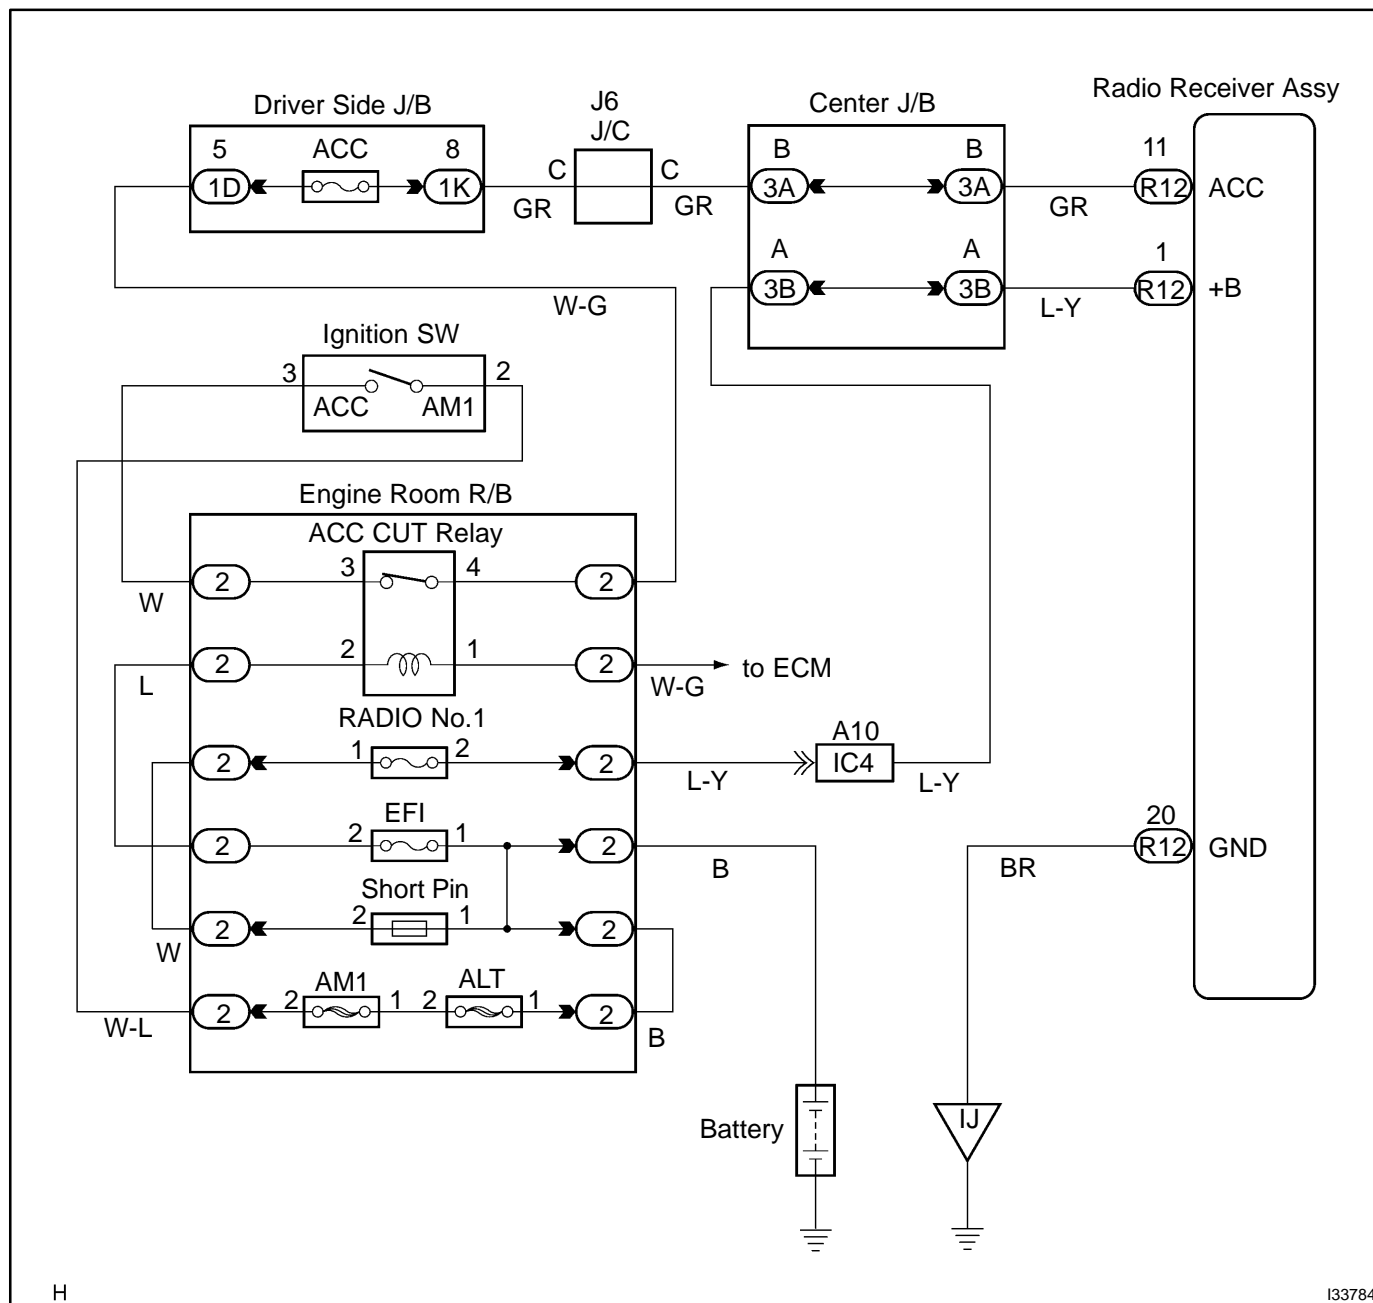

H

I33784

INSPECTION PROCEDURE

1 CHECK SCREEN MODE

(a) Check the screen mode

- (1) Press "AUDIO" or "NAVI" switch to check if the screen turns on.

HINT:

If the mode is "SCREEN OFF" the screen remains black but the sound is heard.


A	Screen remains black.
B	Screen displays audio or navi mode.

B

NORMAL

A

2 INSPECT RADIO RECEIVER ASSY(+B, ACC, GND)

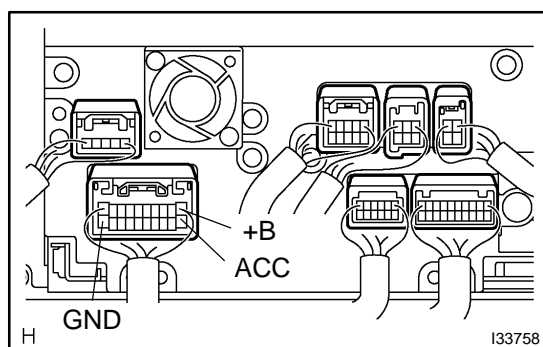

(a) Remove the radio receiver assy with connectors with still connected.

(b) Check voltage.

- (1) Measure voltage between terminals +B, ACC and GND of radio receiver assy at each conditions, as shown in the chart.

Standard:

Terminal	Condition	Voltage (v)
+B ⇔ GND	Constant	10 - 14 V
ACC ⇔ GND	Turn ignition switch ACC	10 - 14 V

(c) Check continuity.

- (1) Check that the continuity exists between terminal GND of radio receiver assy and body ground.

Standard: Continuity exists.

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE RADIO RECEIVER ASSY