

DTC**B0106/54****OPEN IN P SQUIB CIRCUIT**

CIRCUIT DESCRIPTION

The P squib circuit consists of the airbag sensor assy center and the instr pnl pass l/door airbag assy. It causes the SRS to deploy when the SRS deployment conditions are satisfied.


DTC B0106/54 is recorded when an open is detected in the P squib circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0106/54	<ul style="list-style-type: none"> • Open in P squib circuit • P squib malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Instr pnl pass l/door airbag assy (P squib) • Airbag sensor assy center • Instrument panel wire

WIRING DIAGRAM

See page [05-646](#) .

INSPECTION PROCEDURE

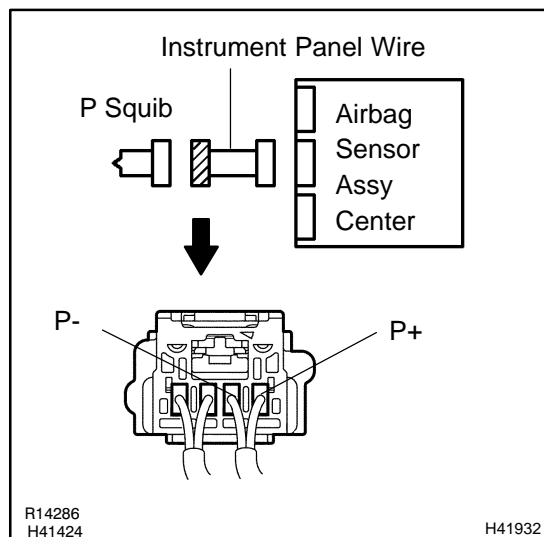
1**CHECK INSTRUMENT PANEL WIRE(P SQUIB CIRCUIT)**

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the instrument panel wire connectors from the airbag sensor assy center and the instr pnl pass l/door airbag assy.
- Measure the resistance between P+ and P- of the black instrument panel wire connector on the instr pnl pass l/door airbag assy side.

OK:**Resistance: Below 1 Ω** **NG****REPAIR OR REPLACE INSTRUMENT PANEL WIRE****OK**

2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

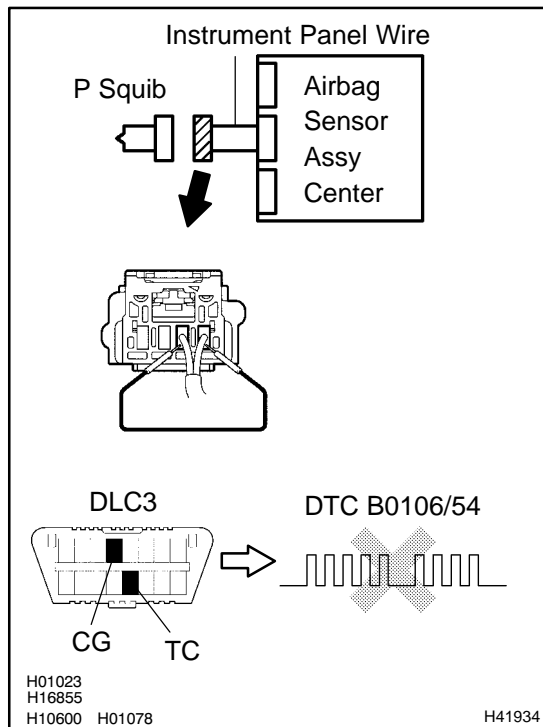

- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect P+ and P- of the black instrument panel wire connector on the instr pnl pass l/ door airbag assy side.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Clear the DTC stored in memory (See page 05-614).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC (See page 05-614).


OK:**DTC B0106/54 is not output.****HINT:**

Codes other than code B0106/54 may be output at this time, but they are not relevant to this check.

NG**REPLACE AIR BAG SENSOR ASSY CENTER****OK**

3 CHECK P SQUIB

SST 09843-18040

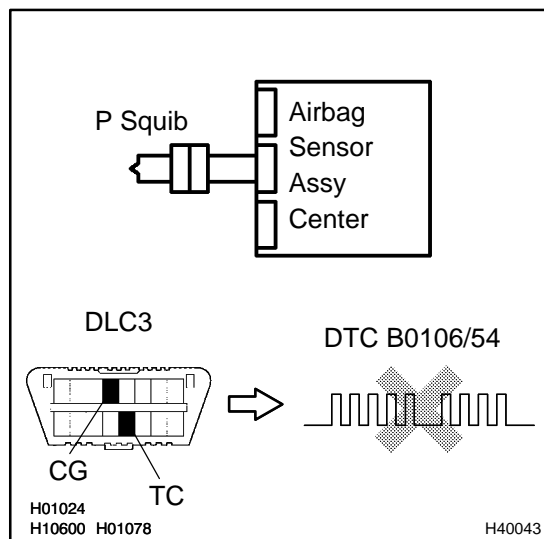

- Turn the ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the instr pnl pass l/door airbag assy connectors.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Clear the DTC stored in memory (See page 05-614).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC (See page 05-614).

OK:**DTC B0106/54 is not output.****HINT:**

Codes other than code B0106/54 may be output at this time, but they are not relevant to this check.

NG**REPLACE INSTR PNL PASS L/DOOR AIR BAG ASSY****OK****USE SIMULATION METHOD TO CHECK**