


CHARCOAL CANISTER FILTER NO.2 (2UZ-FE)


REPLACEMENT

1. REMOVE SPARE TIRE

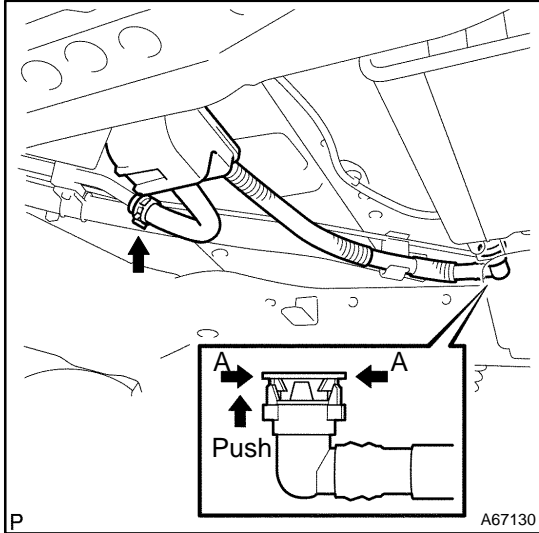

2. REMOVE CHARCOAL CANISTER FILTER NO.2

- (a) Disconnect the canister outlet hose No. 2 from the charcoal canister.
 - (1) Deeply push the connector inside.
 - (2) Pinch portion A.
 - (3) Pull out the connector.
- (b) Disconnect the canister outlet hose from the fuel tank filler pipe.

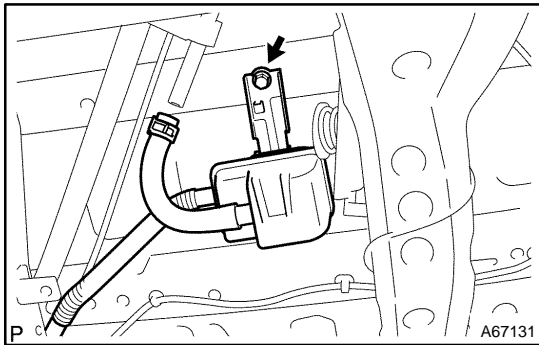

- (c) Remove a bolt and the charcoal canister filter.

3. INSTALL CHARCOAL CANISTER FILTER NO.2

- (a) Install the charcoal canister with a bolt.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
- (b) Connect the canister outlet hose to the fuel tank filler pipe.
- (c) Connect the canister outlet hose No. 2 to the charcoal canister.