


## ACCELERATOR PEDAL ROD ASSY (2UZ-FE) REPLACEMENT

100AI-01

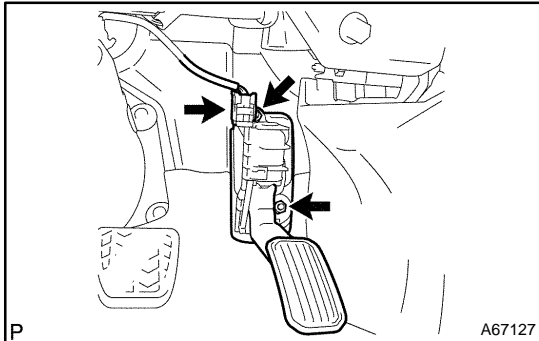

### 1. REMOVE ACCELERATOR PEDAL ROD ASSY

- (a) Disconnect a accelerator pedal connector.
- (b) Remove the 2 nuts and accelerator pedal assy.

### 2. INSTALL ACCELERATOR PEDAL ROD ASSY

#### NOTICE:

- Be care not to give a shock to the accelerator pedal assy.
- Be care not to disassemble the accelerator pedal assy.

- (a) Install the accelerator pedal assy with the 2 nuts.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

- (b) Connect a accelerator pedal connector.