


REPLACEMENT

HINT:

Installation is in the reverse order of the removal. However, when there is a special point concerning the illustration, it is indicated.

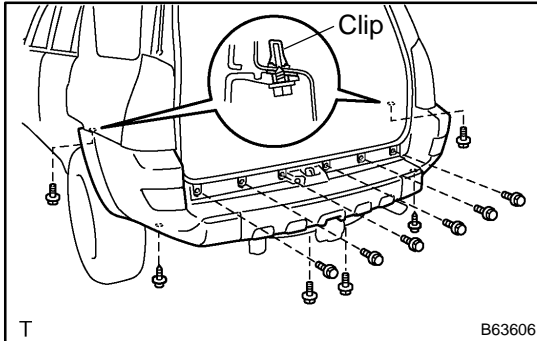

1. REMOVE REAR BUMPER ASSY

- (a) Remove the 3 screws and clip from the mudguard quarter panel sub-assy LH.
- (b) Remove the 3 screws and clip from the mudguard quarter panel sub-assy RH.
- (c) Remove the 12 bolts and 2 clips.
- (d) Disengage the hook and remove the rear bumper.


2. REMOVE REAR BUMPER ENERGY ABSORBER

3. REMOVE REAR BUMPER BAR REINFORCEMENT LH

- (a) Remove the bolt and bumper bar reinforcement.

4. REMOVE REAR BUMPER BAR REINFORCEMENT RH

- (a) Remove the bolt and bumper bar reinforcement.

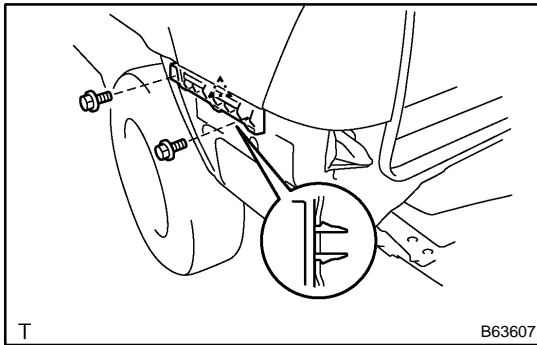

5. REMOVE REAR BUMPER RETAINER UPPER LH

- (a) Remove the 2 bolts.
- (b) Using a screwdriver, remove the bumper retainer.


HINT:

Tape the screwdriver tip before use.

6. REMOVE REAR BUMPER RETAINER UPPER RH

HINT:

Use the same procedures described above for the LH side.

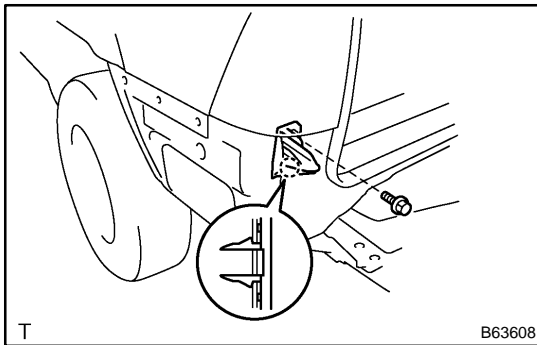

7. REMOVE REAR BUMPER END RETAINER LH

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the rear bumper retainer.

HINT:

Tape the screwdriver tip before use.

8. REMOVE REAR BUMPER END RETAINER RH

HINT:


Use the same procedures described above for the LH side.

9. REMOVE REAR BUMPER EXTENSION LH

- (a) Remove the clip and rear extension bumper.

10. REMOVE REAR BUMPER EXTENSION RH


- (a) Remove the clip and rear extension bumper.

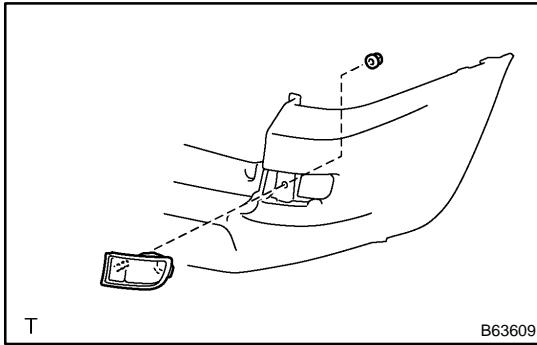**11. REMOVE REAR LAMP ASSY LH**

- (a) Remove the nut and fog lamp.

12. REMOVE REAR LAMP ASSY RH

- (a) Remove the nut and fog lamp.

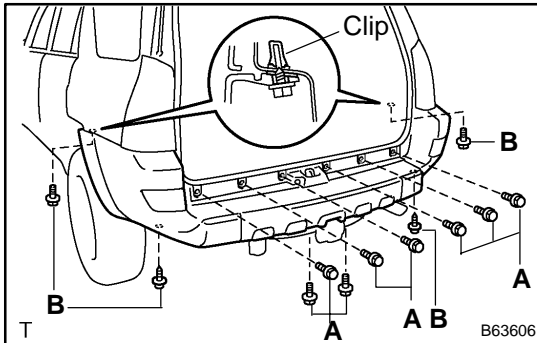**13. INSTALL REAR BUMPER ASSY**

- (a) Install the rear bumper with the 12 bolts and 2 clips.

Torque:

7.0 N·m (71 kgf·cm, 62 in·lbf) for bolt A

14.0 N·m (143 kgf·cm, 10 ft·lbf) for bolt B