


## FUEL PRESSURE PULSATION DAMPER ASSY (1GR-FE) REPLACEMENT

1100S-01

1. WORK FOR PREVENTING GASOLINE FROM SPILLING OUT (See page 11-1 )
2. REMOVE V-BANK COVER (See page 10-7 )

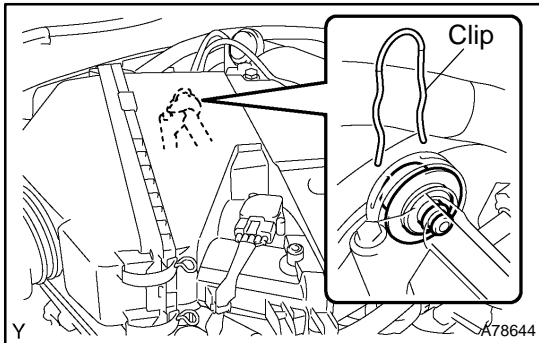

3. REMOVE FUEL PRESSURE PULSATION DAMPER ASSY
  - (a) Remove the clip.
  - (b) Pull out the fuel pressure pulsation damper from the fuel delivery pipe.

### 4. INSTALL FUEL PRESSURE PULSATION DAMPER ASSY

- (a) Apply a light coat of spindle oil or gasoline to a new O-ring and install it to the fuel pressure pulsation damper.
  - (b) Install the fuel pressure pulsation damper to the fuel delivery pipe.
  - (c) Install the clip.
5. INSTALL V-BANK COVER (See page 10-7 )
  6. CHECK FOR FUEL LEAKS (See page 11-5 )