


FUEL PRESSURE REGULATOR ASSY (1GR-FE)


REPLACEMENT

110OR-01

1. WORK FOR PREVENTING GASOLINE FROM SPILLING OUT (See page 11-1)
2. REMOVE V-BANK COVER (See page 10-7)

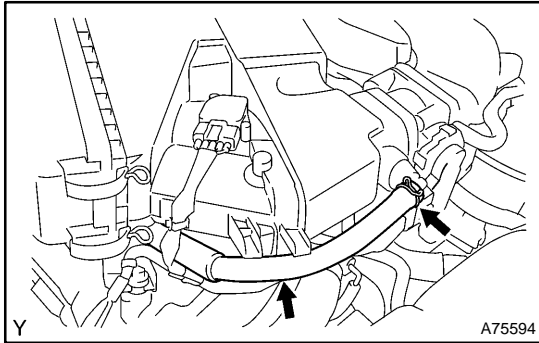

3. DISCONNECT VENTILATION HOSE NO.2
4. REMOVE AIR CLEANER ASSY (See page 10-7)
5. DISCONNECT FUEL PIPE SUB-ASSY NO.2 (See page 11-12)

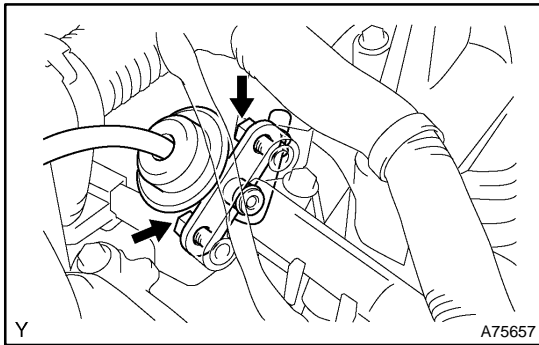

6. REMOVE FUEL PRESSURE REGULATOR ASSY
 - (a) Remove the 2 bolts and fuel pressure regulator.
 - (b) Remove the vacuum hose.

7. INSTALL FUEL PRESSURE REGULATOR ASSY

- (a) Install the vacuum hose.
- (b) Apply a light coat of spindle oil or gasoline to a new O-ring and install it to the fuel pressure regulator.
- (c) Install the fuel pressure regulator with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in.·lbf)

8. CONNECT FUEL PIPE SUB-ASSY NO.2 (See page 11-12)
9. INSTALL AIR CLEANER ASSY (See page 10-7)
10. CONNECT VENTILATION HOSE NO.2
11. INSTALL V-BANK COVER (See page 10-7)
12. CHECK FOR FUEL LEAKS (See page 11-5)