


## OVERHAUL

HINT:


COMPONENTS: See page 55-27

1. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSY (See page 71-12 )
2. REMOVE CONSOLE PANEL SUB-ASSY UPPER (See page 71-12 )
3. REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (See page 71-12 )
4. REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (See page 71-12 )
5. REMOVE CONSOLE BOX ASSY REAR (See page 71-12 )
6. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.2 (See page 71-12 )
7. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY (See page 71-12 )
8. REMOVE GLOVE COMPARTMENT DOOR SUB-ASSY (See page 71-12 )
9. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (See page 71-12 )

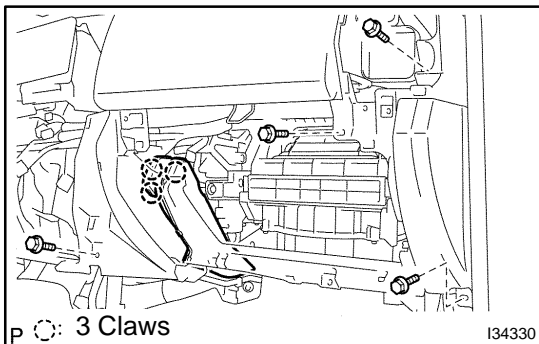


### 10. REMOVE AIR DUCT NO.2

- (a) Remove the 4 bolts and disconnect the Instrument panel safety pad sub-assy.
- (b) Remove the 3 claw fittings and remove the air duct No.2.

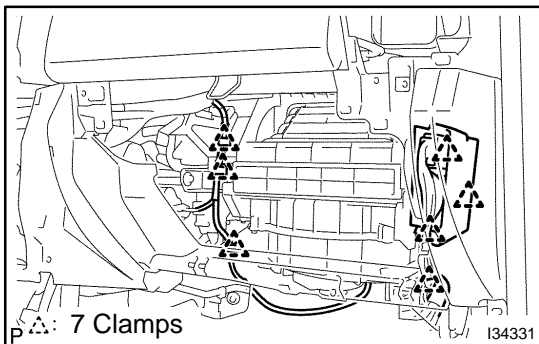


### 11. REMOVE BLOWER ASSY

- (a) Release the 7 clamps and disconnect the connectors.

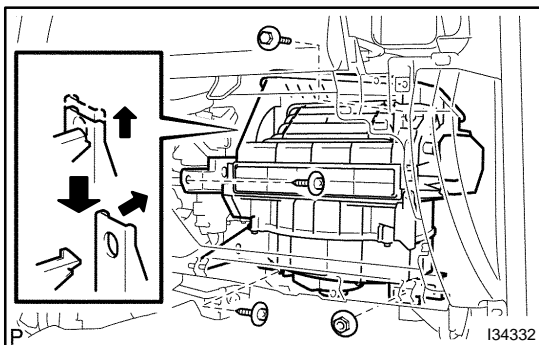


- (b) Remove the bolt and 2 screws and nut.
- (c) Release the claw fitting and remove the blower assy.

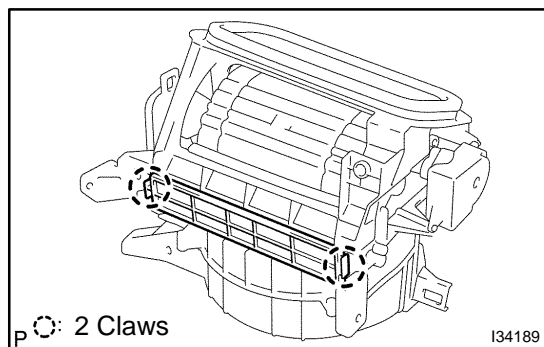

## 12. REMOVE AIR FILTER SUB-ASSY


- (a) Release the 2 claw fittings and remove the air filter sub-assy.

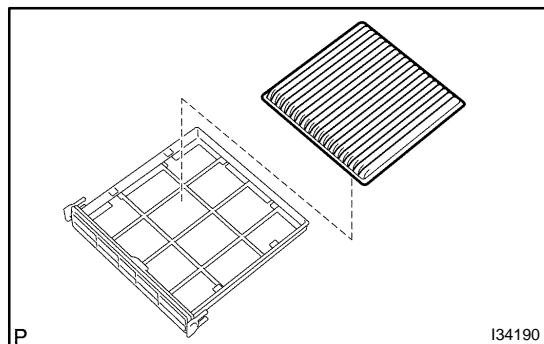

## 13. REMOVE AIR REFINER ELEMENT


- (a) Remove the air refiner element from the air filter cover plate.

## 14. REMOVE AIR FILTER COVER PLATE

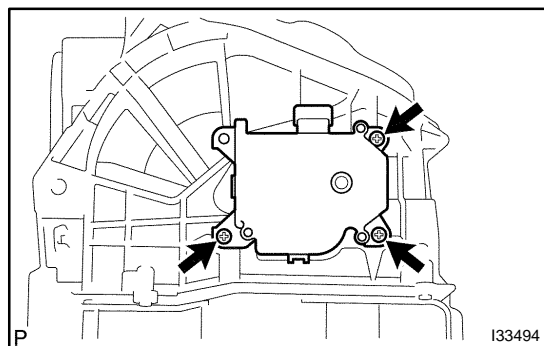


## 15. REMOVE BLOWER DAMPER SERVO SUB-ASSY

- (a) Remove the 3 screws and blower damper servo sub-assy.

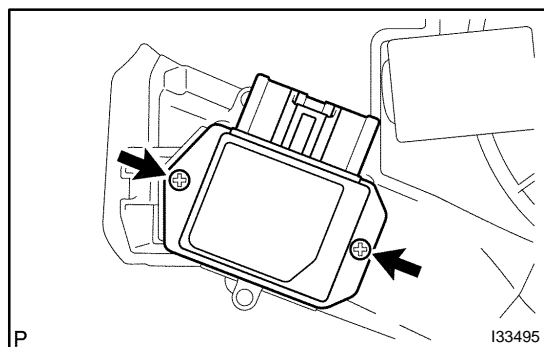


## 16. REMOVE BLOWER MOTOR CONTROL

- (a) Remove the 2 screws and blower motor control.

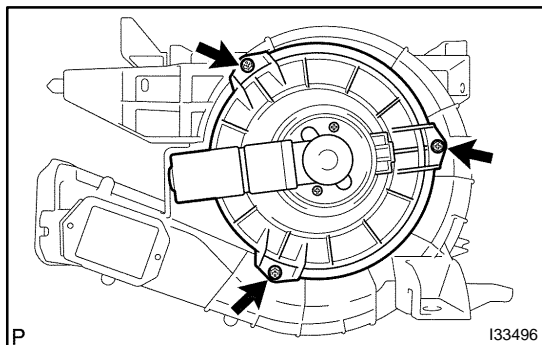**17. REMOVE BLOWER W/FAN MOTOR SUB-ASSY**

- (a) Remove the 3 screws and blower w/ fan motor sub-assy.

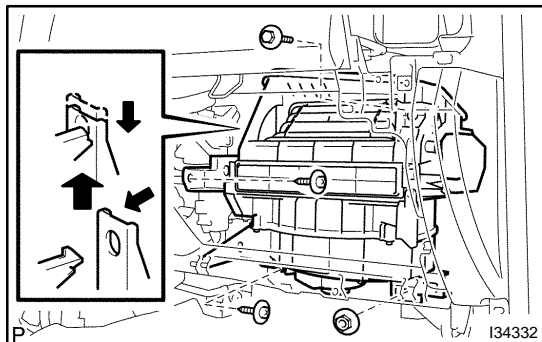
**18. INSTALL BLOWER ASSY**

- (a) Install the blower assy with the claw fitting.  
 (b) Install the bolt, 2 screws and nut.

**Torque:**

**9.8 N·m (100 kgf·cm, 87 in·lbf) (Bolt)**

**5.4 N·m (55 kgf·cm, 48 in·lbf) (Nut)**

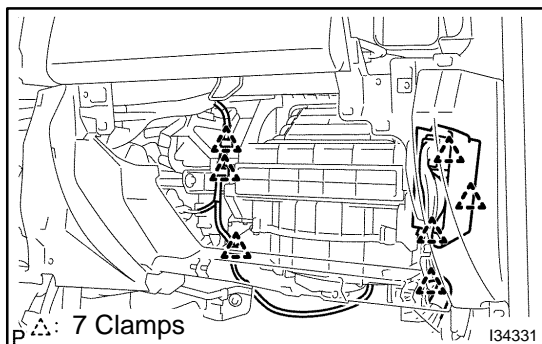

- (c) Install the 7 clamps and connect the connectors.