


FOG LIGHT UNIT LH REPLACEMENT


650MK-01

1. REMOVE FRONT TURN SIGNAL LAMP LH (See page 65-14)

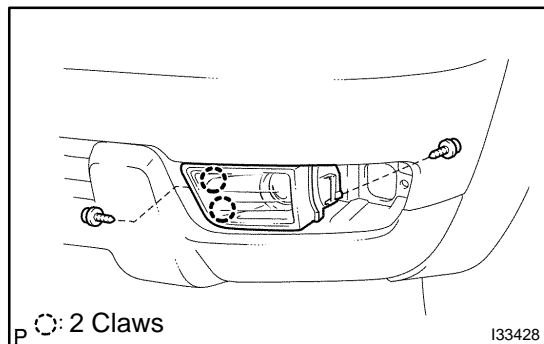

2. REMOVE FRONT FOG LAMP ASSY LH

- (a) Disconnect the connector.
- (b) Remove the 2 screws.
- (c) Release the 2 claw fittings, then remove the fog lamp assy LH.

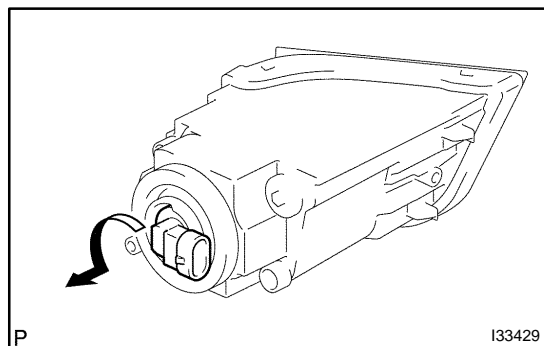

3. REMOVE FOG LAMP BULB

- (a) Remove the fog lamp bulb as shown in the illustration.

4. REMOVE FOG LIGHT UNIT LH

5. PUT VEHICLE THESE CONDITIONS (See page 65-16)

6. ADJUST FOG LIGHT AIM (See page 65-16)

7. CHECK FOG LIGHT AIM (See page 65-16)