



FRONT TURN SIGNAL LAMP LENS LH REPLACEMENT

650MC-01

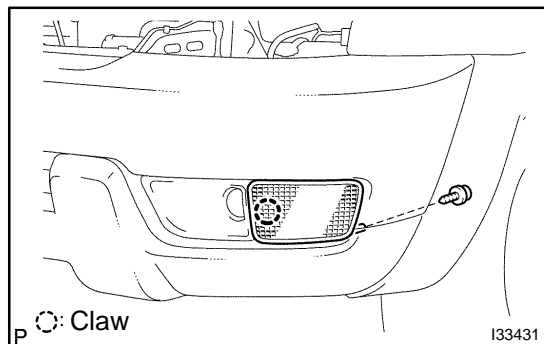

1. REMOVE FRONT TURN SIGNAL LAMP LH

- (a) Disconnect the connector.
- (b) Remove the screw.
- (c) Release the claw fitting, remove the front turn signal lamp assy LH.

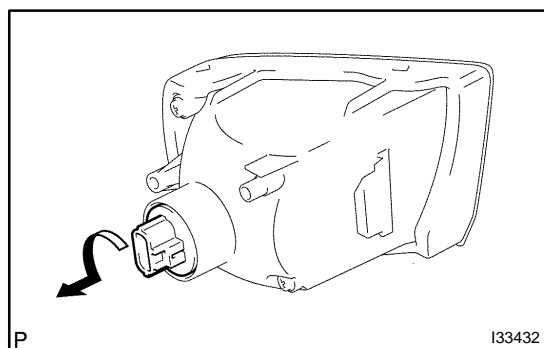

2. REMOVE FRONT TURN SIGNAL LAMP BULB

- (a) Remove the front turn signal lamp plug assy and front turn signal lamp bulb as shown in the illustration.
- (b) Remove the front turn signal lamp bulb from the front turn signal lamp plug assy.

3. REMOVE FRONT TURN SIGNAL LAMP PLUG ASSY

4. REMOVE FRONT TURN SIGNAL LAMP LENS LH