

HEADLAMP PROTECTOR RETAINER UPPER LH

REPLACEMENT


650MB-01

1. REMOVE RADIATOR GRILLE LOWER (See page 76-2)
2. REMOVE FRONT BUMPER FILLER LH (See page 65-8)
3. REMOVE LH HEADLAMP ASSY (See page 65-8)

4. INSTALL HEADLAMP PROTECTOR RETAINER UPPER LH

HINT:


When only the installation part of the headlamp unit assy LH is damaged, it can be repaired inexpensively by using a headlamp protector retainer upper LH. In this case, however, the headlamp unit assy LH itself should not be damaged.

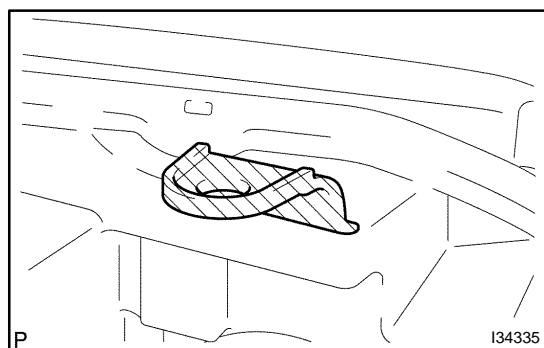

- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part roughly, place the headlamp protector retainer upper LH against the bosses and gradually file any interfering part until the proper condition for installation is made.

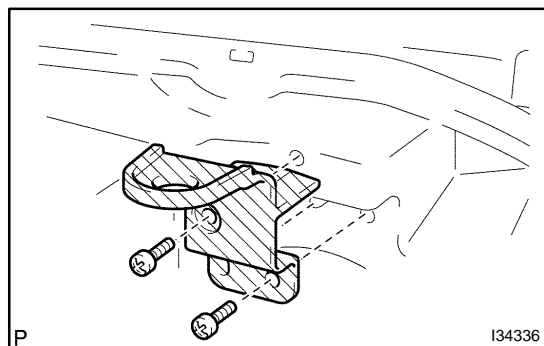

- (b) Install the headlamp protector retainer upper LH with the 2 screws.

5. HEADLIGHT AIM ONLY (See page 65-10)