


REAR COMBINATION LAMP LENS LH REPLACEMENT


650MD-01

1. REMOVE REAR COMBINATION LAMP SERVICE COVER LH

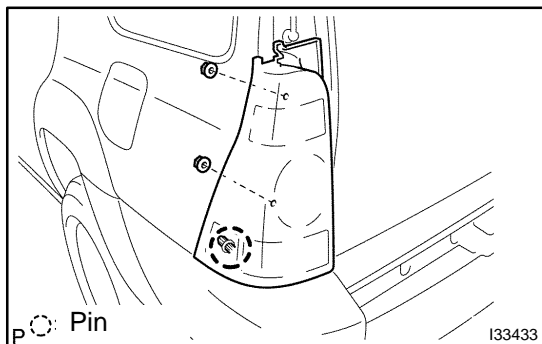

2. REMOVE REAR COMBINATION LAMP ASSY LH

- (a) Disconnect the connector.
- (b) Remove the 2 nuts and rear combination lamp assy LH.

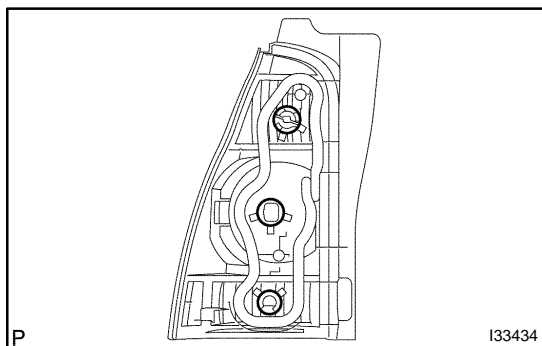

3. REMOVE REAR COMBINATION LAMP BULB

- (a) Remove the 3 rear combination lamp socket and wire sub-assy LH and 3 rear combination lamp bulbs as shown in the illustration.
- (b) Remove the 3 rear combination lamp bulbs from the 3 rear combination lamp socket and wire sub-assy LH.

4. REMOVE REAR COMBINATION LAMP SOCKET AND WIRE SUB-ASSY LH

5. REMOVE REAR COMBINATION LAMP LENS LH