


TOWING CONVERTER RELAY REPLACEMENT

HINT:

COMPONENTS: See page 76-40

1. REMOVE TONNEAU COVER RETRACTOR SUB-ASSY (See page 76-42)
2. REMOVE BACK DOOR WEATHERSTRIP (See page 76-42)
3. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (See page 76-42)
4. REMOVE DECK BOARD SUB-ASSY (See page 76-42)
5. REMOVE DECK BOARD ASSY (See page 76-42)
6. REMOVE DECK FLOOR BOX RH (See page 76-42)
7. REMOVE DECK FLOOR BOX LH (See page 76-42)
8. REMOVE DECK TRIM COVER REAR (See page 76-42)
9. REMOVE DECK TRIM SIDE BOARD UPR LH (See page 76-42)
10. REMOVE PANEL ASSY, DECK TRIM SIDE, LH (See page 76-42)
11. REMOVE ROOF SIDE GARNISH ASSY INNER LH (See page 76-42)

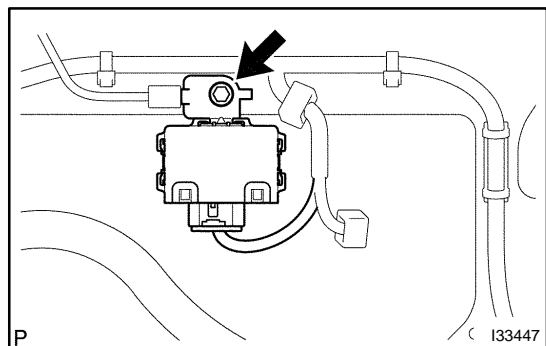

12. REMOVE TOWING CONVERTER RELAY
 - (a) Disconnect the connector.
 - (b) Remove the bolt and towing converter relay.