




## REPLACEMENT

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY (See page 71-12 )
2. REMOVE AIR CONDITIONING RADIATOR ASSY (See page 55-13 )
3. REMOVE AIR BAG SENSOR ASSY CENTER (See page 32-54 )
4. REMOVE YAWRATE SENSOR (See page 60-47 )
5. REMOVE FLOOR SHIFT ASSY (See page 40-35 )
6. REMOVE PARKING BRAKE CONTROL PEDAL ASSY (See page 33-4 )

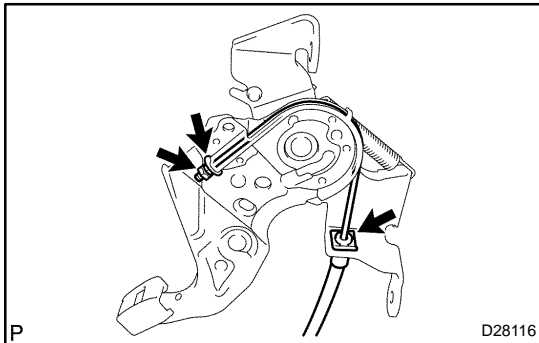


### 7. REMOVE PARKING BRAKE CABLE ASSY NO.1

- (a) Remove the look nut, adjusting nut, clip and disconnect the parking brake cable assy No.1 from the parking brake control pedal assy.
- (b) Remove the 2 nuts and 3 bolts from the parking brake cable assy No.1.

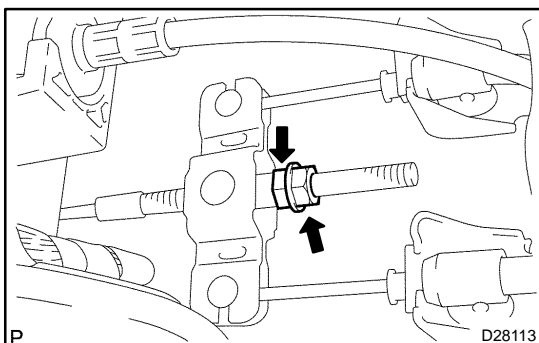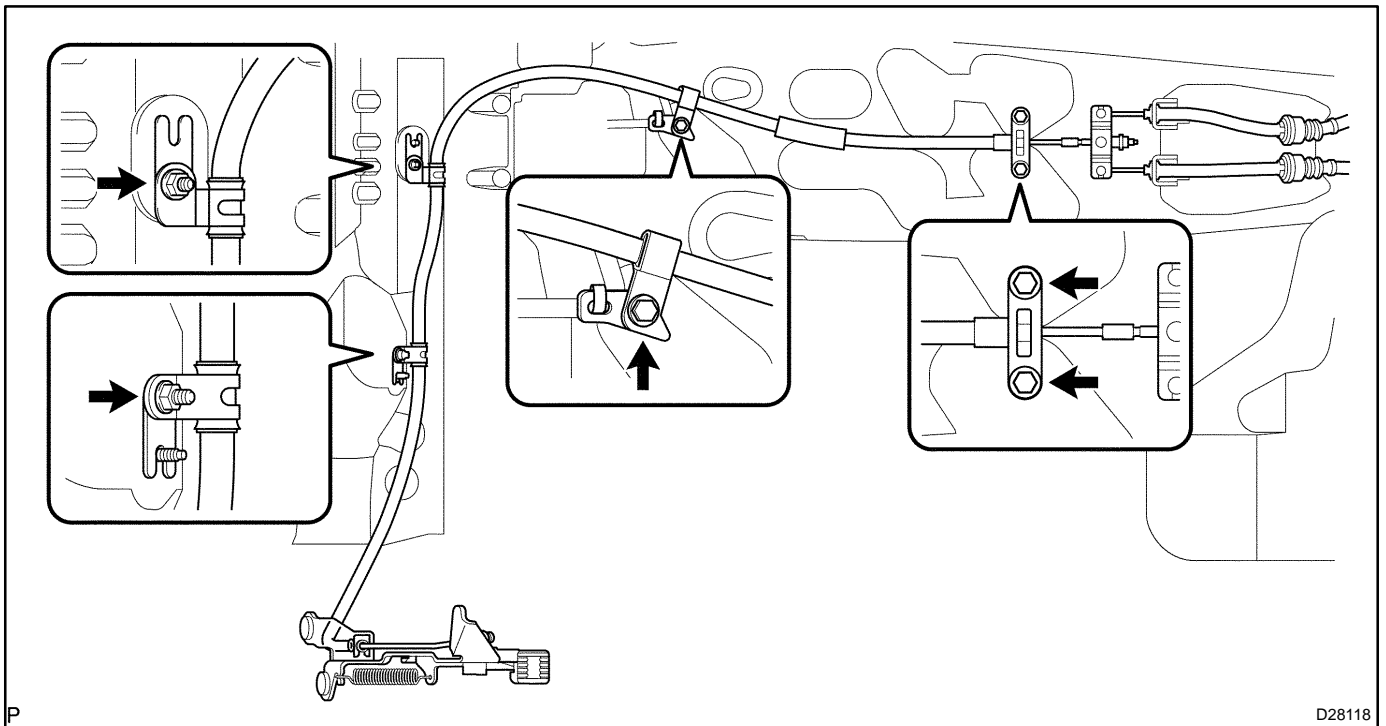

- (c) Remove the lock nut, adjusting nut and parking brake cable assy No.1 from the parking brake equalizer.

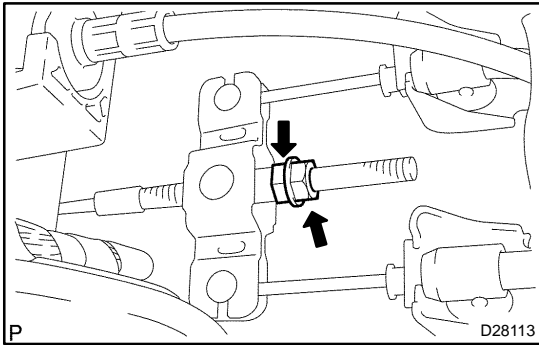

# 8. INSTALL PARKING BRAKE CABLE ASSY NO.1



- (a) Install the parking brake cable assy No.1, temporary tighten the adjusting nut and lock nut.

- (b) Install the parking brake cable assy No.1 with the 2 nuts and 3 bolts.

**Torque:**

**NUT (A): 6.0 N·m (61 kgf·cm, 53 in·lbf)**

**BOLT (B): 13 N·m (127 kgf·cm, 9 ft·lbf)**

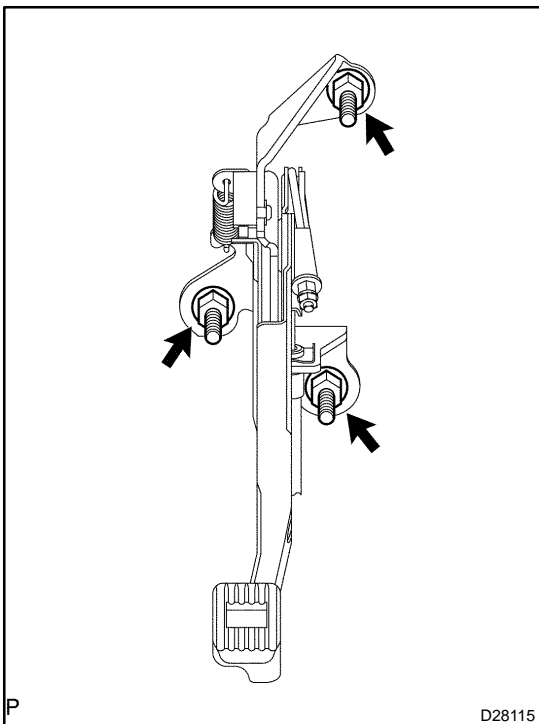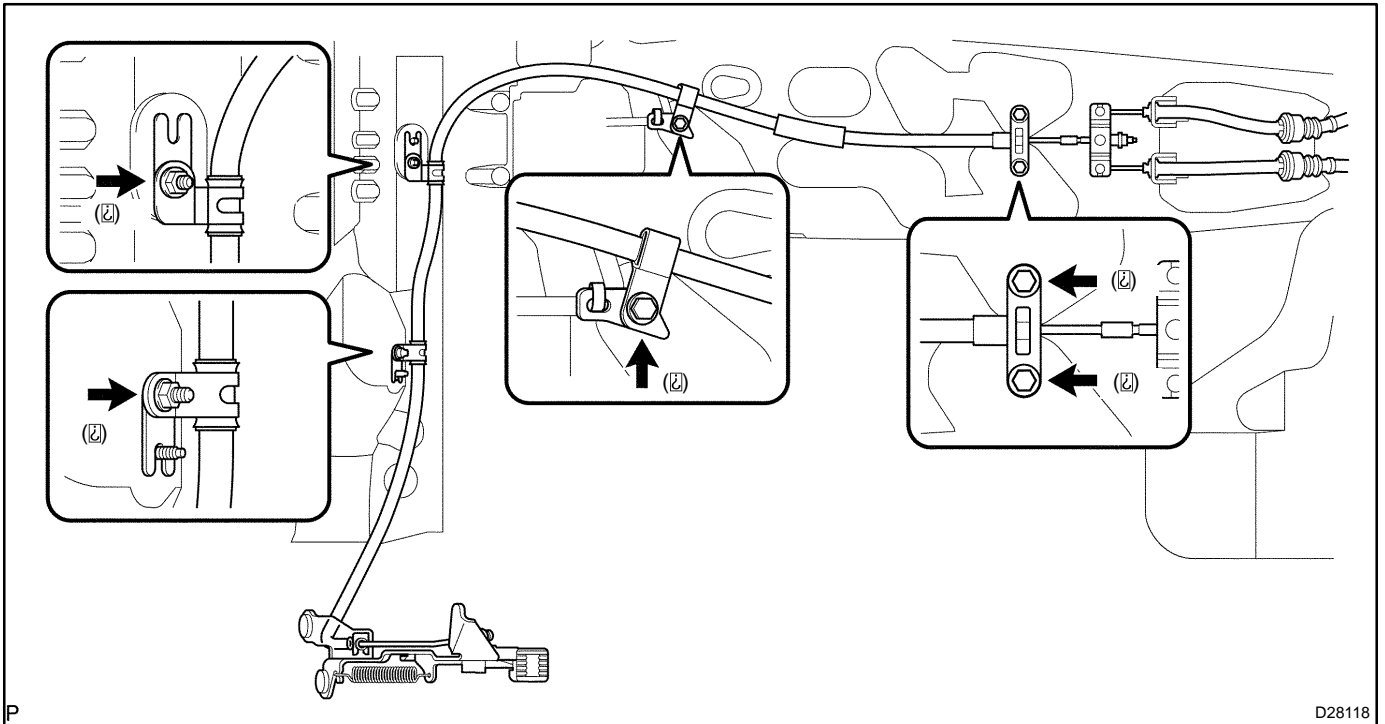

- (c) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut to the parking brake control pedal assy.

**Torque: 13 N·m (127 kgf·cm, 9 ft·lbf)**

9. INSTALL PARKING BRAKE CONTROL PEDAL ASSY (See page [33-4](#) )
10. INSTALL FLOOR SHIFT ASSY (See page [40-35](#) )
11. INSTALL AIR BAG SENSOR ASSY CENTER (See page [60-47](#) )
12. INSTALL YAWRATE SENSOR (See page [32-54](#) )
13. INSTALL AIR CONDITIONING RADIATOR ASSY (See page [55-13](#) )
14. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY (See page [71-12](#) )
15. INSPECT PARKING BRAKE PEDAL TRAVEL (See page [33-2](#) )
16. ADJUST PARKING BRAKE PEDAL TRAVEL (See page [33-2](#) )
17. INSPECT SRS WARNING LIGHT (See page [05-614](#) )