

## REPLACEMENT

### 1. REMOVE REAR WHEEL

### 2. SEPARATE REAR DISC BRAKE CALIPER ASSY LH

- (a) Remove the 2 bolts and separate the rear disc brake caliper assy LH.

HINT:

Do not disconnect the flexible hose from the brake caliper assy LH.

### 3. REMOVE REAR DISC (See page 33-15 )

### 4. REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33-15 )

### 5. REMOVE PARKING BRAKE SHOE STRUT COMPRESSION SPRING (See page 33-15 )

### 6. REMOVE PARKING BRAKE SHOE STRUT LH (See page 33-15 )

### 7. REMOVE PARKING BRAKE SHOE (See page 33-15 )


### 8. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSY (See page 71-12 )

### 9. REMOVE CONSOLE PANEL SUB-ASSY UPPER (See page 71-12 )

### 10. REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (See page 71-12 )


### 11. REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (See page 71-12 )


### 12. REMOVE CONSOLE BOX ASSY REAR (See page 71-12 )

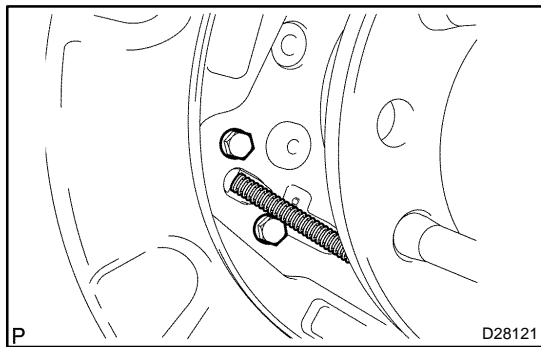


### 13. REMOVE PARKING BRAKE CABLE ASSY NO.3

- (a) Remove the 2 bolts and disconnect the parking brake cable assy No.3 from the backing plate.
- (b) Remove the 4 bolts from the parking cable assy No.3.

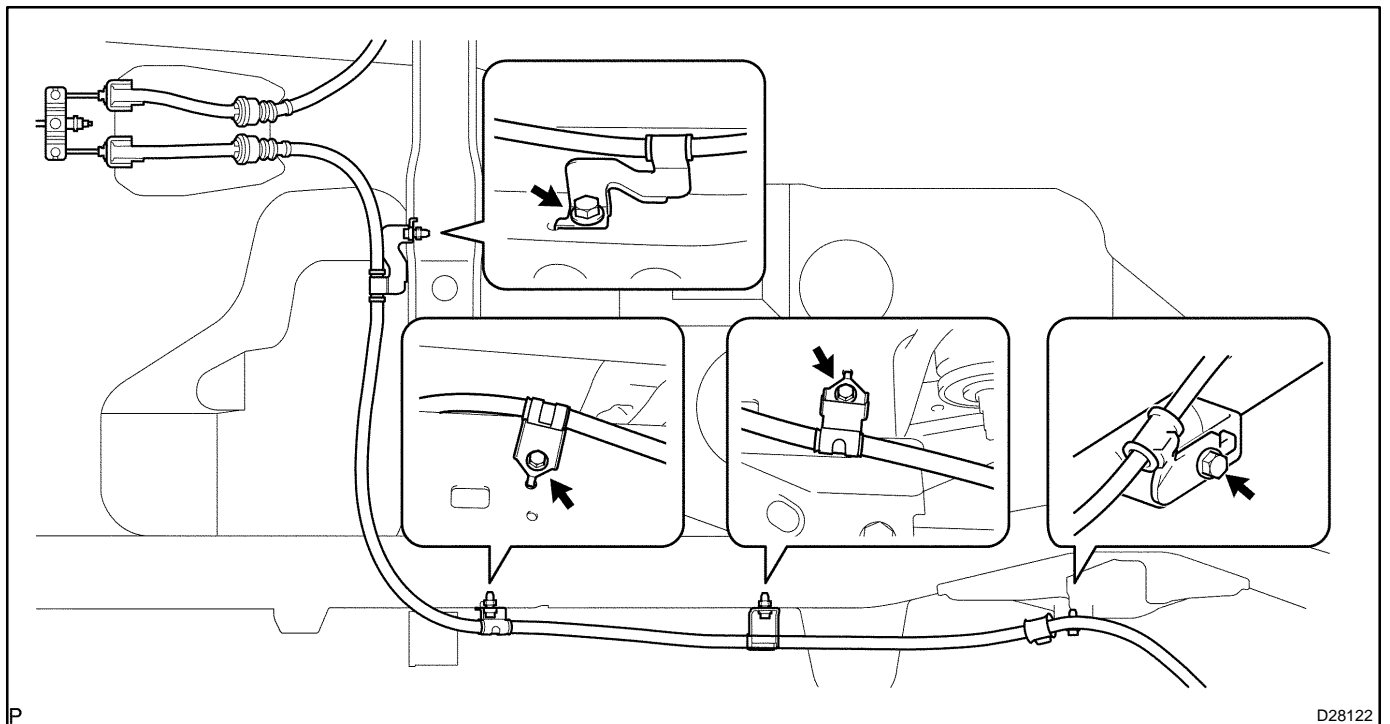


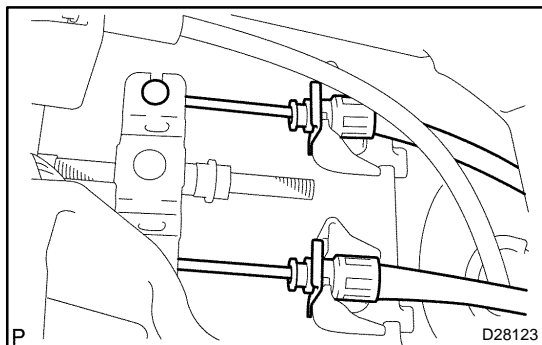


- (c) Remove the clip and disconnect the parking brake cable assy No.3 from the parking brake equalizer.

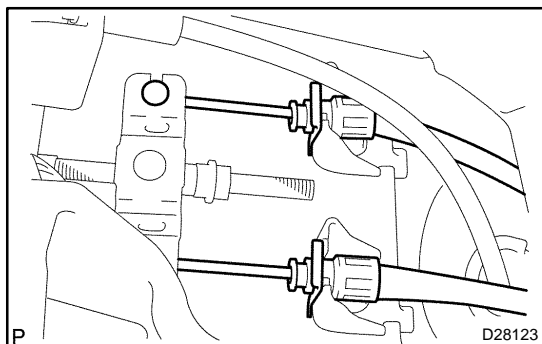

#### 14. INSTALL PARKING BRAKE CABLE ASSY NO.3

- (a) Install the parking brake cable assy No.3 with the clip to the parking brake equalizer.  
 (b) Install the parking brake cable assy No.3 with the 4 bolts.  
**Torque: 13 N·m (127 kgf·cm, 9 ft·lbf)**

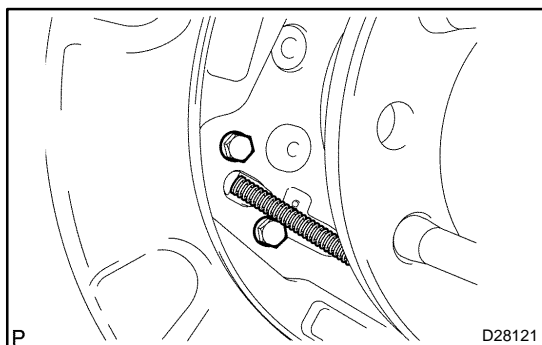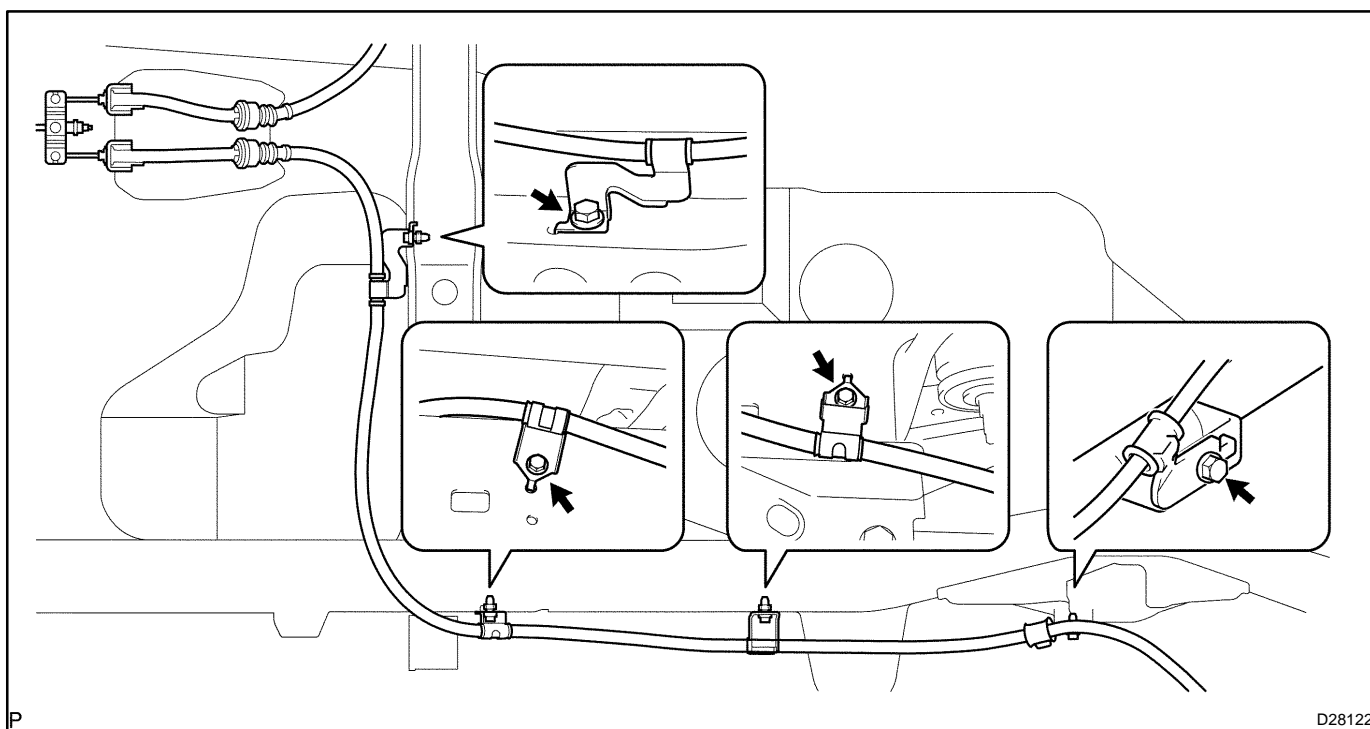

- (c) Install the parking brake cable assy No.3 with the 2 bolts to the backing plate.  
**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

15. APPLY HIGH TEMPERATURE GREASE (See page 33-15 )
16. INSTALL PARKING BRAKE SHOE (See page 33-15 )
17. INSTALL PARKING BRAKE SHOE STRUT LH (See page 33-15 )
18. INSTALL PARKING BRAKE SHOE STRUT COMPRESSION SPRING (See page 33-15 )
19. INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33-15 )
20. CHECK PARKING BRAKE INSTALLATION (See page 33-15 )
21. INSTALL REAR DISC
22. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33-15 )
23. CONNECT REAR DISC BRAKE CALIPER ASSY LH
  - (a) Install the rear disc brake caliper assy LH with the 2 bolts.  
Torque: 105 N·m (1,071 kgf·cm, 77 ft·lbf)
24. INSTALL REAR WHEEL  
Torque: 112 N·m (1,137 kgf·cm, 83 ft·lbf)
25. INSTALL CONSOLE BOX ASSY REAR (See page 71-12 )
26. INSTALL CONSOLE PANEL SUB-ASSY UPPER (See page 71-12 )
27. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSY (See page 71-12 )
28. INSPECT PARKING BRAKE PEDAL TRAVEL (See page 33-2 )
29. ADJUST PARKING BRAKE PEDAL TRAVEL (See page 33-2 )