



## OVERHAUL

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY (See page 71-12 )
2. REMOVE AIR CONDITIONING RADIATOR ASSY (See page 55-13 )
3. REMOVE YAWRATE SENSOR (See page 32-54 )
4. REMOVE AIR BAG SENSOR ASSY CENTER (See page 60-47 )
5. REMOVE FLOOR SHIFT ASSY (See page 40-35 )

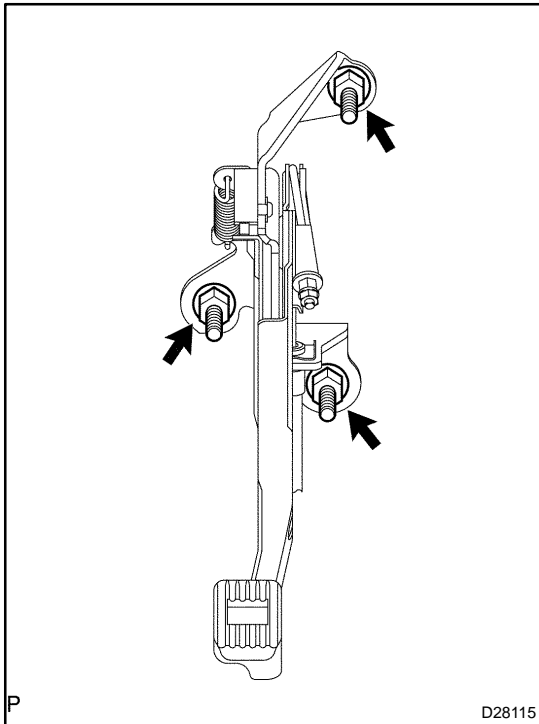

### 6. REMOVE PARKING BRAKE CONTROL PEDAL ASSY

- (a) Release the parking brake pedal.
- (b) Disconnect the parking brake switch connector.
- (c) Remove the 3 nuts and parking brake control pedal assy.

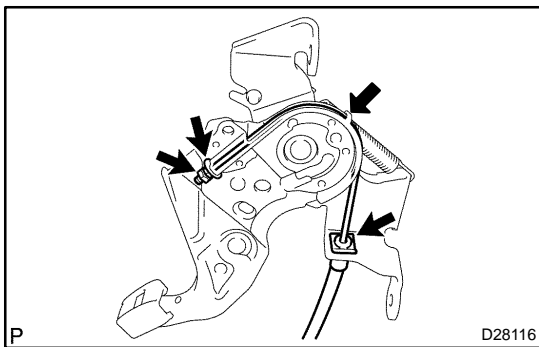

### 7. REMOVE PARKING BRAKE CABLE ASSY NO.1

- (a) Open the claw.
- (b) Remove the lock nut, adjusting nut, clip and parking brake assy No.1.

### 8. REMOVE PARKING BRAKE SWITCH ASSY


- (a) Remove the screw and parking brake switch assy.

### 9. REMOVE PARKING PEDAL PAD

### 10. INSTALL PARKING PEDAL PAD

### 11. INSTALL PARKING BRAKE SWITCH ASSY


- (a) Install the parking brake switch assy with the screw.

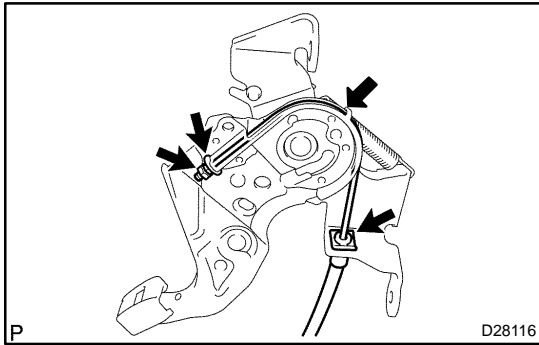**12. INSTALL PARKING BRAKE CABLE ASSY NO.1**

- (a) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut.

**Torque: 13 N·m (127 kgf·cm, 9 ft·lbf)**

- (b) Bend the claw.

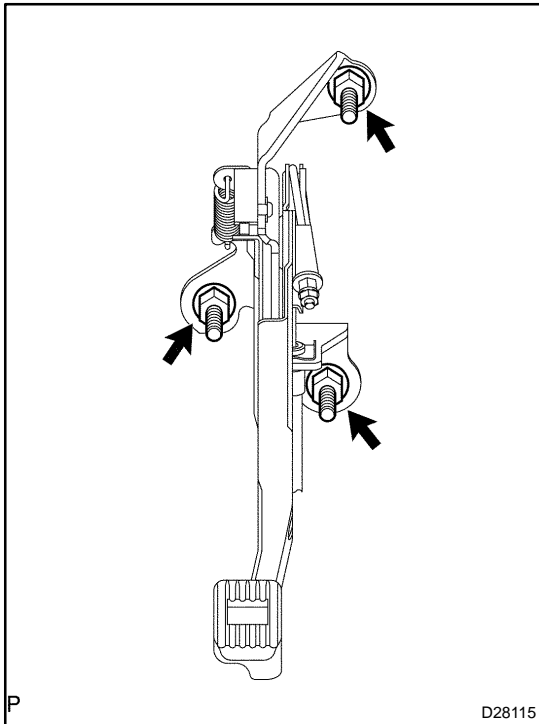**13. INSTALL PARKING BRAKE CONTROL PEDAL ASSY**

- (a) Install the parking brake control pedal assy with the 3 nuts.

**Torque: 13 N·m (127 kgf·cm, 9 ft·lbf)**

- (b) Connect the parking brake switch connector.

14. **INSTALL FLOOR SHIFT ASSY** (See page [40-35](#) )
15. **INSTALL AIR BAG SENSOR ASSY CENTER** (See page [60-47](#) )
16. **INSTALL YAWRATE SENSOR** (See page [32-54](#) )
17. **INSTALL AIR CONDITIONING RADIATOR ASSY** (See page [55-13](#) )
18. **INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY** (See page [71-12](#) )
19. **INSPECT PARKING BRAKE PEDAL TRAVEL** (See page [33-2](#) )
20. **ADJUST PARKING BRAKE PEDAL TRAVEL** (See page [33-2](#) )
21. **INSPECT SRS WARNING LIGHT** (See page [05-614](#) )