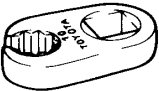













DRIVE SHAFT / PROPELLER SHAFT






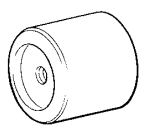







PREPARATION













021WL-01

SST


	09023-00100	Union Nut Wrench 10 mm	FRONT AXLE HUB SUB-ASSY LH FRONT AXLE LH HUB BOLT REAR AXLE SHAFT LH
	09240-00020	Wire Gauge Set	FRONT DRIVE SHAFT ASSY LH(4WD)
	09308-00010	Oil Seal Puller	FRONT AXLE HUB SUB-ASSY LH REAR AXLE SHAFT LH
	09318-12010	Transfer Bearing Adjusting Nut Wrench	FRONT AXLE HUB SUB-ASSY LH
	09325-40010	Transmission Oil Plug	PROPELLER SHAFT ASSY
	09332-25010	Propeller Shaft Center Bearing Replacer	PROPELLER SHAFT ASSY PROPELLER SHAFT ASSY FRONT(4WD)
	09520-01010	Drive Shaft Remover Attachment	FRONT DRIVE SHAFT ASSY LH(4WD)
	09520-24010	Differential Side Gear Shaft Puller	FRONT DRIVE SHAFT ASSY LH(4WD)
	(09520-32040)	Shocker Set	FRONT DRIVE SHAFT ASSY LH(4WD)
	09521-24010	Rear Axle Shaft Puller	FRONT DRIVE SHAFT ASSY LH(4WD)
	09521-2501 1	Rear Axle Shaft Puller	REAR AXLE SHAFT LH
	09521-25021	Rear Axle Shaft Puller Attachment	REAR AXLE SHAFT LH

PREPARATION - DRIVE SHAFT / PROPELLER SHAFT

	09527-1001 1	Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT ASSY LH(4WD)
	09527-1701 1	Rear Axle Shaft Bearing Remover	FRONT AXLE HUB SUB-ASSY LH
	09611-12010	Tie Rod End Puller	FRONT AXLE LH HUB BOLT
	09628-6201 1	Boll Joint Puller	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT ASSY LH(4WD)
	09636-20010	Upper Ball Joint Dust Cover Replacer	PROPELLER SHAFT ASSY PROPELLER SHAFT ASSY FRONT(4WD)
	09649-17010	Steering Knuckle Tool	FRONT AXLE HUB SUB-ASSY LH
	09650-1701 1	Hub Bolt Remover	REAR AXLE SHAFT LH REAR AXLE LH HUB BOLT
	09710-30021	Suspension Bushing Tool Set	FRONT AXLE HUB SUB-ASSY LH
	(09710-03051)	Bushing Replacer	FRONT AXLE HUB SUB-ASSY LH
	09930-00010	Drive Shaft Nut Chisel	FRONT AXLE HUB SUB-ASSY LH
	09950-00020	Bearing Remover	FRONT DRIVE SHAFT ASSY LH(4WD)
	09950-4001 1	Puller B Set	FRONT AXLE HUB SUB-ASSY LH
	(09951-04020)	Hanger 200	FRONT AXLE HUB SUB-ASSY LH

	(09952-04010) Slide Arm	FRONT AXLE HUB SUB-ASSY LH
	(09953-04020) Center Bolt 150	FRONT AXLE HUB SUB-ASSY LH
	(09954-04010) Arm 25	FRONT AXLE HUB SUB-ASSY LH
	(09955-04061) Claw No.6	FRONT AXLE HUB SUB-ASSY LH
	(09957-04010) Attachment	FRONT AXLE HUB SUB-ASSY LH
	(09958-0401 1) Holder	FRONT AXLE HUB SUB-ASSY LH
	09950-60020 Replacer Set No.2	REAR AXLE SHAFT LH
	(09951-00770) Replacer 77	REAR AXLE SHAFT LH
	09950-70010 Handle Set	FRONT AXLE HUB SUB-ASSY LH REAR AXLE SHAFT LH
	(09951-07100) Handle 100	FRONT AXLE HUB SUB-ASSY LH
	(09951-07150) Handle 150	REAR AXLE SHAFT LH
	09951-01000 Replacer 100	FRONT AXLE HUB SUB-ASSY LH

Recommended Tools

	09905-00012 Snap Ring No.1 Expander	REAR AXLE SHAFT LH FRONT DRIVE SHAFT ASSY LH(4WD)
---	-------------------------------------	---

Equipment

Torque wrench	
Dial indicator with magnetic base	
Spring tension gauge	