




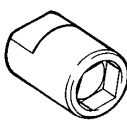








STARTING & CHARGING








PREPARATION

SST





0228C-01

	09285-76010	Injection Pump Camshaft Bearing Cone Replacer	GENERATOR ASSY(1GR-FE)
	09820-00021	Alternator Rear Bearing Puller	GENERATOR ASSY(1GR-FE)
	09820-00031	Alternator Rotor Rear Bearing Replacer	GENERATOR ASSY(1GR-FE)
	09820-63010	Alternator Pulley Set Nut Wrench Set	GENERATOR ASSY(1GR-FE)
	(09820-06010)	Alternator Rotor Shaft Wrench	GENERATOR ASSY(1GR-FE)
	(09820-06020)	Alternator Pulley Set Nut 22 mm Wrench	GENERATOR ASSY(1GR-FE)
	09950-4001 1	Puller B Set	GENERATOR ASSY(1GR-FE)
	(09951-04020)	Hanger 200	GENERATOR ASSY(1GR-FE)
	(09952-04010)	Slide Arm	GENERATOR ASSY(1GR-FE)
	(09953-04020)	Center Bolt 150	GENERATOR ASSY(1GR-FE)
	(09954-04010)	Arm 25	GENERATOR ASSY(1GR-FE)
	(09955-04071)	Claw No.7	GENERATOR ASSY(1GR-FE)

PREPARATION - STARTING & CHARGING

	(09957-04010) Attachment	GENERATOR ASSY(1GR-FE)
	(09958-0401 1) Holder	GENERATOR ASSY(1GR-FE)
	09950-60010 Replacer Set	GENERATOR ASSY(1GR-FE)
	(09951-00250) Replacer 25	GENERATOR ASSY(1GR-FE)
	(09951-00470) Replacer 47	GENERATOR ASSY(1GR-FE)
	09950-70010 Handle Set	GENERATOR ASSY(1GR-FE)
	(09951-07100) Handle 100	GENERATOR ASSY(1GR-FE)

Recommended Tools

	09082-00040 TOYOTA Electrical Tester	GENERATOR ASSY(1GR-FE)
	(09083-00150) Test Lead Set	GENERATOR ASSY(1GR-FE)
	09904-00010 Expander Set	STARTER ASSY(1.6KW)(1GR-FE)
	(09904-00050) No. 4 Claw	STARTER ASSY(1.6KW)(1GR-FE)

Equipment

Ammeter (A)	
Dial indicator with magnetic base	
Ohmmeter	
Pull scale	
Service Wire Harness	
Torque wrench	

V-block	
Vernier calipers	