


REPLACEMENT

1. **PRECAUTION**(See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**(See page 60-1)
3. **REMOVE RADIATOR GRILLE**(See page 76-2)

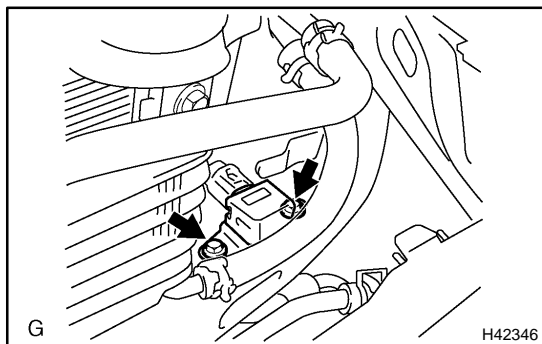

4. **REMOVE AIR BAG FRONT RH SENSOR**
 - (a) Remove the 2 bolts and airbag front RH sensor.
 - (b) Disconnect the connector from the airbag front RH sensor.

5. **INSPECT AIR BAG FRONT RH SENSOR**(See page 60-8)
6. **INSTALL AIR BAG FRONT RH SENSOR**
 - (a) Check that the ignition switch is OFF.
 - (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Install the airbag front RH sensor with the 2 bolts.
Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)
- (d) Connect the connector to the airbag front RH sensor.
- (e) Check that no play is identified.
7. **INSPECT SRS WARNING LIGHT**(See page 05-614)