


REPLACEMENT

1. PRECAUTION(See page 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60-1)
3. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSY(See page 71-12)
4. REMOVE CONSOLE PANEL SUB-ASSY UPPER(See page 71-12)
5. REMOVE CONSOLE UPPER PANEL GARNISH NO.1(See page 71-12)
6. REMOVE CONSOLE UPPER PANEL GARNISH NO.2(See page 71-12)
7. REMOVE CONSOLE BOX ASSY REAR(See page 71-12)
8. REMOVE CONSOLE BOX MOUNTING BRACKET FRONT(See page 71-12)
9. REMOVE CONSOLE BOX DUCT NO.1(See page 71-12)

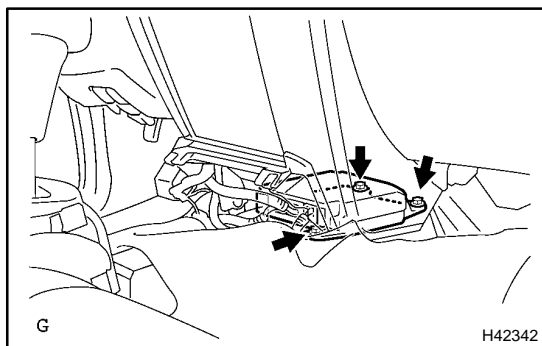

10. REMOVE AIR BAG SENSOR ASSY CENTER

- (a) Disconnect the 3 connectors from the air bag sensor assy center.
- (b) Remove the 3 bolts and airbag sensor assy center.

11. INSPECT AIR BAG SENSOR ASSY CENTER(See page 60-8)

12. INSTALL AIR BAG SENSOR ASSY CENTER

- (a) Check that the ignition switch turn OFF.
- (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Temporarily install the air bag sensor assy center with the 3 bolts.
- (d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (e) Connect the connector to the air bag sensor assy center.
- (f) Check that no play is identified.
- (g) Check that the water-proof sheet is properly set.

13. INSPECT SRS WARNING LIGHT(See page 05-614)