


## AIR BAG SENSOR FRONT LH REPLACEMENT

600FU-01

HINT:

COMPONENTS: See page 60-48

1. **PRECAUTION**(See page 60-1 )
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**(See page 60-1 )
3. **REMOVE RADIATOR GRILLE**(See page 76-2 )

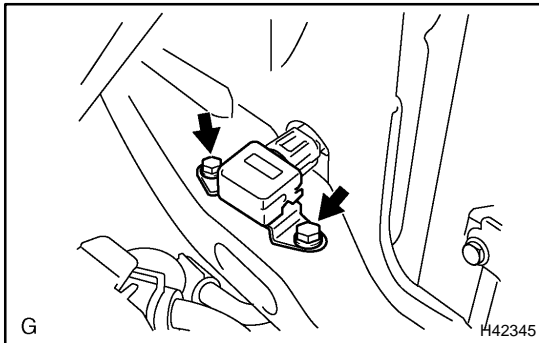

4. **REMOVE AIR BAG SENSOR FRONT LH**
  - (a) Remove the 2 bolts and airbag sensor front LH.
  - (b) Disconnect the connector from the airbag sensor front LH.

5. **INSPECT AIR BAG SENSOR FRONT LH**(See page 60-8 )
6. **INSTALL AIR BAG SENSOR FRONT LH**

- (a) Check that the ignition switch is OFF.
- (b) Check that the battery negative terminal is disconnected.

**NOTICE:****Do not start the operation for 90 seconds after removing the terminal.**

- (c) Install the front airbag sensor LH with the 2 bolts.  
**Torque: 7.5 N·m (76 kgf·cm, 66 in.·lbf)**
  - (d) Connect the connector to the airbag sensor front LH.
  - (e) Check that no play is identified.
7. **INSPECT SRS WARNING LIGHT**(See page 05-614 )